

For online reference and to download the manuals for your machines , go to:-

<https://www.e-technical-information.com>

 
or, scan the QR Code below



# OPERATOR'S MANUAL

HT23RTJ O - HT23RTJ O SW - HT67RTJ O - HT23RTJ PRO -  
HT23RTJ PRO SW - HT67RTJ PRO

Color screen display





## A-Foreword

1	Foreword.....	3
2	Responsibilities.....	4
2.1	Owner's responsibility.....	4
2.2	Employer's responsibility.....	4
2.3	Trainer's responsibility.....	4
2.4	Operator's responsibility.....	4
3	Safety.....	5
3.1	Safety instructions.....	5
4	Safety inquiries.....	11
5	Incident notification.....	12
6	Compliance.....	13
6.1	Product modification.....	13
6.2	Product specifications.....	13
6.3	Change of Ownership Notification.....	13
6.4	Declaration of conformity.....	14

## B-Familiarization

1	General safety.....	3
1.1	Intended use.....	3
1.2	Decal content.....	3
1.3	Level of severity.....	4
1.4	Symbols legend and definitions.....	5
1.5	Symbols and colors.....	7
2	Models description.....	8
3	Primary machine components.....	9
3.1	Layout.....	9
3.2	Ground control box - Service / Emergency station.....	11
3.3	Platform control box - Main station.....	51
3.4	DPF (Diesel Particle Filter) (If equipped) .....	56
4	Performance Specifications.....	60
4.1	Technical characteristics.....	60
4.2	Engine specifications.....	66
4.3	Working area / Range of motion.....	69
5	Decals and markings locations.....	70

## C-Pre-operation inspection

1	Recommendations.....	3
2	Working area assessment.....	4
3	Inspection and Functional test.....	5
3.1	Daily inspection.....	5
4	Safety functional checks.....	10
4.1	Emergency Stop button check.....	10
4.2	Activation of controls.....	11
4.3	Fault detector.....	11

## Contents

4.4	Automatic engine cut-out.....	12
4.5	Overload sensing system.....	12
4.6	Oscillating axles (If equipped) .....	12
4.7	Slope warning device.....	12
4.8	Travel speed limitation.....	13
4.9	On-board electronics.....	13
4.10	Load selection system (if fitted).....	13
4.11	Braking test.....	14
4.12	Overload test.....	14

## D-Operation instructions

1	Operation.....	3
1.1	Introduction.....	3
1.2	Major description.....	3
1.3	Operation from the ground control box (Service / Emergency station) .....	3
1.4	Operation from the platform control box (Main station).....	4
2	Ground control box - Service / Emergency station.....	6
2.1	To start and stop the machine-Diesel engine.....	6
2.2	To start and stop the machine - Petrol / gas (Propane) Engine.....	6
2.3	Movement control.....	7
2.4	Additional controls.....	8
3	Platform control box - Main station.....	9
3.1	To start and stop the machine.....	9
3.2	Drive and steer control.....	9
3.3	Movement control.....	10
3.4	Additional controls.....	12
4	Rescue and emergency procedures.....	13
4.1	In case of power loss.....	13
4.2	To rescue operator in platform.....	13
4.3	Operation of overriding system from ground control box.....	14
4.4	No power available.....	14
5	Transportation.....	15
5.1	Transport configuration.....	15
5.2	Machine stowage for transport- HT23RTJ O - HT23RTJ O SW - HT67RTJ O HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO.....	16
5.3	Unloading.....	17
5.4	Towing.....	17
5.5	Storage.....	18
5.6	Lifting operation.....	19
6	Cold Weather Recommendations.....	22
6.1	Engine oil.....	22
6.2	Hydraulic oil.....	23

## E-General Specifications

1	Machine dimensions.....	3
2	Major component masses.....	5
3	Acoustics and vibrations.....	6

## Contents

<b>4</b>	<b>Wheel/Tire assembly.....</b>	<b>7</b>
4.1	Technical specifications.....	7
4.2	Inspection and maintenance.....	8

## F-Maintenance

<b>1</b>	<b>General.....</b>	<b>3</b>
<b>2</b>	<b>Maintenance Schedule.....</b>	<b>4</b>
<b>3</b>	<b>Inspection program.....</b>	<b>5</b>
3.1	General program.....	5
3.2	Daily inspection.....	5
3.3	Periodic inspection.....	5
3.4	Reinforced inspection.....	6
3.5	Major inspection.....	6
<b>4</b>	<b>Repairs and adjustments.....</b>	<b>7</b>

## G-Options

<b>1</b>	<b>Compatibility.....</b>	<b>3</b>
<b>2</b>	<b>Advanced Access Management - Access control and usage restriction.....</b>	<b>4</b>
2.1	Description.....	4
2.2	Additional functions.....	5
2.3	SUPER USER status.....	6
2.4	Code for removing restrictions.....	6
2.5	Operation.....	7
<b>3</b>	<b>Dual load.....</b>	<b>18</b>
<b>4</b>	<b>Platform.....</b>	<b>19</b>
4.1	Swing gate.....	21
<b>5</b>	<b>On-board generator.....</b>	<b>22</b>
5.1	Description.....	22
5.2	Characteristics.....	22
5.3	Safety precautions.....	22
5.4	Pre-operation inspection.....	22
5.5	Operation.....	23
<b>6</b>	<b>Glazier's kit.....</b>	<b>24</b>
6.1	Description.....	24
6.2	Characteristics.....	24
6.3	Safety precautions.....	24
6.4	Pre-operation inspection.....	24
6.5	Operation.....	24
6.6	Assembly/Dis-assembly.....	26
6.7	Specific decals .....	27
<b>7</b>	<b>Welder's kit.....</b>	<b>28</b>
7.1	Description.....	28
7.2	Characteristics.....	28
7.3	Safety precautions.....	28
7.4	Pre-operation inspection.....	28
7.5	Operation.....	28
7.6	Assembly-Dis-assembly.....	29

## Contents

7.7	Specific decals .....	30
8	Plumber's kit.....	31
8.1	Description.....	31
8.2	Characteristics.....	31
8.3	Safety precautions.....	31
8.4	Pre-operation inspection.....	31
8.5	Operation.....	31
8.6	Assembly-Dis-assembly.....	32
8.7	Specific decals, optional.....	33
9	Activ' Shield Bar - Secondary crush risk reduction system (If fitted) .....	34
9.1	Description.....	34
9.2	Characteristics.....	34
9.3	Safety precautions.....	35
9.4	Pre-operation inspection.....	36
9.5	Operation.....	36
9.6	Specific decals .....	36

## H-Other information

1	Conditions of warranty.....	3
2	Subsidiary contact information.....	4
2.1	California warning.....	5

## I-Records

1	Intervention register.....	3
---	----------------------------	---

## A - Foreword

---

<b>1</b>	<b>Foreword.....</b>	<b>3</b>
<b>2</b>	<b>Responsibilities.....</b>	<b>4</b>
2.1	Owner's responsibility.....	4
2.2	Employer's responsibility.....	4
2.3	Trainer's responsibility.....	4
2.4	Operator's responsibility.....	4
<b>3</b>	<b>Safety.....</b>	<b>5</b>
3.1	Safety instructions.....	5
<b>4</b>	<b>Safety inquiries.....</b>	<b>11</b>
<b>5</b>	<b>Incident notification.....</b>	<b>12</b>
<b>6</b>	<b>Compliance.....</b>	<b>13</b>
6.1	Product modification.....	13
6.2	Product specifications.....	13
6.3	Change of Ownership Notification.....	13
6.4	Declaration of conformity.....	14



# Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## 1 Foreword

You have just purchased a HAULOTTE® product and we would like to thank you for your business.

The aerial work platform is a device for lifting people designed and manufactured with the intent to enable users to access overhead elevated temporary workplaces with the necessary tools and equipment. All other uses or alterations/modifications to the aerial work platform must be approved by HAULOTTE®.

This manual shall be considered a permanent component of the machine and shall be kept with the aerial work platform in the designated Manual Holder, at all times.

Safe operation of this product can only be assured if you follow the operating instructions contained in this manual. To ensure the safe and appropriate use of this equipment, only trained personnel are authorised to use and carry out maintenance on the aerial work platform.

We would particularly like to draw your attention to 2 essential points:

- Comply with safety instructions.
- Use this equipment within the performance limits specified by this user manual.

With regard to the designation of our equipment, we stress that this is purely for commercial purposes and not to be confused with the technical specifications. Only the specifications in this manual should be used to study the suitability of the equipment for the intended use.

This operator's manual is specific to the HAULOTTE® products listed on the cover page of this manual.



Original language and version: Manuals in English and French are the original instructions. Manuals in other languages are translations of the original instructions.

The user manual does not replace the necessary training that is required for all of this machine's operators. HAULOTTE® has compiled this manual to assist in safe and efficient operation of the products covered in the manual.

The manual must be available to all operators and must be kept in a legible condition. Additional copies can be ordered from HAULOTTE Services®.

Stay Safe and keep working with HAULOTTE®!

**For online reference and to download the manuals for your machines HAULOTTE®, go to:**

**<https://www.e-technical-information.com>**

**Or, scan the QR Code below:**



## 2 Responsibilities

### 2.1 Owner's responsibility

The owner (or hirer) has the obligation to:

- To inform operators of the instructions contained in the Operator's Manual.
- Follow local regulations regarding operation of the machine.
- Replace all manuals or labels that are missing or in poor condition. Additional copies can be ordered from HAULOTTE Services®.
- To establish a preventive maintenance program in accordance with the manufacturer's recommendations, taking into account the environment and severity of use of the machine.
- To perform periodic inspections in accordance with HAULOTTE® recommendations and local regulations.

All malfunctions and problems identified during the inspection shall be corrected before the aerial work platform is returned to service.

### 2.2 Employer's responsibility

The employer (or plant superintendent) is required:

- To train and check the training of users.
- To authorise the trained user(s) to use the machine.
- To inform and familiarize the operator with the local regulations.
- Forbid anyone from operating the machine if:
  - Under the influence of drugs, alcohol, etc.
  - Subject to fits, convulsions, dizziness, etc.

### 2.3 Trainer's responsibility

- The trainer must be qualified to provide training to operators in accordance with applicable local regulations.
- The training must include all of the instructions in this manual.
- The training must be given in an obstacle-free area until the trainee is considered competent as defined by the training program undertaken.

### 2.4 Operator's responsibility

The operator has the obligation to:

- Read and understand the contents of this manual and familiarize himself/herself with the decals affixed on the machine.
- To inspect the machine before use according to HAULOTTE®'s recommendations..
- Inform the owner (or hirer) if the manual or any decals are missing or are not legible.
- Inform the owner (or hirer) of any machine malfunction.

Operators must ensure that the inspections have been carried out by the owner and that they can use the machine for the purpose intended by the manufacturer.



All users (driver, passenger, maintainer, transporter, etc.) must familiarise themselves with the emergency controls and machine operation in case of an emergency.

The operator has the obligation to stop using the machine in the event of malfunction or safety problems on the machine or in the work area and report the problem immediately to his/her supervisor.

## 3 Safety

### 3.1 Safety instructions

#### 3.1.1 Incorrect use

- Do not use the machine outside of the conditions specified in this manual.
- Do not use the machine as a crane, material lift or elevator.



- Do not use the work platform as a hoisting machine (crane) by suspending a load outside of the platform.
- Do not tie the boom or platform to an adjacent fixed or mobile structure.
- Do not use/operate the machine when alone. A survey person or immediate Supervisor must be present on the ground in case of emergency.
- Do not use a faulty or poorly maintained machine. Remove defective/damaged machine from service.
- Do not climb onto the compartment covers of the machine.
- Do not replace items critical to machine stability with items of different weight or specification.
- Do not replace the wheels installed in the factory with wheels with different characteristics
- Do not alter or disable machine components that in any way affect safety and stability.
- Do not disable the safety devices.
- Do not use the machine if a label is missing or illegible.
- Do not damage, modify or hide machine labels or inscriptions.

#### 3.1.2 Falling Hazards

***N.B.-:THE GUARDRAIL IS THE MAIN PROTECTION SYSTEM AGAINST FALLS FROM THE MOBILE LIFTING PLATFORM (PEMP) .***

##### **Before commencing operation:**

- Ensure that guard rails are correctly installed and secured.
- Ensure that gate or sliding bar is in its securely locked position.
- If using a machine that has a swing gate, check that the entry gate closes by itself and gate latches and locks.



- Remove oil or grease from the steps, floor, handrail and the guardrails.
- Clean the floor of the platform (no debris).

##### **To enter or exit from the platform:**

- The machine must be completely stowed (Access position).
- Face the machine to access the opening to the platform.
- Keep 3 points of contact on the steps and the guardrail.
- Keep fingers away from moving parts near entry gate.




## A - Foreword

**When in the platform:**

- Where personal fall protection equipment (FPE) is required by the employer, a competent authority or local regulations, we recommend using a full harness with a safety line.
- Personal fall protection equipment must only be fastened to approved fall protection anchoring points on the platform provided for this purpose.
- Refer to this decal located on the platform.
- Safety lines must never be attached to an object or structure outside of the work platform.
- Hold on securely to the guardrails.
- Always keep your feet firmly on the floor of the platform.
- Do not sit, stand, or climb on the platform guard rails.
- Do not lean on the gate or sliding bar.
- Do not lean over the guard rails or climb over them. Only work in the platform area within the guard rails.
- Do not exit the platform until it is in the completely stowed position.
- Do not use the guardrail as a means of access to climb in or out of the platform.

**3.1.3 Overtipping / Tip-over Hazards****Before positioning and operating the machine:**

- Ensure that the surface is capable of supporting the machine weight including the rated capacity. Check the load bearing capacity of the supporting ground.  B 4.1 - Technical characteristics.
- Remain vigilant of driving direction reversal at the platform. Check the direction of movement with the help of the red or white arrows on the chassis and on the platform control box.
- Do not overload the platform. Do not exceed the maximum rated capacity that includes the weight of both material and allowed number of occupants. Do not exceed the allowable number of occupants.
- Do not increase the working height (using extensions, ladder, etc.).
- Do not place ladders or scaffolds in the platform or against any part of this machine.
- Position loads uniformly in the centre of the work platform.
- Do not use the machine at wind speeds that are above the permissible threshold. Refer to the display on the work platform to view the permissible wind speed.
- Do not increase the surface area of the platform exposed to wind. This includes adding panels, mesh, banners. Failure to follow this instruction may lead to a loss of stability and as a result, the machine could tip over.
- Do not raise the platform or move the machine with the platform raised on a slope with a gradient greater than the machine's permissible limit.



## A - Foreword

- Do not drive the machine on slopes or grades exceeding the specified limits.



- Do not pull or push towards any object outside of the platform. Do not exceed the maximum allowable side force stated in the performance specifications.
- Do not use the machine to support any external structure.
- Do not use the machine to tow other machines or to drag materials.

**Using the machine on a slope:**

Do not drive the machine on slopes with gradients exceeding the authorised transversal and lateral limits for the machine.

**WIND:** the aerial work platform can be used up to the maximum wind speed indicated in the specifications in this manual.

**N.B.-:THE BEAUFORT SCALE OF WIND FORCE IS ACCEPTED INTERNATIONALLY AND IS USED WHEN COMMUNICATING WEATHER CONDITIONS. A WIND SPEED RANGE AT 10 M (32 FT 9 IN) ABOVE FLAT, CLEAR LAND IS ASSOCIATED WITH EACH DEGREE.**

**Beaufort scale**

Force	Meteorological description	Observed effects	m/s	km/h	mph
0	Calm	Smoke rises vertically.	0 - 0,2	0 - 1	0 - 0,62
1	Very light breeze	Smoke indicates the wind direction.	0,3 - 1,5	1 - 5	0,62 - 3,11
2	Light breeze	Wind felt on the face. Leaves rustle. Weather vanes turn.	1,6 - 3,3	6 - 11	3,72 - 6,84
3	Slight breeze	Leaves and small twigs in constant motion. Flags move slightly.	3,4 - 5,4	12 - 19	7,46 - 11,8
4	Nice breeze	Raised dust and loose papers. Small branches are moved.	5,5 - 7,9	20 - 28	12,43 - 17,4
5	Nice breeze	Small trees in leaf to sway. Crested wavelets form on inland waterways.	8,0 - 10,7	29 - 38	18,02 - 23,6
6	Cool wind	Large branches in motion. Power lines and chimneys 'sing'. Umbrellas used with difficulty.	10,8 - 13,8	39 - 49	24,23 - 30,45
7	Near gale	Whole trees in motion. Inconvenience felt when walking against wind.	13,9 - 17,1	50 - 61	31 - 37,9
8	Gale	Some branches break. Generally we cannot walk against the wind.	17,2 - 20,7	62 - 74	38,53 - 45,98
9	Strong gale	The wind causes slight damage to buildings. Tiles and chimney stacks are blown off.	20,8 - 24,4	75 - 88	46,60 - 54,68

### 3.1.4 Risk of electric shock (electrocution)



Risk of death or serious injuries.

The machine is not electrically insulated and does not provide protection from contact or proximity to electrically charged conductors.

Always position all parts of the aerial work platform, the occupants, accessories and tools at a reasonable distance from power lines to ensure that no part of the work platform accidentally comes into contact with a power line.

Apply the local regulations or those of the employer with regard to the safety distances. If this is not possible, follow the distances in the table below at a minimum:

**Minimum safe approach distances**

Electric voltage	Minimum safety distance	
	Mètre	Feet
0 - 300 V	Avoid contact	
300 V - 50 kV	3	10
50 - 200 kV	5	15
200 - 350 kV	6	20
350 - 500 kV	8	25
500 - 750 kV	11	35
750 - 1000 kV	14	45

- Do not operate the machine when close to live power lines, consider the movement of the machine and the sway of the electric power lines particularly in windy conditions.
- Do not operate the machine during lightning, thunderstorms, snow/ice or any weather condition that could compromise operator safety.
- Do not use the machine as a ground for welding.
- Do not weld on the machine without first disconnecting the battery terminals.
- Always disconnect ground cable first.
- The machine must not be used while charging the batteries.
- When using the AC power supply, ensure it is protected with a circuit breaker and residual current device.
- Never expose the batteries or electrical components to water (high pressure washer, rain).



Keep away from the machine if it contacts energized power lines. Personnel on the ground or in the platform must not touch or operate the machine until energized power lines are shut off.



The user must not leave the platform if it comes into contact with a power line.

### 3.1.5 Explosion / Fire Hazards

- Always wear protective clothing, glasses or a face protection shield and gloves when working on batteries or energy sources.



**N.B.: -ACID IS NEUTRALIZED WITH SODIUM BICARBONATE AND WATER.**

- Do not start the engine if you smell or detect liquid propane gas (LPG), gasoline, diesel fuel or other explosive substances.
- Do not work on or operate a machine in an explosive or flammable atmosphere / environment.
- Do not touch hot components.
- Do not bridge the battery terminals with metallic objects.



- Do not service the battery in proximity of spark, open flame, lit cigarettes.
- Do not open the batteries.
- Do not fill the fuel tank with the engine running, close to naked flames and/or while smoking.



### 3.1.6 Crushing / Collision Hazards



 
Before using the machine, mark out the machine's work and circulation area using a marking system appropriate to the task at hand and the work environment.

#### When in the platform:

- Check the work area for overhead clearance, for any obstacles besides and below the platform when raising/lowering the platform and or before driving.



- During movement, keep all the parts of the body inside the platform. Hold onto the guardrails on the opposite side to any surrounding structures.
- To position machine close to a building/structure, it is recommended using the upper boom and or arms movement control functions to position, rather than driving machine closer to structure.
- Warn personnel not to work, stand, or walk under a raised boom/platform.
- Be aware of the boom position and tail swing when rotating the turret (turntable).
- Always ensure that the chassis is never kept any closer than 1 m (3 ft 3 in) to holes, bumps, slopes, obstructions, debris and ground coverings that may hide holes and other dangers.
- Maintain a distance of at least 1 m (3 ft 3 in) or any signs on the worksite.
- Keep non-operating personnel at least 5 m (16 ft 5 in) away from the machine when driving and slewing.



## A - Foreword

- Become familiar with the driving direction.
- When turret is slewed/rotated 180°, the platform is now facing the rear of the machine.
- Check the direction of movement with the help of the red or white arrows on the chassis and on the platform control box.
- Also note that when changing the driving direction (Forward <> Reverse) the joysticks or switches must return to the neutral position before reversing the drive direction and for movement to occur.
- When driving, position the platform so as to provide the best possible visibility and to avoid any blind spots.
- Hold on securely to the guardrails.
- **Personal Protection Equipment (EPI) :**
  - The occupants of the aerial work platform must wear personal protection equipment and comply with local regulations in force.
  - Operators must comply with the safety standards of the job site and the employer, as well as the applicable state regulations relating to the use of personal protective equipment.
  - All personal fall protection equipment (PFPE) must comply with current regulations, must be inspected and used in accordance with the manufacturer's instructions.
- Avoid contact with fixed or mobile obstacles (other machines).
- Other machines (crane, aerial work platform, etc.) operating in the work area increase the risk of crushing or collision. Restrict the operation of machines moving within the aerial work platform work area.
- Take into consideration the stopping distance, reduced visibility and blind spots of the machine.
- Limit travel speed to suit the ground surface condition, slope (incline), and people in the vicinity.



### 3.1.7 Risk of involuntary movements

Never use a damaged or malfunctioning machine.

#### Always respect the following rules:

- Maintain clearance from high voltage lines.
- Maintain clearance from generators, radar, electromagnetic fields.
- Never expose the batteries or electrical components to water (high pressure washer, rain).

## **4 Safety inquiries**

Inquiries relating to design criteria/specifications of a product, standards compliance, or overall machine safety should be sent to the HAULOTTE® PRODUCT SAFETY department.

Each inquiry or request should include all relevant information; including contact name, telephone number, mailing address, email address, plus the machine model and serial number.

The HAULOTTE® Product Safety department will evaluate each request/inquiry and will provide a written response.

## 5 Incident notification

Notify HAULOTTE® immediately when a HAULOTTE® product has been involved in an incident/accident leading to personal injury or death, or when there is a major property damage.

---

### HAULOTTE Group - EUROPE Product Safety Department

Address: Rue Emile Zola - 42420 Lorette - France

Tel: +33 (0)4 77 29 24 24

Email: [productsafety.europe@haulotte.com](mailto:productsafety.europe@haulotte.com)

---

### HAULOTTE Group - Australia, India and Asia Product Safety Department

Address: No.26 Changi North Way - Singapore 498812 - Singapore

Tel: +65 6546 0123

Email: [productysafety.apac@haulotte.com](mailto:productysafety.apac@haulotte.com)

---

### HAULOTTE Group - North & South America Product Safety Department

Address: 3409 Chandler Creek Rd. - Virginia Beach, VA 23453 - United States

Tel: +1 757 689 2146

Email: [productsafety.americas@haulotte.com](mailto:productsafety.americas@haulotte.com)

---

Connect to our website: [www.haulotte.com](http://www.haulotte.com)



## 6 Compliance

### 6.1 Product modification

It is strictly forbidden to modify a HAULOTTE® product. Any modification may violate Haulotte design parameters, local regulations and industry standards.

Any requests for modification must be formulated in writing (form) and be approved by the manufacturer.

Do not hesitate to contact HAULOTTE Services®, should you have any questions relating to the issued bulletin(s) or with questions on the policy itself.

#### 6.1.1 Implementing manufacturer safety campaigns

It is essential to implement the safety campaigns issued by the manufacturer. All of these campaigns are accessible on our website.

**Connect to our website: [www.haulotte.com](http://www.haulotte.com)**



Never market (or sell) a machine without first having carried out all of the safety campaigns.

### 6.2 Product specifications

HAULOTTE® cannot be held liable for any changes to the technical characteristics/specifications contained in this manual. HAULOTTE® has a continuous improvement policy in place for its product range. Given this policy, the Company reserves the right to modify products technical characteristics / specifications without notice.

### 6.3 Change of Ownership Notification

It is important and necessary to keep HAULOTTE Services® updated with current ownership of the machine. This way, HAULOTTE® will be able to provide the necessary support for the product. If you have sold or transferred this machine(s); it is your responsibility to notify HAULOTTE Services®. It is not required to include Lessees/Renters of Leased/Rented machines on this form.

**Connect to our website: [www.haulotte.com](http://www.haulotte.com)**



#### 6.4 Declaration of conformity



The CE declarations of conformity only apply to machines that have been approved and commissioned within the European Community (EC).

##### 6.4.1 Declaration of conformity - All machines



The UKCA declarations of conformity only apply to machines that have been approved and commissioned within the United Kingdom (UK).

Declaration of conformity - UKCA and CE directive

**UKCA/EC DECLARATION OF CONFORMITY**

**HAULOTTE GROUP**

Adress of division

We hereby declare that this machine conforms with all the relevant provisions of the Regulations listed below

**Mobile Elevating Work Platform, Type <>, Group <>**

<p><b>Commercial name</b> In compliance with the Model Type Serial number</p>	<p><b>Commercial name of the concerned machine</b> Model type of the concerned machine Serial number of the machine concerned</p>
---	---

Conforms with provisions of the Regulations listed below :

<p><b>CE</b></p> <p>EC Machinery Directive 2006/42/CE EC Directive electromagnetic compatibility 2014/30/EU EU RED Directive on radio equipment (if machine equipped) 2014/53/UE EC Outdoor Noise Directive Measurement method LWA, Guaranteed sound level LWA, Maximum sound level</p>	<p><b>UKCA</b></p> <p>Supply of Machinery (safety) 2008/97 amended SI2011/1043/2157 2019/696 Electromagnetic compatibility 2014/30/1091 amended SI 2017/1206, 2019/696 Radio equipment (if machinery equipped) 2017 2000/14/EC Annex III-B dB</p>
---	---

This machine has been type examined by :

Name and address of the Authorized body :	Name and address of Approved body
Certificate number	Certificate number
Harmonized standard(s) used as reference(s) : EN280-1	This machine also fulfils the principles of the designed standards EN280-1

Manufacturer and the person authorised to compile the technical file:

<p><b>HAULOTTE GROUP</b> Compliance Manager Rue Emile Zola CS30045 42420 LORETTE FRANCE</p>	<p><b>HAULOTTE UK Ltd</b> General Manager UK and Ireland Unit 1 gravelly Way, Four Ashes Wolverhampton, West Midlands WV10 7 GW ENGLAND</p>
---	---


Name and signature Division Director	Place and date
---	----------------

haulotte.com


79478102705452040MVE691PF-13  
 MVE6910H-CE-UKCA-V2.0.8

## 6.4.2 Declaration of conformity - Thermal platforms

## Declaration of conformity - CE directive



**DECLARATION DE CONFORMITE CE**  
**EC DECLARATION OF CONFORMITY**



**Fabricant et personne autorisée à constituer le dossier technique :**  
**Manufacturer and the person authorised to compile the technical file:**

<b>HAULOTTE GROUP</b> Adresse du site de production du Address of the division	<b>HAULOTTE GROUP</b> RUE EMILE ZOLA CS 30045 42420 LORETTE FRANCE
--	--

**Nacelle élévatrice de personnel**  
**Mobile Elevating Work Platform**

En conformité avec le modèle type In compliance with the Model Type	Modèle type de la machine concernée Type mode of the concerned machine
Nom commercial Commercial name	Nom commercial de la machine concernée Commercial name of the concerned machine
Numéro de série Serial number	Numéro de la machine concernée Serial number of the machine concerned
Organisme notifié Notified body	Nom et adresse de l'organisme notifié Name and address of notified body
Numéro de certificat Certificate number	Numéro de certificat CE type de machine Certificate number of the type of machine
Capacité nominale Rated Capacity	Charge maximale d'utilisation de la machine concernée Rated capacity of the concerned machine


**Nous déclarons que cette machine est conforme aux dispositions des Directives suivantes**  
**We hereby declare that this machine conforms with all the relevant provisions of the Directives listed below**

Directive machine CE EC Machinery Directive	<b>2006/42/CE</b>
Se conforme aux principales exigences de la norme harmonisée This machine also fulfils the principles of the harmonised standard	<b>EN280-1</b>
Directive compatibilité électromagnétique CE EC Directive on electromagnetic compatibility	<b>2014/30/EU</b>
Directive CE RED concernant les équipements radioélectriques (si machine équipée) EU RED Directive on radio equipment (if machine equipped)	<b>2014/53/UE</b>
Directive CE d'émission de bruit EC Outdoor Noise Directive	<b>2000/14/EC</b>
Méthode de mesure Measurement method	<b>Annex III-B</b>
LWA, niveau de puissance acoustique garanti LWA, guaranteed sound level	<b>dB</b>
LWA, niveau de puissance acoustique mesuré max LWA, Maximum sound level	<b>dB</b>

**Cette déclaration porte exclusivement sur la machine dans l'état où elle a été placée sur le marché.**  
**This declaration relates exclusively to the machinery in the state in which it was placed on the market**

**Toute modification de la machine décrite ci-dessus a pour effet d'invalider cette déclaration.**  
**Any modification to the above described machine violates the validity of this declaration**

Nom et signature / Name and signature Division Director	Lieu / Place Date / Date
--	-----------------------------



MMZ6910H-AA - V2.0.6 - 04662069006519292MMZ691PF

## B - Familiarization

<b>1</b>	<b>General safety.....</b>	<b>3</b>
1.1	Intended use.....	3
1.2	Decal content.....	3
1.3	Level of severity.....	4
1.4	Symbols legend and definitions.....	5
1.5	Symbols and colors.....	7
<b>2</b>	<b>Models description.....</b>	<b>8</b>
<b>3</b>	<b>Primary machine components.....</b>	<b>9</b>
3.1	Layout.....	9
3.2	Ground control box - Service / Emergency station.....	11
3.3	Platform control box - Main station.....	51
3.4	DPF (Diesel Particle Filter) (If equipped) .....	56
<b>4</b>	<b>Performance Specifications.....</b>	<b>60</b>
4.1	Technical characteristics.....	60
4.2	Engine specifications.....	66
4.3	Working area / Range of motion.....	69
<b>5</b>	<b>Decals and markings locations.....</b>	<b>70</b>

## B - Familiarization

---



### Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## B - Familiarization

### 1 General safety

#### 1.1 Intended use

**Do not operate the product in the following situations:**

- On soft, unstable or cluttered ground.
- With wind blowing faster than the permissible limit:
  - Check the allowable wind speed specified in the performance specifications tabulation.
  - Consult the Beaufort scale.
- Close to power lines. Keep a safe distance.
- If the machine is stored at a temperature out of range : From - 20°C (- 4°F) to + 50°C (+ 122°F).
- In an explosive atmosphere / environment.
- During storms.
- In the presence of strong electromagnetic fields.

**N.B.-:USE THE MACHINE UNDER "NORMAL" CLIMATIC CONDITIONS. IF YOU NEED TO USE THE MACHINE IN CLIMATIC CONDITIONS LIKELY TO CAUSE DETERIORATION (EXTREME : HUMIDITY, TEMPERATURES, SALINITY, CORROSIVENESS, ATMOSPHERIC PRESSURE), CONTACT HAULOTTE SERVICES®. REDUCE INTERVALS BETWEEN SERVICING.**

**N.B.-:IN HARSH ENVIRONMENTS (HIGH LEVELS OF SALINITY IN THE ATMOSPHERE: CLOSE TO THE SEA, INDUSTRIAL ENVIRONMENT WITH CHLORIDE EMISSIONS AND/OR HUMIDITY > 70%), WE RECOMMEND APPLYING SOLVENT-BASED OIL TO THE ENTIRE MACHINE.**

#### 1.2 Decal content

The purpose of the labels on the machine is to alert the user to the conditions of use and risks related to aerial work platforms.

**Decals provide the following information:**

- The level of severity.
- The specific hazard.
- A method to avoid, suppress or reduce the hazard.
- Descriptive text (where required).

Familiarize yourself with the decals and the hazard severity levels.

The decals must be kept in good condition. Promptly replace all decals that are no longer legible.

Familiarize yourself with the decals and their respective color codes.

Additional decals can be ordered from HAULOTTE Services®.

#### CE, UKCA, AS and EAC standards











 

#### ANSI and CSA standards



## B - Familiarization

Marking	Description
1	Risk identification symbol
2	Level of severity
3	Avoidance symbol pictorial
4	Avoidance text

### 1.3 Level of severity






















Color	Title	Description
		Danger: Indicates a hazardous situation which if not avoided, WILL result in death or serious injury.
		Warning: Indicates a hazardous situation which if not avoided, COULD result in death or serious injury.
		Caution: Failure to comply could result in minor or moderate injury.
		Notice: Indicates recommended practices if not followed, may result in a malfunction or damage the machine or its components.
		Procedure: Indicates a maintenance operation.

## B - Familiarization















### 1.4 Symbols legend and definitions

Symbols are used throughout this manual to depict hazards, avoidance measures and indicate when information is required.

Refer to the following table to familiarize yourself with these symbols.

Symbol	Description	Symbol	Description	Symbol	Description
	Risk of crushing or pinning		Foot crushing hazard		High pressure fluid ejection hazard
			Hand crushing hazard		Crushing hazard
			Health/safety hazards related to chemicals		Burn hazard
	Risk of electrocution		Burns and scalds from contact with flames, explosion or radiation from heat sources		Injury from Electric arcs - Energy supply disconnecting devices - Batteries fire, emissions, etc
	Fall hazard		Tip over due to excessive loading / wind load and excessive ground slope		Relate and coordinate directional arrows on the chassis with those on the control box
	Do not put foot in this area		Do not put your hand in this area		Keep away from product working area
	Use of high-pressure cleaners prohibited		Ensure entry drop rail is down		

## B - Familiarization








Symbol	Description	Symbol	Description	Symbol	Description
	Flames prohibited		Maintain safe clearance from high voltage electrically charged conductors as described in manual - Do not use in thunderstorms		Overload
	Refer to operator manual		Safety belt		Use appropriate lanyard attached to dedicated anchor point.
	Wheel pressure		Enable switch		Use safety prop before attempting any maintenance work
	Tow point		Tie down point		Lift point
	Keep away from hot surfaces		Wear protective equipment		

## B - Familiarization

### 1.5 Symbols and colors

Symbols and colors are used to alert the operator of safety precautions and/or to highlight important safety information.

The following safety symbols are used throughout this manual to indicate specific hazards and the hazard severity level when operating or maintaining the Aerial Work Platform.

Symbol	Description
	Danger: Risk of injury or death
	Caution: Risk of material damage
	Prohibited action
	Reminder to use good practice or follow pre-operation checks
	Cross-reference to another part of the manual
	Cross-reference to another manual
	Cross-reference to repair (contact HAULOTTE Services®)
N.B.:	Additional technical information

**B - Familiarization****2 Models description**

Models	Regulations						
	CE	UKCA	ANSI	CSA	EAC	AS	JIS
HT23 RTJ O	✓	✓	✗	✗	✓	✓	✓
HT23 RTJ PRO	✓	✓	✗	✗	✓	✓	✓
HT23 RTJ O SW	✓	✓	✗	✗	✓	✓	✓
HT23 RTJ PRO SW	✓	✓	✗	✗	✓	✓	✓
HT67 RTJ O	✗	✗	✓	✓	✗	✗	✗
HT67 RTJ PRO	✗	✗	✓	✓	✗	✗	✗

**Legend**


✓	Available
✗	Not available

## B - Familiarization

### 3 Primary machine components

#### 3.1 Layout

HT23RTJ O - HT23RTJ O SW - HT67RTJ O - HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO

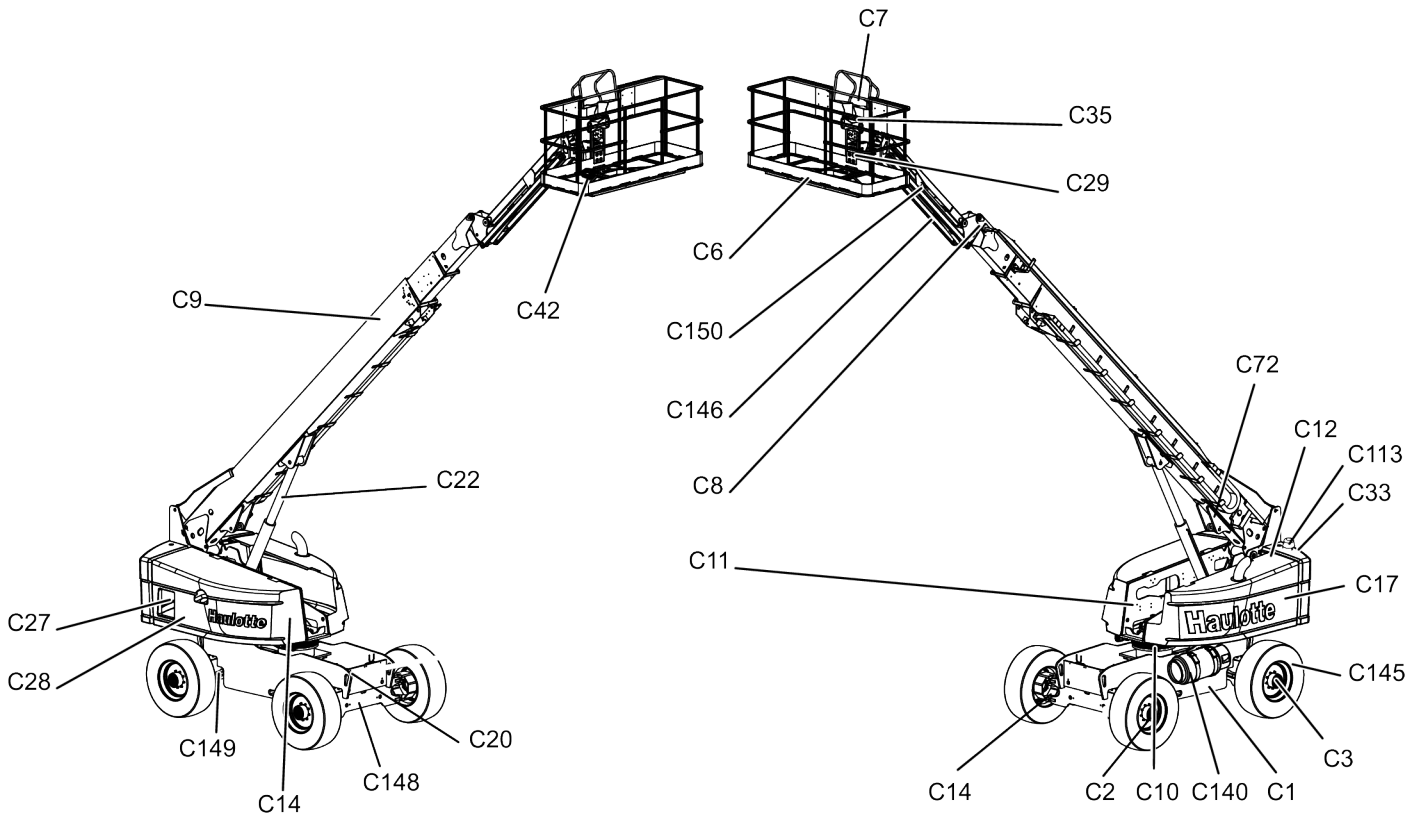

Marking	Description	Marking	Description
C1	Chassis	C27	Ground control box+Universal plug
C2	Front driven steering axle	C28	Tilt sensor
C3	Rear drive and/or steer wheel	C29	Platform rotation cylinder
C6	Platform	C33	Counterweight
C7	Platform control box	C35	Document holder
C8	Input jib leveling cylinder	C42	Foot Switch
C9	Upper boom	C72	Output jib compensation cylinder
C10	Slew ring	C113	Beacon light
C11	Turntable assembly	C140	Propane bottles- (For petrol / gas machines)
C12	Side cover	C145	Rear drive wheel

## B - Familiarization

Marking	Description	Marking	Description
C14	Hydraulic drive motor and reducer	C146	Telescopic jib
C15	Right side compartment (hydraulic oil tank and fuel tank)	C148	Fixed axle
C17	Left side compartment (engine, pump and starter battery)	C149	Oscillating axle
C20	Tie-down (and/or lifting) points	C150	Jib lifting cylinder
C22	Boom lift cylinder	C163	Handrail

### Universal plug



## B - Familiarization

### 3.2 Ground control box - Service / Emergency station












#### 3.2.1 Layout-Color screen display

General view










## B - Familiarization









## Controls and indicators

Marking	Name	Description	Function
1	SA720U - SA720D	Platform tilt control	By pressing on  : Tilt the platform towards the front of the machine.
			By pressing on  : Tilt the platform towards the back of the machine.
2	SA620U - SA620D	Jib lifting / lowering switch <sup>(1)</sup>	By pressing on  : Jib lifting
			By pressing on  : Jib lowering
3	SA530O - SA530I	Boom telescoping switch	By pressing on  : Boom extend
			By pressing on  : Boom in
4	SA520U - SA520D	Boom raising switch	By pressing on  : Boom raising
			By pressing on  : Boom lowering
6	SA905EN	Enable Switch/Back-up unit selector	By pressing on  <ul style="list-style-type: none"> <li>- Validation of controls when engine started</li> <li>- Automatic switching of emergency electropump if the engine is stopped</li> </ul>
7	SA250L - SA250R	Turntable rotation switch	By pressing on  : Counter clockwise (CCW) rotation
			By pressing on  : Clockwise (CW) rotation

## B - Familiarization

Marking	Name	Description	Function
8	SA750R - SA750L	Platform rotation switch	By pressing on  : Clockwise (CW) rotation
			By pressing on  : Counter clockwise (CCW) rotation
9	SB801	Emergency Stop button	Pulled out: Ground control box energized
			Pushed in (activated): De-energizes control system
10	HL905	Indicator of the ground control box selection	LED lights up - ground control box icon
11	SA801	Overriding system control	By pressing on  : Authorize movements from the ground control box in case of overload (Use ONLY in case of emergency)
12	SB907	Horn button	By pressing on  : Horn activation
13	HL906	Indicator of the platform control box selection	LED lights up - platform control box icon
14	SA903	Beacon light on/off	By pressing on  : Beacon light ON / OFF
15	HL909	Overload indicator/Fault	<p>Alarm icon </p> <ul style="list-style-type: none"> <li>- Flashes when the machine starts at the same time as the ( 19 ) icon</li> <li>- Is blinking if overriding is active: <ul style="list-style-type: none"> <li>• An active or detected failure is displayed on on-board screen</li> <li>• Or Hydraulic oil temperature icon is active on on-board screen</li> <li>• Or Engine pressure icon is active on on-board screen</li> <li>• Or Engine stop icon is active on on-board screen</li> <li>• Or Overload machine status is active on on-board screen</li> </ul> </li> </ul>
16	SA905ST	Engine start-up selector	By pressing on  : Engine start / stop

## B - Familiarization

Marking	Name	Description	Function
17		Propane Gas supply <sup>(1)</sup>	By pressing on  : Propane Gas supply selection
18		Petrol/Gasoline or diesel supply <sup>(1)</sup>	By pressing on  : Fuel supply selection
19	HL908	Engine warning indicator/Engine pre-heating	<p>Alarm icon </p> <ul style="list-style-type: none"> <li>- Flashes when the machine starts at the same time as the ( 15 ) icon</li> <li>- Is blinking if overriding is active Warning icon is ON if: <ul style="list-style-type: none"> <li>• Engine warning icon is active on on-board screen</li> <li>• Or Tilt machine status is active on on-board screen</li> <li>• Or Engine is pre-heating</li> </ul> </li> </ul>
20	SA300IB	DPF regeneration inhibited <sup>(1)</sup>	By pressing on  : Refusal of the request for regeneration
21	SA300FC	DPF regeneration required <sup>(1)</sup>	By pressing on  : Regeneration start-up
22		Control box activation key switch	 : De-energizes control system
	SA901PF		 : Platform control box energized
	SA901TU		 : Ground control box energized
23		Activ'Screen 2	

(1) For machines fitted with

## B - Familiarization

### 3.2.2 HAULOTTE Activ'Screen 2









Upon starting and during operation of the machine, the LCD screen Activ'Screen located on the ground control box displays in real time the machine operating status.

#### HAULOTTE Activ'Screen 2







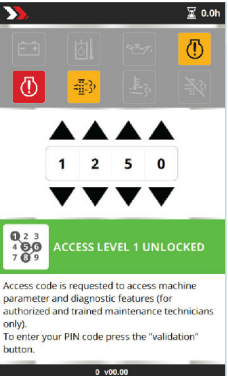



Icon	Description	Function	Icon	Description	Function
<b>HAULOTTE Activ'Screen 2</b>					

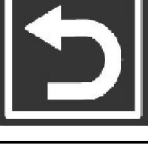

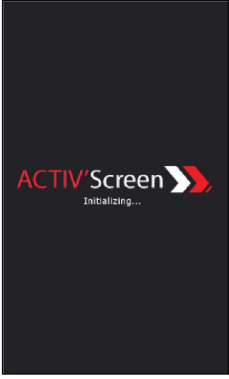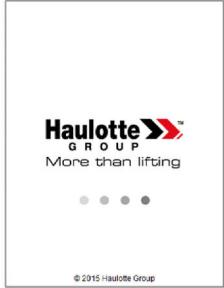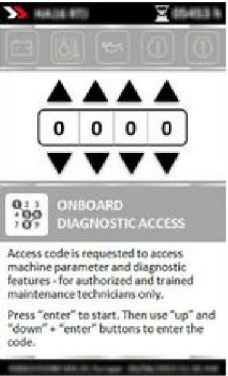



#### Navigation buttons - Above Activ'Screen display






	Home Button	Allows return to the home screen at any time		Up Navigation	Permits scrolling up through the screen (if present)
	Left navigation	Permits navigation to screens to the left (if present)		Down Navigation	Permits allows scrolling down through the screen and onto the following screen (if present)
	Right Navigation	Permits navigation to screens to the right of the current screen (if present)		Cancellation button	Used to refuse or cancel a selection within the menu
	Back button	Returns you to the previous screen		Validation Button	Used to confirm selection within the menus
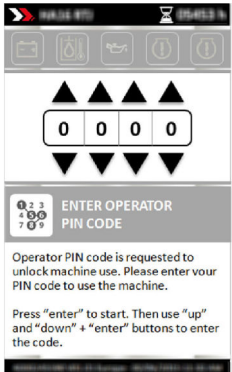
## B - Familiarization

Icon	Function		
<p>When the machine is first started up after 3 days of inactivity, or if the battery has been disconnected, the following screens are displayed in order</p>			
	<p>Machine power up (Start-up screen)</p>		
			
Icon	Function	Icon	Description
	<p>Access code (Will be visible - depending on the machine)</p>		Access code not yet entered
			Access code entered is correct (Level 1, 2 or 3 depending on authorization of technician)
			Access code entered is incorrect
	<p>NIV 1 diagnostic access code (Will be visible - depending on the machine)</p>	<p>The machine can be personalized with a user identification code. Personalization is only possible with level 1 access</p> <p><b>Machine properties display</b>-:Soft version, machine serial number, adjustment parameters</p> <p><b>Possible change of parameters</b>-:Language, fault display format, brightness setting, time, and some options availables</p>	
			Operator PIN code not yet entered
			Operator PIN code entered is correct
			Operator PIN code entered is incorrect

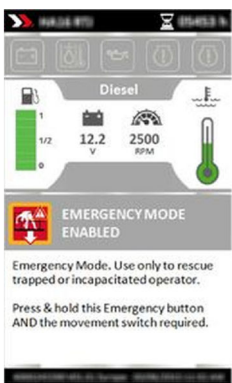
## B - Familiarization

Icon	Function	Icon	Description
	Operator PIN code (Will be visible - depending on the machine)		Operator PIN code not yet entered
			Operator PIN code entered is correct
			Operator PIN code entered is incorrect

Icon	Function	Icon	Description
	Emergency mode		Emergency mode is activated when:- <ul style="list-style-type: none"> <li>- Emergency Stop at platform control box has been pushed in (de-energized)</li> <li>- The machine is in overload state</li> <li>- Ground control box is selected</li> <li>- The emergency overriding button is activated</li> </ul>
			Emergency mode is deactivated when:- <ul style="list-style-type: none"> <li>- The Emergency Stop at platform control box is pulled out (energized)</li> <li>- The machine is NOT in overload state</li> <li>- Ground control box is NOT selected/energized</li> </ul>
			The Emergency mode is out of service/non-functional
			Emergency mode has been used and activation of its function saved in the memory of the machine A HAULOTTE® certified technician is required to reset the Emergency Mode system






## B - Familiarization

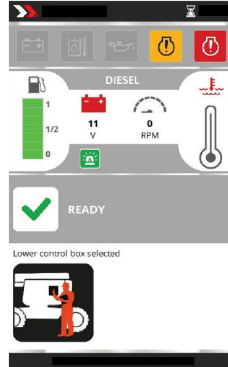Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				




	Machine model zone		Machine model	Machine model display
	Hour meter/next maintenance zone		Hour meter	The timer flashes if the engine is switched on and the hourmeter increases
			Maintenance use	The Maintenance Tool icon and the number of hours remaining until the next maintenance are displayed for 5 seconds when the machine is started up. Maintenance Tool icon blinks; if maintenance is due.
				The maintenance tool icon turns RED when the next scheduled maintenance must be carried out in under 25 hours
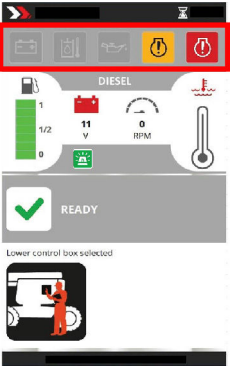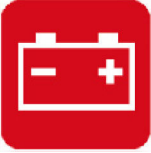
## B - Familiarization

Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
	Warning icons zone		Battery status	Icon is ON if there is no charge output detected from the alternator. Icon is flashing if a failure code for the alternator is detected (code F09.10).
			Hydraulic oil temperature	Icon is ON when the temperature in the hydraulic reservoir has exceeded the maximum required temperature. Stop using the machine and allow the oil to cool down.
			Engine oil pressure	Icon is ON if engine oil pressure is lower than required limit while engine is running. The Engine must be switched OFF immediately to avoid damaging the motor.
			Stop engine	The icon is lit if engine failure is detected (coolant, oil pressure, alternator, etc.). Or if the Engine shuts down after 3 seconds of running. Or after 1 second when engine fails to start.





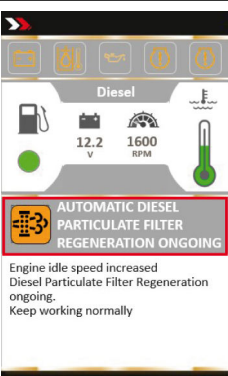
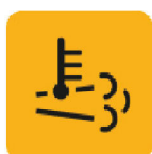
## B - Familiarization

Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				




 
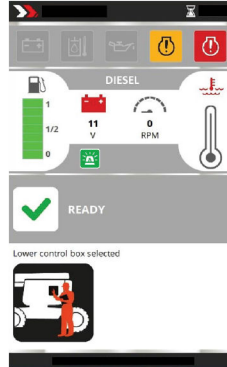


<p>A close-up of the top part of the dashboard. A red box highlights two warning icons: a yellow triangle with an exclamation mark and a yellow square with an engine icon.</p>	<p>Warning icons zone</p>		<p>Engine warning</p>	<p>Icon is ON if Engine warning is detected Or one of the engine maintenance schedules has been exceeded.</p>
			<p>Engine decontamination fault (if fitted)</p>	<p>Engine decontamination system fault. In this case, you must contact HAULOTTE Service® as soon as possible.</p>

## B - Familiarization

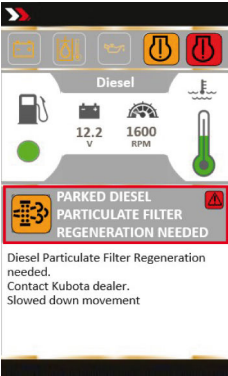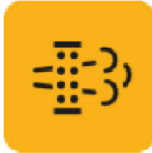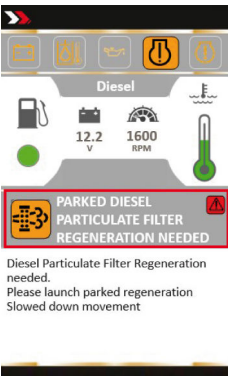
Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
	Warning icons zone		DPF regeneration required (If fitted)	Permanently lighted if the particle filter requires regeneration with a high clogging level
	Warning icons zone		DPF regeneration inhibited (If fitted)	Light stays on if regeneration is inhibited
	Warning icons zone		DPF regeneration in progress, high temperature in the exhaust system (HEST) (If fitted)	Light stays on during regeneration


 

 
## B - Familiarization

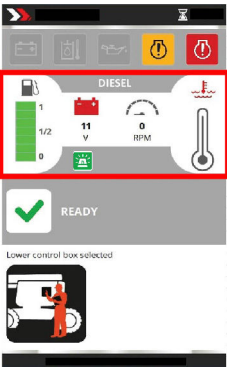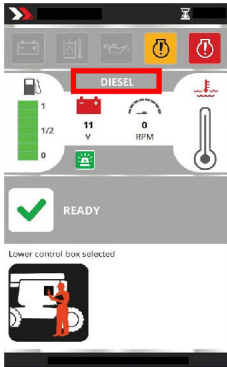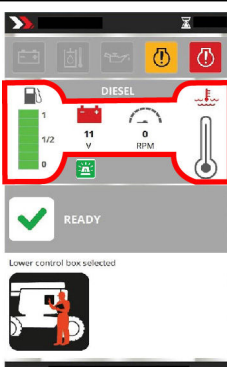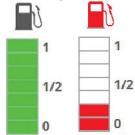Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
	Functional information zone		Power mode used	Diesel
			Bargraph	
			Digital Gauge - Fuel reserve indicator (ON/OFF)	The indicator changes from GREEN to RED when the fuel level is low and indicator is activated
			Analog Gauge - Fuel level gauge	The fuel level indicator switches from GREEN to RED when the fuel level is low

## B - Familiarization


Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				

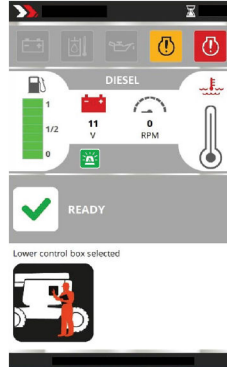

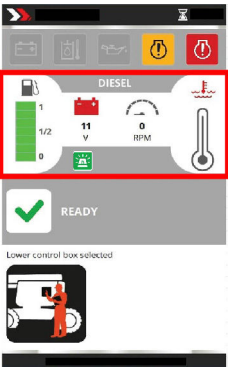	Functional information zone		Battery charge	Displays the machine battery voltage. The indicator switches to RED if the voltage is low.
			Engine speed	Engine speed display
			Engine temperature	Displays Engine coolant temperature. The indicator switches from GREEN to RED when the engine overheats.





## B - Familiarization

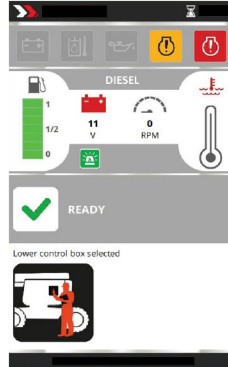Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				






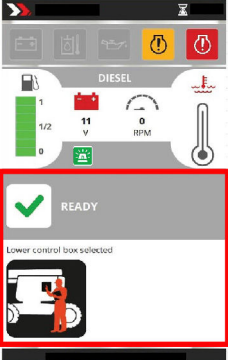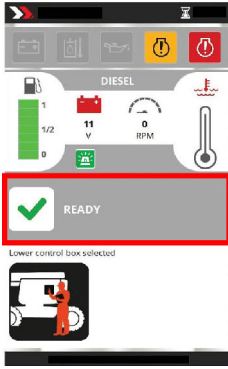

	Additional functions		Beacon light	The icon is ON when the flashing light is switched on
			Working light	The icon is ON when the work light is switched on
			Activ' System	Lighting The icon is ON when the Activ' Lighting System is switched on in auto or manual mode
			Stop System	Emission The icon is ON if the system is active on the machine

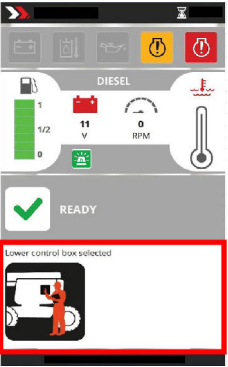



## B - Familiarization

Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				
	Machine status zone		Pictogram and title	Displays the pictogram and machine status
			Ready	Machine ready, displayed when no failures and no other machine state icons is active
			Alarm	The alarm icon blinks in case of: <ul style="list-style-type: none"> <li>- Machine failure</li> <li>- Failure detected</li> <li>- Machine in overload</li> <li>- Machine in tilt</li> </ul> Another icon will be displayed to show the machine's status, the failure or the malfunction.




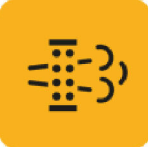
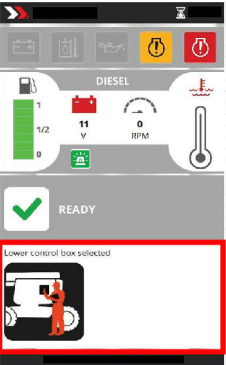

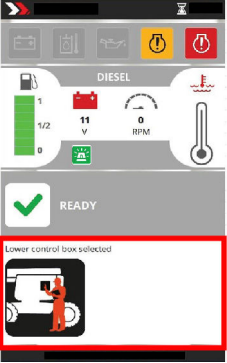
## B - Familiarization

Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine		
	Description	
	Platform control box selected	Selector switch is in platform control box position
	Ground control selected	Selector switch is in ground control box position
	Tilt	The machine is elevated , and is on a slope greater than the permitted slope. Depending on the machine configuration, the lifting and extension functions are slowed or stopped.
	Overload	The platform is overloaded. Remove the excessive load to or below the rated capacity, to restore functions. In case of an emergency, to rescue the operator in platform, use the Overriding system.

 




## B - Familiarization

Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	Description	
	Pre-heating	<p>Engine's automatic preheat system is active.</p> <p>The time to pre-heat will vary according to engine and ambient temperature.</p> <p>The machine can be started as soon as the indicator goes out.</p>
	Radius limitation	Icon is ON if the range limit is active or faulty
	Machine is charging	The machine is charging by the engine

## B - Familiarization


Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	Low fuel level	Fuel level is low. Refill the fuel tank to the marked level. A lack of fuel may damage the engine and will not be covered by the warranty
	Stop Emission System	Icon is ON when the function cuts the engine
	Activ' Lighting System	The function is off. To switch it on, go to the 'Settings' menu.
	DPF regeneration required (If fitted)	Permanently lighted if the particle filter requires regeneration with a high clogging level
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	Description	
	Diagnostic in progress	The HAULOTTE Diag console is connected to the machine
	Screen software obsolete	Screen software update essential. Contact Haulotte Service®.


 

## B - Familiarization

Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	F12.01 Bus CAN fault	CAN network fault between the screen and the rest of the machine
	Activ' Shield Bar disable	The secondary safety system is switched off (If fitted)
	Activ' Shield Bar triggered	<p>The secondary safety system is triggered. An operator may be trapped on the platform:-</p> <ul style="list-style-type: none"> <li>- In this situation, supervisor(s) at ground level must turn the control box key selector (22) to the ground control box  position to take control</li> <li>- The platform box controls are de-energized</li> <li>- Check that the Emergency Stop button (9) at ground is not pressed in</li> <li>- To safely activate movements from the ground control box, the Enable Switch (6)  must be pressed and held</li> </ul>

## B - Familiarization


Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				

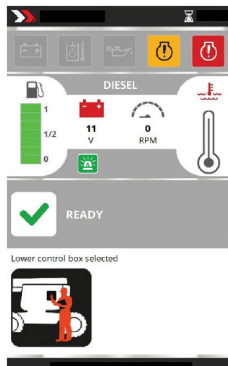

 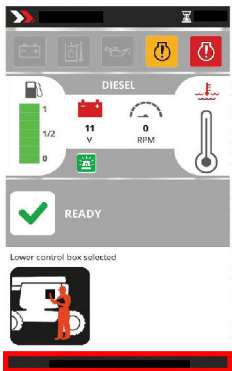





	<p>General information zone</p>		<p>Machine software version and code</p>	<p>Displays the reference and version of the software installed on the machine</p>
			<p>Machine date and time</p>	<p>Displays the date and time of the machine ECU</p>
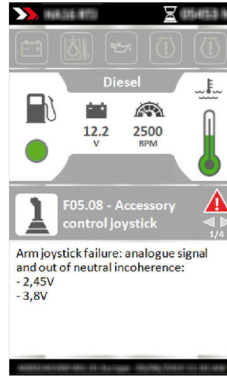
## B - Familiarization











Icon	Function	Description	Icon	Function	Description
<b>Machine fault - Will be visible - depending on the machine</b>					



### Machine fault icons (Please see machine configuration)

	Failure code F01.xx	Fault--Variable speed calculator		Failure code F09.xx	Fault--Internal combustion engine
	Failure code F02.xx	Fault--Power contactor		Failure code F10.xx	Fault--Functions
	Failure code F03.xx	Fault--Command relay		Failure code F11.xx	Fault--Machine safety
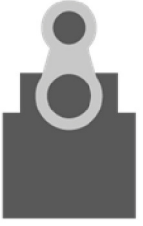
## B - Familiarization

Icon	Function	Description	Icon	Function	Description
<b>Machine fault - Will be visible - depending on the machine</b>					
	Failure code F04.xx	Fault:-Solenoid valve		Failure code F12.xx	Fault:-ECU console
	Failure code F05.xx	Fault:-Joystick		Failure code F13.xx	Fault:-Switchs
	Failure code F06.xx	Fault:-Weighing system		Failure code F14.xx	Fault:-Driving pump
	Failure code F07.xx	Fault:-Limit switch or sensor		Failure code F15.xx	Fault:-CAN circuit
	Failure code F08.xx	Fault:-Electric circuit		Failure code F16.xx	Fault:-Electric motor

## B - Familiarization

### 3.2.3 HAULOTTE Activ'Screen 2









Upon starting and during operation of the machine, the LCD screen Activ'Screen located on the ground control box displays in real time the machine operating status.

#### HAULOTTE Activ'Screen 2

Icon	Description	Function	Icon	Description	Function
<b>HAULOTTE Activ'Screen 2</b>					




#### Navigation buttons - Above Activ'Screen display

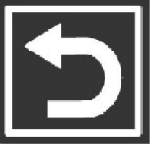
	Home Button	Allows return to the home screen at any time		Up Navigation	Permits scrolling up through the screen (if present)
	Left navigation	Permits navigation to screens to the left (if present)		Down Navigation	Permits allows scrolling down through the screen and onto the following screen (if present)
	Right Navigation	Permits navigation to screens to the right of the current screen (if present)		Cancellation button	Used to refuse or cancel a selection within the menu
	Back button	Returns you to the previous screen		Validation Button	Used to confirm selection within the menus

## B - Familiarization

Icon	Function
When the machine is first started up after 3 days of inactivity, or if the battery has been disconnected, the following screens are displayed in order	

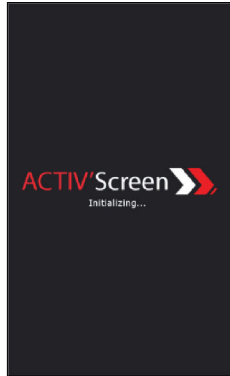


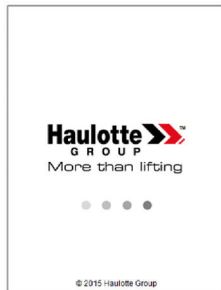


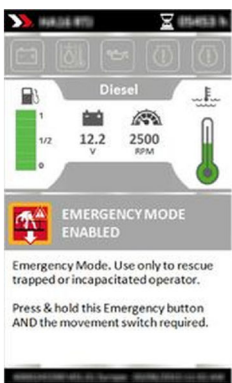




Machine power up (Start-up screen)

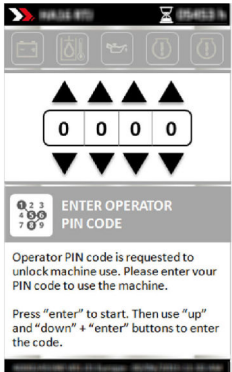

Icon	Function	Icon	Description
<p>ONBOARD DIAGNOSTIC ACCESS</p> <p>Access code is requested to access machine parameter and diagnostic features - for authorized and trained maintenance technicians only.</p> <p>Press "enter" to start. Then use "up" and "down" + "enter" buttons to enter the code.</p>	Access code (Will be visible - depending on the machine)		Access code not yet entered
			Access code entered is correct (Level 1, 2 or 3 depending on authorization of technician)
			Access code entered is incorrect
<p>ACCESS LEVEL 1 UNLOCKED</p> <p>Access code is requested to access machine parameter and diagnostic features (for authorized and trained maintenance technicians only).</p> <p>To enter your PIN code press the "validation" button.</p>	NIV 1 diagnostic access code (Will be visible - depending on the machine)	The machine can be personalized with a user identification code. Personalization is only possible with level 1 access	
		<b>Machine properties display</b> -:Soft version, machine serial number, adjustment parameters <b>Possible change of parameters</b> -:Language, fault display format, brightness setting, time, and some options available	
			Operator PIN code not yet entered
			Operator PIN code entered is correct
	Operator PIN code entered is incorrect		


## B - Familiarization

Icon	Function	Icon	Description
	Operator PIN code (Will be visible - depending on the machine)		Operator PIN code not yet entered
			Operator PIN code entered is correct
			Operator PIN code entered is incorrect

Icon	Function	Icon	Description
	Emergency mode		Emergency mode is activated when:- - Emergency Stop at platform control box has been pushed in (de-energized) - The machine is in overload state - Ground control box is selected - The emergency overriding button is activated
			Emergency mode is deactivated when:- - The Emergency Stop at platform control box is pulled out (energized) - The machine is NOT in overload state - Ground control box is NOT selected/energized
			The Emergency mode is out of service/non-functional
			Emergency mode has been used and activation of its function saved in the memory of the machine  A HAULOTTE® certified technician is required to reset the Emergency Mode system






## B - Familiarization

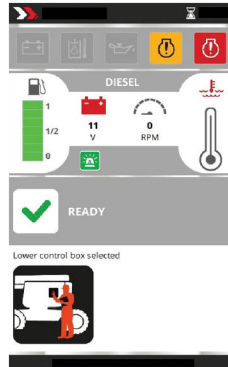Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				




	Machine model zone		Machine model	Machine model display
	Hour meter/next maintenance zone		Hour meter	The timer flashes if the engine is switched on and the hourmeter increases
			Maintenance use	The Maintenance Tool icon and the number of hours remaining until the next maintenance are displayed for 5 seconds when the machine is started up. Maintenance Tool icon blinks; if maintenance is due.
				The maintenance tool icon turns RED when the next scheduled maintenance must be carried out in under 25 hours

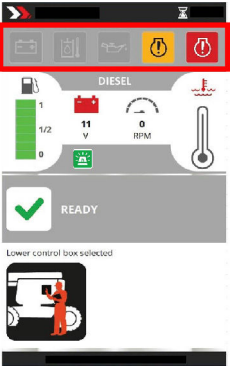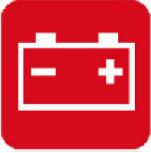


## B - Familiarization

Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
 <p>Warning icons zone</p>			Battery status	Icon is ON if there is no charge output detected from the alternator. Icon is flashing if a failure code for the alternator is detected (code F09.10).
			Hydraulic oil temperature	Icon is ON when the temperature in the hydraulic reservoir has exceeded the maximum required temperature. Stop using the machine and allow the oil to cool down.
			Engine oil pressure	Icon is ON if engine oil pressure is lower than required limit while engine is running. The Engine must be switched OFF immediately to avoid damaging the motor.
			Stop engine	The icon is lit if engine failure is detected (coolant, oil pressure, alternator, etc.). Or if the Engine shuts down after 3 seconds of running. Or after 1 second when engine fails to start.





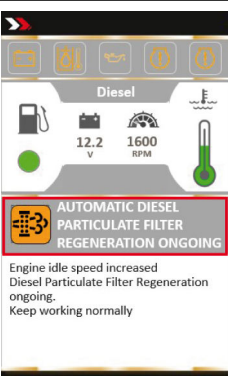
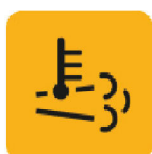
## B - Familiarization

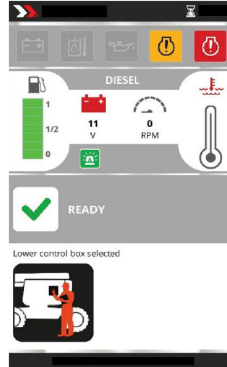Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				



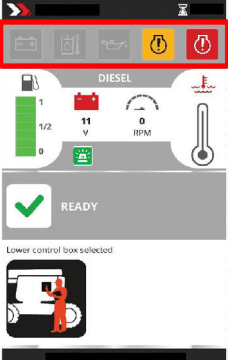

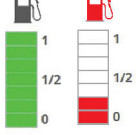


	Warning icons zone		Engine warning	Icon is ON if Engine warning is detected Or one of the engine maintenance schedules has been exceeded.
			Engine decontamination fault (if fitted)	Engine decontamination system fault. In this case, you must contact HAULOTTE Service® as soon as possible.

## B - Familiarization

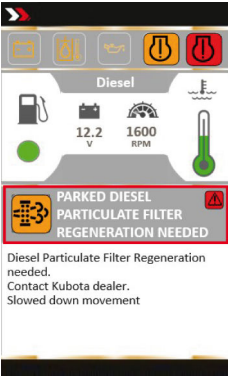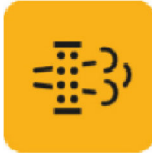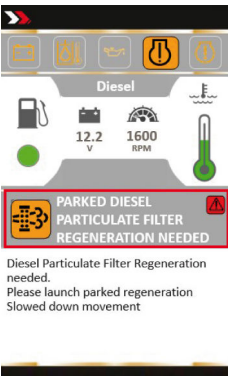
Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
	Warning icons zone		DPF regeneration required (If fitted)	Permanently lighted if the particle filter requires regeneration with a high clogging level
	Warning icons zone		DPF regeneration inhibited (If fitted)	Light stays on if regeneration is inhibited
	Warning icons zone		DPF regeneration in progress, high temperature in the exhaust system (HEST) (If fitted)	Light stays on during regeneration


 

 
## B - Familiarization

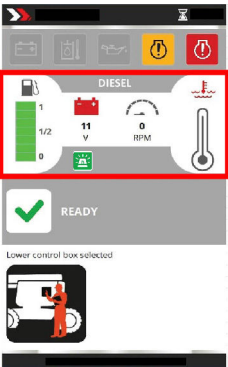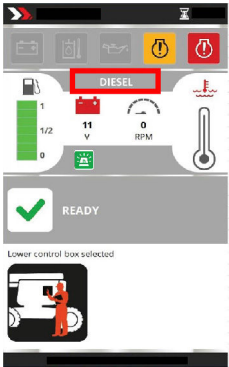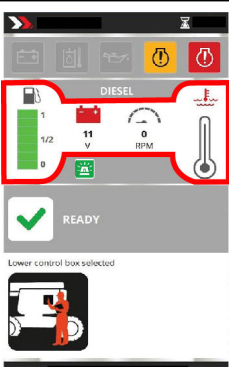Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				
	Functional information zone		Power mode used	Diesel
			Bargraph	
			Digital Gauge - Fuel reserve indicator (ON/OFF)	The indicator changes from GREEN to RED when the fuel level is low and indicator is activated
			Analog Gauge - Fuel level gauge	The fuel level indicator switches from GREEN to RED when the fuel level is low

## B - Familiarization


Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				

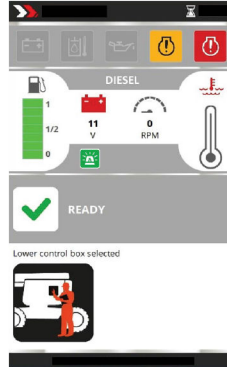


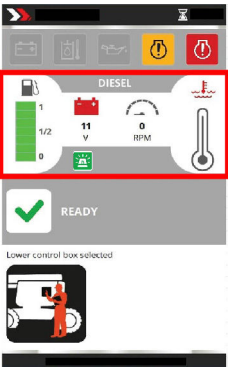



	Functional information zone		Battery charge	Displays the machine battery voltage. The indicator switches to RED if the voltage is low.
			Engine speed	Engine speed display
			Engine temperature	Displays Engine coolant temperature. The indicator switches from GREEN to RED when the engine overheats.


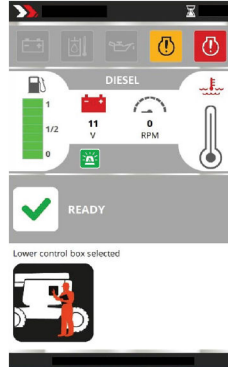

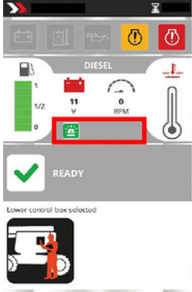
## B - Familiarization

Icon	Function	Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine				






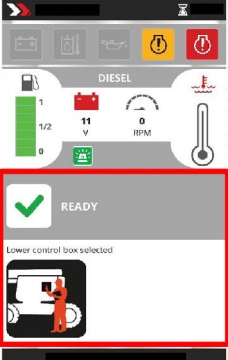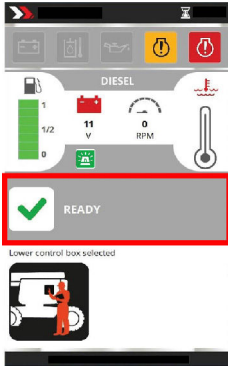

	Additional functions		Beacon light	The icon is ON when the flashing light is switched on
			Working light	The icon is ON when the work light is switched on
			Activ' System	Lighting The icon is ON when the Activ' Lighting System is switched on in auto or manual mode
			Stop System	Emission The icon is ON if the system is active on the machine

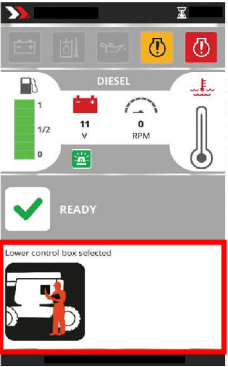



## B - Familiarization

Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				
	Machine status zone		Pictogram and title	Displays the pictogram and machine status
			Ready	Machine ready, displayed when no failures and no other machine state icons is active
			Alarm	The alarm icon blinks in case of: <ul style="list-style-type: none"> <li>- Machine failure</li> <li>- Failure detected</li> <li>- Machine in overload</li> <li>- Machine in tilt</li> </ul> Another icon will be displayed to show the machine's status, the failure or the malfunction.




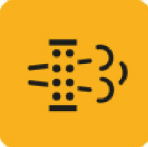
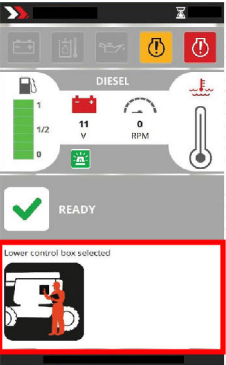

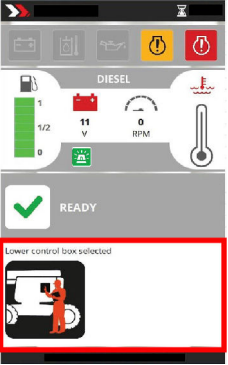
## B - Familiarization

Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine		
	Description	
	Platform control box selected	Selector switch is in platform control box position
	Ground control selected	Selector switch is in ground control box position
	Tilt	The machine is elevated , and is on a slope greater than the permitted slope. Depending on the machine configuration, the lifting and extension functions are slowed or stopped.
	Overload	The platform is overloaded. Remove the excessive load to or below the rated capacity, to restore functions. In case of an emergency, to rescue the operator in platform, use the Overriding system.

 




## B - Familiarization

Icon	Function	Description
Home screen (dashboard) - Will be visible - depending on the machine		
	Description	
	Pre-heating	<p>Engine's automatic preheat system is active.</p> <p>The time to pre-heat will vary according to engine and ambient temperature.</p> <p>The machine can be started as soon as the indicator goes out.</p>
	Radius limitation	Icon is ON if the range limit is active or faulty
	Machine is charging	The machine is charging by the engine

## B - Familiarization


Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	Low fuel level	Fuel level is low. Refill the fuel tank to the marked level. A lack of fuel may damage the engine and will not be covered by the warranty
	Stop Emission System	Icon is ON when the function cuts the engine
	Activ' Lighting System	The function is off. To switch it on, go to the 'Settings' menu.
	DPF regeneration required (If fitted)	Permanently lighted if the particle filter requires regeneration with a high clogging level
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	Description	
	Diagnostic in progress	The HAULOTTE Diag console is connected to the machine
	Screen software obsolete	Screen software update essential. Contact Haulotte Service®.




## B - Familiarization

Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>		
	F12.01 Bus CAN fault	CAN network fault between the screen and the rest of the machine
	Activ' Shield Bar disable	The secondary safety system is switched off (If fitted)
	Activ' Shield Bar triggered	<p>The secondary safety system is triggered. An operator may be trapped on the platform:-</p> <ul style="list-style-type: none"> <li>- In this situation, supervisor(s) at ground level must turn the control box key selector (22) to the ground control box  position to take control</li> <li>- The platform box controls are de-energized</li> <li>- Check that the Emergency Stop button (9) at ground is not pressed in</li> <li>- To safely activate movements from the ground control box, the Enable Switch (6)  must be pressed and held</li> </ul>

## B - Familiarization

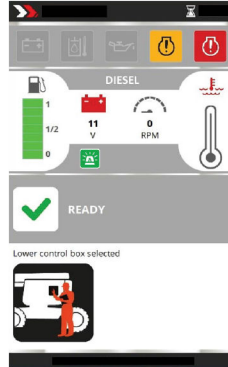
Icon	Function	Icon	Function	Description
<b>Home screen (dashboard) - Will be visible - depending on the machine</b>				

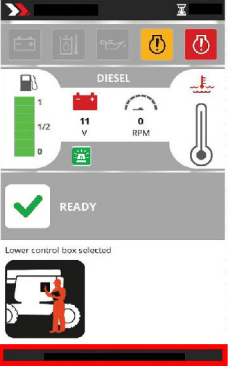

 





	<p>General information zone</p>		<p>Machine software version and code</p>	<p>Displays the reference and version of the software installed on the machine</p>
			<p>Machine date and time</p>	<p>Displays the date and time of the machine ECU</p>
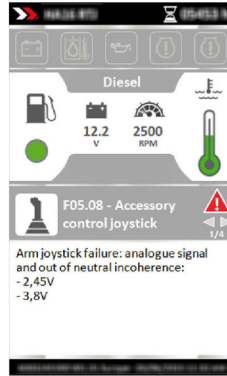
## B - Familiarization











Icon	Function	Description	Icon	Function	Description
<b>Machine fault - Will be visible - depending on the machine</b>					



### Machine fault icons (Please see machine configuration)

	Failure code F01.xx	Fault--Variable speed calculator		Failure code F09.xx	Fault--Internal combustion engine
	Failure code F02.xx	Fault--Power contactor		Failure code F10.xx	Fault--Functions
	Failure code F03.xx	Fault--Command relay		Failure code F11.xx	Fault--Machine safety
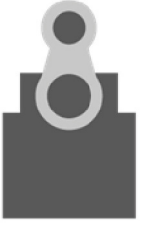
## B - Familiarization

Icon	Function	Description	Icon	Function	Description
<b>Machine fault - Will be visible - depending on the machine</b>					
	Failure code F04.xx	Fault:-Solenoid valve		Failure code F12.xx	Fault:-ECU console
	Failure code F05.xx	Fault:-Joystick		Failure code F13.xx	Fault:-Switchs
	Failure code F06.xx	Fault:-Weighing system		Failure code F14.xx	Fault:-Driving pump
	Failure code F07.xx	Fault:-Limit switch or sensor		Failure code F15.xx	Fault:-CAN circuit
	Failure code F08.xx	Fault:-Electric circuit		Failure code F16.xx	Fault:-Electric motor


## B - Familiarization

### 3.3 Platform control box - Main station

#### 3.3.1 Layout

##### General view

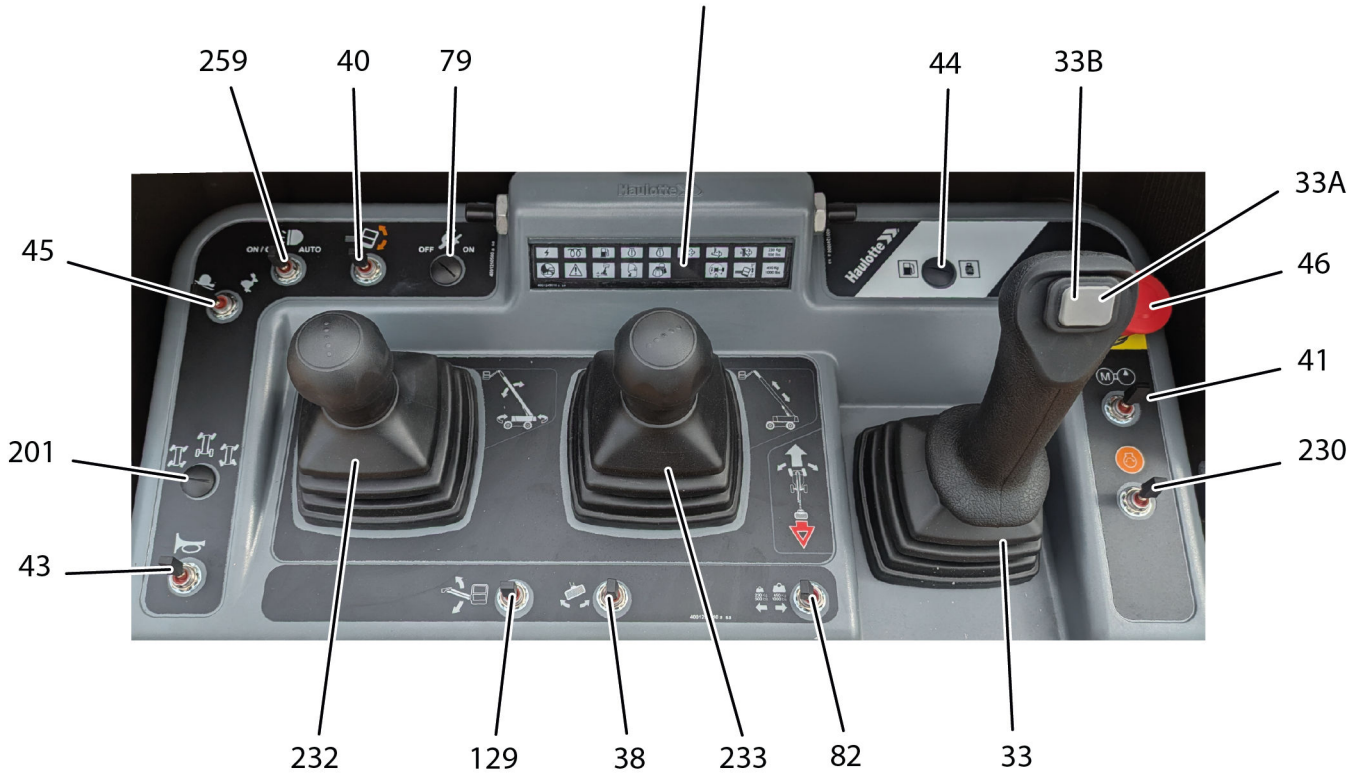

Affichage pupitre de commandes haut (Led 101-117)  
Platform control box display (Led's 101-117)



##### Controls and indicators

Marking	Name	Description	Function
33	SM902	Drive joystick	Move forward: Forward drive
			Move backwards: Reverse drive
33A	Steering button (Steering thumb / rocker switch)		Press right side of button: Steer right-According to selected mode ( 201 )
33B			Press left side of button: Steer left-According to selected mode ( 201 )
38	SA751	Platform rotation switch	Move to the right: Counter clockwise (CCW) rotation
			Move to the left: Clockwise (CW) rotation
40	SA721	Platform leveling switch	Move upwards: Raise platform
			Move downwards: Platform lowers
41	SA800	Auxiliary power switch	Toggle and hold: Back-up unit activated
			Release: Back-up unit deactivated



## B - Familiarization

Marking	Name	Description	Function
43	SA907	Horn button	Horn
44	SA304	Fuel selector <sup>(1)</sup>	LPG: Propane Gas supply G: Petrol/Liquid propane gas or diesel supply
45	SA110	Drive speed selector	 High-speed drive  Low-speed drive
46	SB802	Emergency Stop button	Pulled out: Platform control box energized Pressed in: De-energizes control system (Engine stopped)
78		Not used	
79	SA906	Generator selector <sup>(1)</sup>	Move to the left: Generator deactivated Move to the right: Generator activated
82 <sup>(2)</sup>	SA802	230 kg (500 lbs) or 450 kg (1000 lbs) load selector	Move to the left: 230 kg (500 lbs) load selected Move to the right: 450 kg (1000 lbs) load selected
129	SA621	Jib raising / lowering switch <sup>(1)</sup>	Toggle and hold: Jib raising / lowering Release: No movement
201	SA101	Steering mode selector <sup>(1)</sup>	Synchronised axle: 4 wheel steering mode 2 front steering wheels from axle Crab mode axle
230	SA303	Engine start-up / stop selector	Start or stop the engine (depending on the machine's operating status) by pressing the push-button
232	SM900	Turntable rotation joystick	Move to the right: Counter clockwise (CCW) rotation Move to the left: Clockwise (CW) rotation
		Boom lift joystick	Move forward: Boom up Move backwards: Lower boom

(1) For machines fitted with


(2) If machine equipped with dual load

## B - Familiarization


 




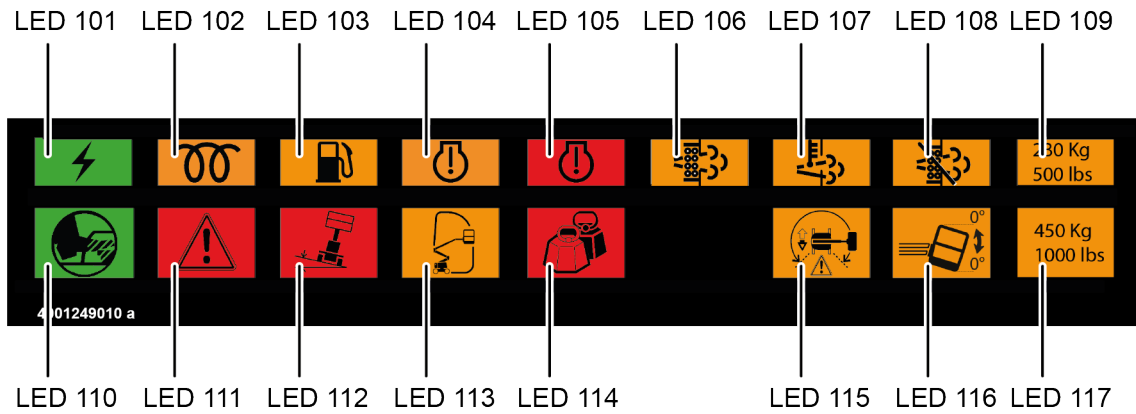

 

Marking	Name	Description	Function
233	SM901	Boom telescope joystick	Move forward: Retract boom Upper boom Move backwards: Extend boom Upper boom
259	SA910	Activ' Lighting System selector	 ON / OFF  Automatic lighting

### 3.3.2 Display Panel (LED'S 101 - 117)

#### Upper control box display












## B - Familiarization

Marking	Name	Symbol	Function
LED 101	HL900		Machine switched on: <ul style="list-style-type: none"> <li>- Rapid flashing: Machine is ON, but platform control box is not active but the ground control box is ON</li> <li>- Illuminated: Machine is turned on and platform control panel is active</li> </ul>
LED 102	HL300		Combustion engine pre-heating: <ul style="list-style-type: none"> <li>- Illuminated while engine is pre-heating</li> <li>- Off if engine started and if post-heating</li> </ul>
LED 103	HL307		Low fuel level
LED 104	HL304		Engine warning: <ul style="list-style-type: none"> <li>- Lighted in case of minor engine fault (e.g. water in the diesel, clogged air filter, etc.)</li> <li>- Lighted or flashing in case of fault managed by the engine ECU</li> </ul>
LED 105	HL305		Engine shutdown: <ul style="list-style-type: none"> <li>- Lighted in case of major engine fault (e.g. engine overheating, oil pressure, alternator fault, etc.)</li> <li>- Lighted in case of faults managed by the engine ECU</li> </ul>
LED 106 <sup>(1)</sup>	HL301		DPF regeneration required: <ul style="list-style-type: none"> <li>- Permanently lighted if the particle filter requires regeneration with a high clogging level</li> </ul>
LED 107 <sup>(1)</sup>	HL302		DPF regeneration in progress, high temperature in the exhaust system ( HEST )
LED 108 <sup>(1)</sup>	HL303		DPF regeneration inhibited
LED 109 <sup>(2)</sup>	HL805		Europe - Australia: <ul style="list-style-type: none"> <li>- 230 kg load selected: Permanently lighted whatever the position of the machine when the 230 kg load is validated, otherwise off</li> </ul>
LED 109 <sup>(2)</sup>	HL805		United States- Canada: <ul style="list-style-type: none"> <li>- 500 lbs load selected <ul style="list-style-type: none"> <li>• Permanently lighted, position of the machine in 500 lbs zone with the 500 lbs load validated</li> <li>• Flashes, the machine is in the 500 lbs zone, the low load is not validated and a telescope extension or boom lowering movement control is activated</li> </ul> </li> </ul>

(1) If engine equipped with Particulate Filter Regeneration

(2) If machine equipped with dual load

## B - Familiarization

Marking	Name	Symbol	Function
LED 110	HL807		Foot Switch: <ul style="list-style-type: none"> <li>- Illuminated when Foot Switch activated</li> <li>- Blinks after 90 s of inactivity</li> </ul>
LED 111	HL801		Faults: <ul style="list-style-type: none"> <li>- Rapid flashing: If a fault is active (current fault)</li> </ul>
LED 112	HL800		Tilt sensor : <ul style="list-style-type: none"> <li>- Illuminated when in tilt, machine stowed or unfolded</li> </ul>
LED 113	HL804		Radius limitation: <ul style="list-style-type: none"> <li>- Rapid flashing: Reach limitation system fault</li> <li>- Slow flashing: The machine is in the 230 kg (500 lbs) low load zone, the low load is validated and 450 kg (1000 lbs) heavy load is selected by the selector ( 82 )</li> <li>- Permanently lighted: Limit of work zone with movement cut-off or machine in 230 kg (500 lbs) low load zone and load not validated</li> </ul>
LED 114	HL802		Overload: <ul style="list-style-type: none"> <li>- Rapid flashing: Faulty weighing / overload system</li> <li>- Illuminated when overloaded</li> </ul>
LED 115	HL250		Turret at 180°
LED 116	HL720		Platform leveling+/- 10°: <ul style="list-style-type: none"> <li>- Illuminated if the angle of the platform reaches +/- 10° in relation to the horizontal and movement control</li> </ul>
LED 117 <sup>(2)</sup>	HL806		Europe - Australia: <ul style="list-style-type: none"> <li>- 450 kg load selected: Permanently lighted, machine in the 450 kg zone and the 450 kg load is validated, otherwise off</li> </ul>
LED 117 <sup>(2)</sup>	HL806		United States- Canada: <ul style="list-style-type: none"> <li>- 1000 lbs load selected <ul style="list-style-type: none"> <li>• Permanently lighted if the machine is in the 1000 lbs zone</li> <li>• Permanently lighted if the position of the machine is in the 1000 lbs zone and low load is not validated</li> </ul> </li> </ul>






## B - Familiarization

### 3.4 DPF (Diesel Particle Filter) (If equipped)








- The DPF (Diesel Particle Filter) system is designed to remove diesel particulate matter or soot from the exhaust gas of a diesel engine.
- The filter regeneration removes the accumulation of soot from the filter before filter clogs. This is done automatically by increasing the temperature in the filter itself in order to burn the soot.

#### 3.4.1 Kubota engine


##### Kubota engine

Machine behaviour		Filter status - Soot loading level						
		Level 0	Level 1	Level 2	Level 3	Level 4	Level 5	
<b>Regeneration of diesel particles filter</b>								
Engine derating					ON	ON	ON	
Automatic regeneration			ON	ON				
Engine idle speed increased			ON	ON	ON	ON	ON	
Active/Manual regeneration/Forced regeneration			Available	Available	Mandatory	Mandatory (Service)		
<b>Indicators</b>								
Ground control box	Platform control box	Description						
	LED 111	Failure: - Flashing				ON	ON	ON
	LED 104	Engine warning (Failure F09.07 is active): - On				ON	ON	ON
	LED 105	Engine shutdown (Failure F09.08 is active) - On					ON	ON
	LED 106	Diesel particulate filter: - Ground control box - Flashing		ON	ON	ON	ON	ON
	LED 106	Diesel particulate filter: - Platform control box - Flashing				ON	ON	ON

## B - Familiarization

Machine behaviour			Filter status - Soot loading level					
			Level 0	Level 1	Level 2	Level 3	Level 4	Level 5
	LED 107	High Exhaust System Temperature(HEST): - The temperature of the exhaust system is high - On		ON	ON	ON	ON	ON
	LED 107	High Exhaust System Temperature(HEST): - DPF regeneration in progress, high temperature in the exhaust system - Flashing		ON	ON	ON	ON	ON
	LED 108	To inhibit regeneration: - If inhibit switch is activated - On	ON	ON	ON			
<b>Sounding alarm</b>								
	Ground control box	- Manual regeneration needed				ON	ON	ON
<b>Machine state</b>								
	Machine screen DPF 0	Automatic regeneration: - Engine idle speed increased - Regeneration DPF in progress - Keep working normally		ON	ON			
	Machine screen DPF 1	Manual regeneration: - Regeneration needed - Please launch a manual regeneration - Cut-off unfolding movements				ON		
	Machine screen DPF 2	Manual regeneration: - Regeneration needed - Regeneration to be done by Kubota dealer - Cut-off unfolding movements					ON	

## B - Familiarization


Machine behaviour			Filter status - Soot loading level						
			Level 0	Level 1	Level 2	Level 3	Level 4	Level 5	
	Machine screen DPF 3	DPF is out of repair: <ul style="list-style-type: none"> <li>- Regeneration to be done by Kubota dealer</li> <li>- Cut-off unfolding movements</li> </ul>							ON
<b>Functions</b>									
Stop Emission System			ON						
Cumulated movement between arm, boom, boom telescope are forbidden						ON	ON	ON	
Machine unfolded: <ul style="list-style-type: none"> <li>- From the ground control box/From the platform control box:               <ul style="list-style-type: none"> <li>• Arm raise, boom raise, boom extension are slowed down</li> </ul> </li> </ul>						ON	ON	ON	
Machine folded: <ul style="list-style-type: none"> <li>- From the ground control box:               <ul style="list-style-type: none"> <li>• Arm raise, boom raise, boom extension are forbidden</li> </ul> </li> <li>- From the platform control box:               <ul style="list-style-type: none"> <li>• Arm raise, boom raise, boom extension are slowed down</li> </ul> </li> </ul>						ON	ON	ON	

## B - Familiarization

### 3.4.2 Automatic regeneration

The automatic regeneration occurs during normal machine usage without any interruption.






When automatic regeneration is on-going:

1.  icon lights up on ground control box.
2. DPF activation icon HL302 / LED107 on the platform control box display lights up.





### 3.4.3 Manual regeneration



The machine cannot be used during the manual regeneration cycle.

1. Park the machine in a safe stowed position outside location and away from other equipment.
2. Check that the fuel level icon  on the ground control box doesn't light-up.
3. Put the engine hood in closed position.
4. Press the regeneration button  on the ground control box and hold for 5 seconds.
5. When regeneration is initiated, the regeneration icon  on the ground control box starts blinking.
6. Engine speed increases to 2300 rpm.
7. The regeneration cycle will take approximately 15 min.
8. When regeneration is complete, all engine lights   on the ground control box are turned off. Engine speed is automatically decreased to idle speed.

### 3.4.4 To inhibit regeneration

To inhibit regeneration (indoors or in explosive atmosphere), press button  on ground control box and hold for 5 seconds. The regeneration is inhibited until cancellation. To activate regeneration, press the button  again during 5 seconds. When the regeneration is inhibited,  at ground control box and  at platform control box display light up.


### 3.4.5 To stop manual regeneration

Use this function only in case of emergency.

Regeneration process can be stopped by:

- Press the inhibition button  and hold for 5 seconds.

Or

- Press the launching regeneration button  and hold for 5 seconds.

Or

- Initiate any function movement.

## B - Familiarization

## 4 Performance Specifications

### 4.1 Technical characteristics

Use the table to select the right Haulotte machine for the job.



Do not replace parts that are essential to the stability of the machine, such as batteries or tyres, with parts that have a different weight or different specifications. The stability of the machine could be affected.

#### CE, UKCA, AS, EAC, CSA and ANSI A92.20 standards

Machine	HT23RTJ O	HT67RTJ O	HT23RTJ PRO	HT67RTJ PRO
<b>Characteristics - Dimensions</b>	<b>SI</b>	<b>Imp.</b>	<b>SI</b>	<b>Imp.</b>
Maximum working height	22,5 m	74 ft	22,5 m	74 ft
Maximum platform height	20,5 m	67 ft 5 in	20,5 m	67 ft 5 in
Maximum horizontal reach - 230 kg - 500 lbs	18,2 m	60 ft	18,2 m	60 ft
Maximum horizontal reach - 450 kg - 1000 lbs	13,95 m	45 ft 9 in	13,95 m	45 ft 9 in
Maximum outreach above the ground - 230 kg - 500 lbs	17,7 m	58 ft 5 in	17,7 m	58 ft 5 in
Maximum outreach above the ground - 450 kg - 1000 lbs	13,45 m	44 ft 2 in	13,45 m	44 ft 2 in
Forward tail swing according to frame dimension	0,53 m	21 in	0,53 m	21 in
Lateral tail swing according to frame dimension	1,09 m	3 ft 7 in	1,09 m	3 ft 7 in
Maximum platform height before driving speed restriction	5,4 m	17 ft 11 in	5,4 m	17 ft 11 in
Maximum boom articulation point height	2,08 m	6 ft 10 in	2,08 m	6 ft 10 in
Negative maximum platform height	- 4 m	- 13 ft 1 in	- 4 m	- 13 ft 1 in
Turret rotation	360° Continuous			
Jib working range	133° (+68°/ -65°)			
Basket rotation angle	180° (+/-90°)			
Boom rotation angle	90° (+75°/-15°)			
Total weight	13 320 kg	29,370 lbs	13 400 kg	29,540 lbs
Total weight - With sand tires	13 520 kg	29,800 lbs	13 600 kg	29,980 lbs

## B - Familiarization

Machine	HT23RTJ O	HT67RTJ O	HT23RTJ PRO	HT67RTJ PRO
Maximum platform capacity	230 kg	500 lbs	230 kg	500 lbs
Maximum platform capacity - Dual load <sup>(1)</sup>	230 kg - 450 kg	500 lbs - 1000 lbs	230 kg - 450 kg	500 lbs - 1000 lbs
Maximum number of occupants - 230 kg - 500 lbs	2			
Maximum number of occupants - 450 kg - 1000 lbs	3			
Maximum wind speed	45 km/h (12,5 m/s)	28 mph (41 ft/s)	45 km/h (12,5 m/s)	28 mph (41 ft/s)
Manual force	400 N - 90 lbf			
Gradeability	40%			
Sideslope	25%			
Maximum rated slope allowed	5°			
Maximum load on wheel	7000 daN	15,435 lbs	7000 daN	15,435 lbs
Maximum ground pressure of wheel on paved ground	12,5 daN/cm <sup>2</sup>	2.61 lb/ft <sup>2</sup>	12,5 daN/cm <sup>2</sup>	2.61 lb/ft <sup>2</sup>
Drive speed	6,5 km/h	4 mph	6,5 km/h	4 mph
Maximum freewheel speed during towed operation	1,6 km/h	1 mph	1,6 km/h	1 mph
Outside turning radius	6,3 m	20 ft 8 in	3,4 m	11 ft 2 in
Inside turning radius	4,2 m	13 ft 9 in	1,8 m	5 ft 11 in
Foam-filled tires/tyres	385/65 - 22.5			
<b>Specifications - Performance</b>				
Operating temperature	From - 20°C to + 50°C (From - 4°F to + 122°F)			
Operating temperature For EAC only - If machine equipped with the option	From - 30°C to + 50°C (From - 22°F to + 122°F)			
Storage temperature	From - 40°C to + 70°C (From - 40°F to + 158°F)			
<b>Energy storage</b>				
Type of battery	Starter battery			

(1) If machine equipped with dual load

## B - Familiarization

Machine	HT23RTJ O	HT67RTJ O	HT23RTJ PRO	HT67RTJ PRO
Cold cranking ampere	800 A - 1050 A			
Battery voltage	12 V			
Battery capacity	100 Ah - 110 Ah			
Hydraulic tank capacity	100 L	26 gal US	100 L	26 gal US
Fuel tank capacity	160 L	42 gal US	160 L	42 gal US

## B - Familiarization

## Strong wind

Machine	HT23RTJ O SW	
	SI	Imp.
<b>Characteristics - Dimensions</b>		
Maximum working height	22,5 m	74 ft
Maximum platform height	20,5 m	67 ft 5 in
Maximum horizontal reach - 230 kg - 500 lbs	18,2 m	60 ft
Maximum outreach above the ground - 230 kg - 500 lbs	17,7 m	58 ft 5 in
Forward tail swing according to frame dimension	0,53 m	21 in
Lateral tail swing according to frame dimension	1,09 m	3 ft 7 in
Maximum platform height before driving speed restriction	5,4 m	17 ft 11 in
Maximum boom articulation point height	2,08 m	6 ft 10 in
Negative maximum platform height	- 4 m	- 13 ft 1 in
Turret rotation	360° Continuous	
Jib working range	133° (+68° / -65°)	
Basket rotation angle	180° (+/-90°)	
Boom rotation angle	90° (+75°/-15°)	
Total weight	13 320 kg	29,370 lbs
Maximum platform capacity	230 kg	500 lbs
Maximum number of occupants - 230 kg - 500 lbs	2	
Maximum wind speed	60 km/h (16,7 m/s)	37 mph (58 ft/s)
Manual force - CE - UKCA - AS	400 N - 90 lbf	
Gradeability	40%	
Sideslope	25%	
Maximum rated slope allowed - CE - UKCA - AS	4°	
Maximum load on wheel	7000 daN	15,435 lbs
Maximum ground pressure of wheel on paved ground	12,5 daN/cm <sup>2</sup>	2.61 lb/ft <sup>2</sup>
Drive speed	6,5 km/h	4 mph
Maximum freewheel speed during towed operation	1,6 km/h	1 mph
Outside turning radius	6,3 m	20 ft 8 in
Inside turning radius	4,2 m	13 ft 9 in

## B - Familiarization

Machine	HT23RTJ O SW	
Foam-filled tires/tyres	385/65 - 22.5	
<b>Specifications - Performance</b>		
Operating temperature	From - 20°C to + 50°C (From - 4°F to + 122°F)	
Operating temperature For EAC only - If machine equipped with the option	From - 30°C to + 50°C (From - 22°F to + 122°F)	
Storage temperature	From - 40°C to + 70°C (From - 40°F to + 158°F)	
<b>Energy storage</b>		
Type of battery	Starter battery	
Cold cranking ampere	800 A - 1050 A	
Battery voltage	12 V	
Battery capacity	100 Ah - 110 Ah	
Hydraulic tank capacity	100 L	26 gal US
Fuel tank capacity	160 L	42 gal US

## B - Familiarization

## Strong wind

Machine	HT23RTJ PRO SW	
Characteristics - Dimensions	SI	Imp.
Maximum working height	22,5 m	74 ft
Maximum platform height	20,5 m	67 ft 5 in
Maximum horizontal reach - 230 kg - 500 lbs	18,2 m	60 ft
Maximum outreach above the ground - 230 kg - 500 lbs	17,7 m	58 ft 5 in
Forward tail swing according to frame dimension	0,53 m	21 in
Lateral tail swing according to frame dimension	1,09 m	3 ft 7 in
Maximum platform height before driving speed restriction	5,4 m	17 ft 11 in
Maximum boom articulation point height	2,08 m	6 ft 10 in
Negative maximum platform height	- 4 m	- 13 ft 1 in
Turret rotation	360° Continuous	
Jib working range	133° (+68° / -65°)	
Basket rotation angle	180° (+/-90°)	
Boom rotation angle	90° (+75° / -15°)	
Total weight	13 400 kg	29,540 lbs
Maximum platform capacity	230 kg	500 lbs
Maximum number of occupants - 230 kg - 500 lbs	2	
Maximum wind speed	60 km/h (16,7 m/s)	37 mph (58 ft/s)
Manual force - CE - UKCA - AS	400 N - 90 lbf	
Gradeability	40%	
Sideslope	25%	
Maximum rated slope allowed - CE - UKCA - AS	4°	
Maximum load on wheel	7000 daN	15,435 lbs
Maximum ground pressure of wheel on paved ground	12,5 daN/cm <sup>2</sup>	2.61 lb/ft <sup>2</sup>
Drive speed	6,5 km/h	4 mph
Maximum freewheel speed during towed operation	1,6 km/h	1 mph
Outside turning radius	3,4 m	11 ft 2 in
Inside turning radius	1,8 m	5 ft 11 in

## B - Familiarization

Machine	HT23RTJ PRO SW	
Foam-filled tires/tyres	385/65 - 22.5	
<b>Specifications - Performance</b>		
Operating temperature	From - 20°C to + 50°C (From - 4°F to + 122°F)	
Operating temperature For EAC only - If machine equipped with the option	From - 30°C to + 50°C (From - 22°F to + 122°F)	
Storage temperature	From - 40°C to + 70°C (From - 40°F to + 158°F)	
<b>Energy storage</b>		
Type of battery	Starter battery	
Cold cranking ampere	800 A - 1050 A	
Battery voltage	12 V	
Battery capacity	100 Ah - 110 Ah	
Hydraulic tank capacity	100 L	26 gal US
Fuel tank capacity	160 L	42 gal US

### 4.2 Engine specifications

#### 4.2.1 Kubota engines

Engine - Tier III / China IV		
Engine type	Kubota V2403 - M - E3	
Engine power	36,5 kW - 48,9 hp	
CO emission	1 g/kWh	
HC + NO emission	6,44 g/kWh	
Particles emission	0,43 g/kWh	
Av fuel consumption	4,5 l/h - 1.19 gal/h	
Fuel type	Diesel Fuel Only	

**B - Familiarization**

<b>Engine - Tier IV</b>	
Engine type	Kubota V2403 - CR - TI - E4B
Engine power	48,6 kW - 65,2 hp
CO emission	0,6 g/kWh
HC + NO emission	3,7 g/kWh
Particles emission	0,2 g/kWh
Av fuel consumption	5 l/h - 1.32 gal/h
Fuel type	Diesel Fuel Only
<b>Engine - Tier IV DPF</b>	
Engine type	Kubota V2403 CR
Engine power	37,4 kW - 50,2 hp
CO emission	0,07 g/kWh
HC + NO emission	2,73 g/kWh
Particles emission	0,02 g/kWh
Av fuel consumption	4 l/h - 1.05 gal/h
Fuel type	Diesel Fuel Only
<b>Engine - Stage V</b>	
Engine type	KUBOTA D1803 CR TE5
Engine power	37 kW - 49,6 hp
CO emission	0,032 g/kWh
HC + NO emission	3,12 g/kWh
Particles emission	0,0009 g/kWh
Av fuel consumption	3,4 l/h - 0.89 gal/h
Fuel type	Diesel Fuel Only
Engine type	KUBOTA V2403 CR TE5B
Engine power	48,6 kW - 65,1 hp


## B - Familiarization

Engine - Stage V	
CO emission	0,032 g/kWh
HC + NO emission	3,128 g/kWh
Particles emission	0,0009 g/kWh
Av fuel consumption	4,6 l/h - 1.21 gal/h
Fuel type	Diesel Fuel Only

Engine - Dual Fuel (Petrol / Propane Gas)	
Engine type	Kubota WG 2503 - GL - E03
Engine power	45,5 kW - 61 hp
CO emission	1,9 g/kWh
HC + NO emission	0,2 g/kWh
Fuel type	Petrol/Propane Gas (liquified)

For China only:

## HT23 RTJ O - HT23 RTJ PRO - Kubota Engine

环保信息标签		4001239740 b
达到 GB20891-2014 第四阶段排放标准		生产日期: <input type="text"/>
环保信息公开编号: <input type="text"/>		
基本信息	型号: <input type="text"/>	名称: 高空作业平台
	商标: 	机械类型: 工程机械
	■ 机械生产企业名称: 欧胜高空升降平台设备制造(常州)有限公司	
	■ 机械进口企业名称: 欧历胜贸易(上海)有限公司	
	发动机型号: <input type="text"/>	燃料喷射系统形式: 泵喷嘴
	发动机生产厂家名称: 久保田 机械编号: <input type="text"/>	
环保关键 ● 零部件	ECU, 喷油泵, 喷油器, 增压器, EGR, 排气后处理系统	


## 4.2.2 Deutz engines

Engine - Tier IV Final	
Engine type	Deutz TD 2,2
Engine power	45,5 kW - 61 hp
CO emission	0,7 g/kWh
HC + NO emission	4,2 g/kWh
Particles emission	0,02 g/kWh
Av fuel consumption	4,8 l/h - 1.26 gal/h
Fuel type	Diesel

## B - Familiarization


### 4.3 Working area / Range of motion

HT23RTJ O - HT23RTJ O SW - HT67RTJ O - HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO

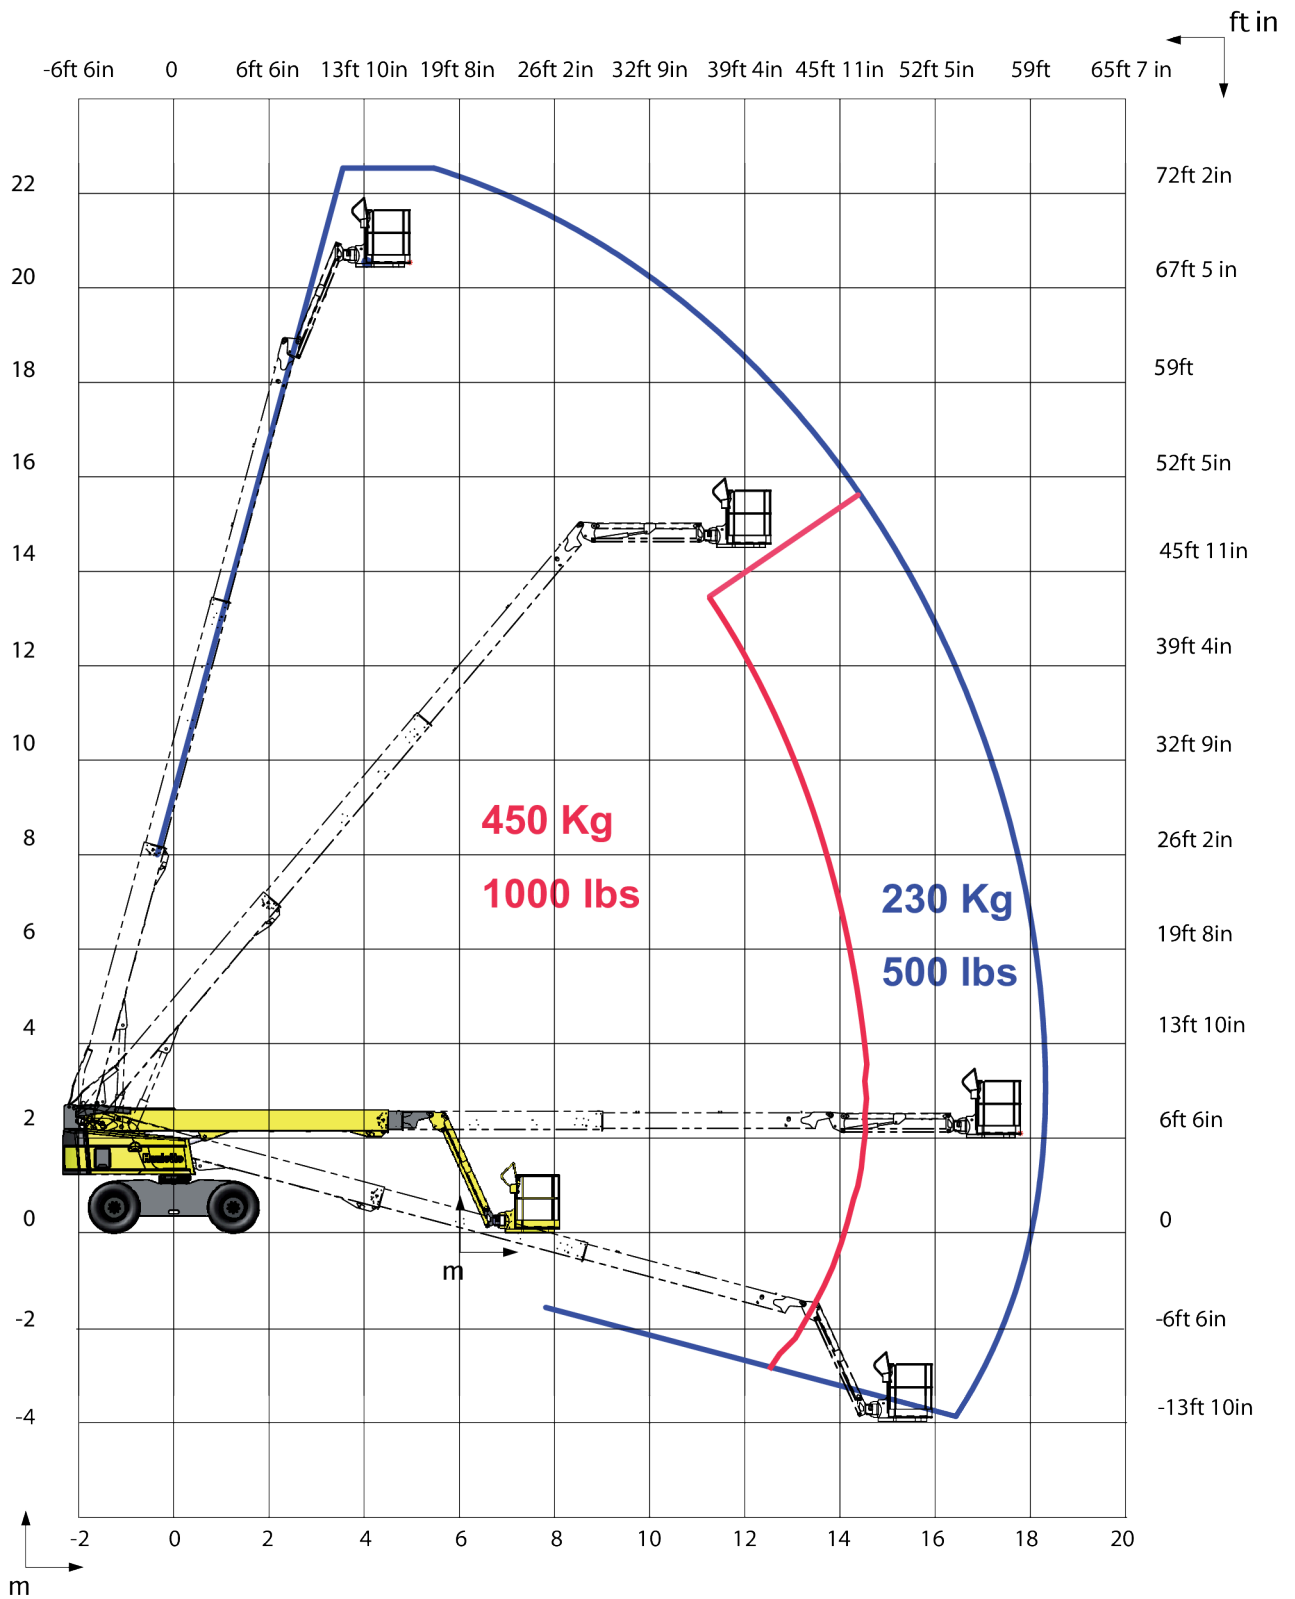

## 5 Decals and markings locations

CE, UKCA and AS standards - HT23RTJ O - HT23RTJ PRO

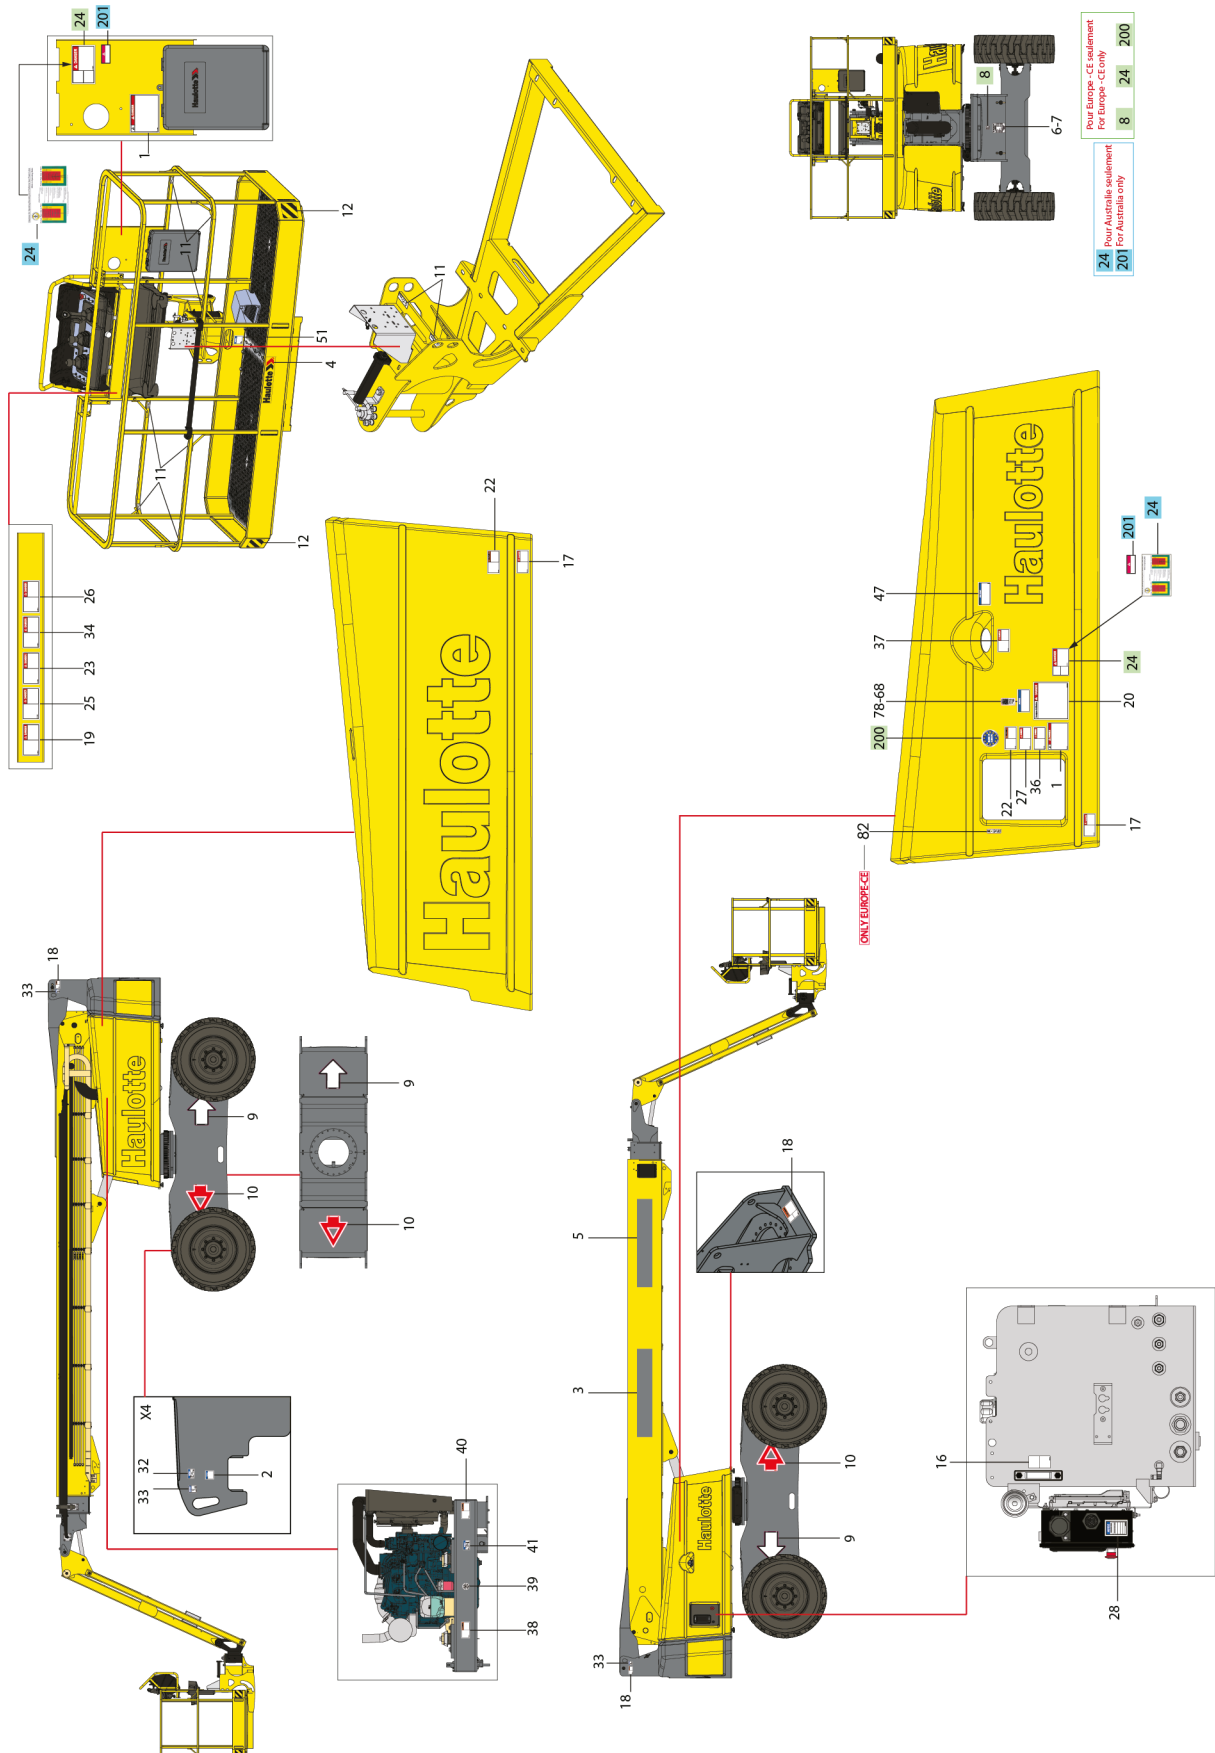

**B - Familiarization****CE, UKCA and AS standards - HT23RTJ O - HT23RTJ PRO**

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
1	Red	Height of the floor and load	2	4000701920	
2	Blue	Maximum Pressure per Tire - Floor Loading (Standard foam)	4	4000025100	
2	Blue	Maximum Pressure per Tire - Floor Loading (Solid tires/tyres)	4	4001258030	
3	Other	Commercial name - Bright machine	1	4000388920	4000388960
3	Other	Commercial name - Dark machine	1	4000388930	4000388970
4	Other	Decal HAULOTTE® - Small format - Bright machine	1	307P217080	
4	Other	Decal HAULOTTE® - Small format - Dark machine	1	307P224740	
4	Other	Decal HAULOTTE® - Small format - Red machine	1	307P220360	
5	Other	Decal HAULOTTE® - Large size - Bright machine	1	4000365570	
5	Other	Decal HAULOTTE® - Large size - Dark machine	1	4000390040	
5	Other	Decal HAULOTTE® - Large size - Red machine	1	4000390030	
6	Other	Identification plate	1	4001243980	
8	Other	Noise emission level	1	For CE and UKCA standards only: 3078148700	
9	Other	Control of movements - WHITE directional arrow	3	4001319630	
10	Other	Control of movements - RED directional arrow	3	4001319640	
11	Other	Lanyard attachment points	9	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	4	4000421700	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	4000024800	
18	Orange	Hand crushing hazard - Risk of crushed hands	3	4000024890	

**B - Familiarization**

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
19	Red	Operation instructions	1	4000025140	
20	Red	Operation instructions	1	In german (CE and UKCA standards) : 307P222730	
20	Red	Operation instructions	1	In english (CE, UKCA and AS standards) : 307P222740	
20	Red	Operation instructions	1	In chineseese (CE and UKCA standards) : 4000698920	
20	Red	Operation instructions	1	In croatian (CE and UKCA standards) : 4000360810	
20	Red	Operation instructions	1	In danish (CE and UKCA standards) : 307P222760	
20	Red	Operation instructions	1	In spanish (CE and UKCA standards) : 307P222770	
20	Red	Operation instructions	1	In estonian (CE and UKCA standards) : 4000360870	
20	Red	Operation instructions	1	In finnish (CE standard) : 307P222780	
20	Red	Operation instructions	1	In french (CE and UKCA standards) : 3078149030	
20	Red	Operation instructions	1	In dutch (CE and UKCA standards) : 307P222790	
20	Red	Operation instructions	1	In hungarian (CE and UKCA standards) : 4000360890	
20	Red	Operation instructions	1	In italian (CE and UKCA standards) : 307P222800	
20	Red	Operation instructions	1	In japanese (CE and UKCA standards) : 4000359830	
20	Red	Operation instructions	1	In latvian (CE and UKCA standards) : 4000359840	
20	Red	Operation instructions	1	In lithuanian (CE and UKCA standards) : 4000359850	
20	Red	Operation instructions	1	In norwegian (CE and UKCA standards) : 4000359900	
20	Red	Operation instructions	1	In polish (CE and UKCA standards) : 4000359860	
20	Red	Operation instructions	1	In portuguese (CE and UKCA standards) : 307P222810	
20	Red	Operation instructions	1	In romanian (CE and UKCA standards) : 4000359870	

## B - Familiarization

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
20	Red	Operation instructions	1	In Russian (CE and UKCA standards) : 4000359920	
20	Red	Operation instructions	1	In slovakian (CE and UKCA standards) : 4000359880	
20	Red	Operation instructions	1	In slovenian (CE and UKCA standards) : 4000359890	
20	Red	Operation instructions	1	In swedish (CE and UKCA standards) : 307P222820	
20	Red	Operation instructions	1	In ukrainian (CE and UKCA standards) : 4000359910	
22	Orange	Wound foot - Do not place foot	2		4000027090
23	Red	Risk of crushing - Driving direction	1		400024690
24	Red	Danger of electrocution	2	For CE and UKCA standards only: 4000025070 AS standard only: 4000227500	
25	Red	Risk of crushing - Closing drop rail	1		4000025080
26	Red	Danger of electrocution - Ground for welding	1		4000027100
27	Red	Verification of tilt operation	1		4000027110
28	Red	Do not interchange	1		4000504670
32	Blue	Anchorage point - Traction	6		4000027310
33	Blue	Anchorage point - Elevation	4		4000027330
34	Red	Risk of electrocution - Water projection	1		4000025130
36	Red	Risk of crushing - Emergency lowering	1		4000027460
37	Red	Risks of explosion - Tank	1		4000027370
38	Orange	Hand crushing hazard - Burn injuries	1		4000027450
39	Other	Engine oil CJ-4	1		4000019700
40	Orange	Hand crushing hazard - Snapping up	1		4000027430
41	Blue	Revolving cradle	1		3078151730

**B - Familiarization**

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
47	Blue	Remplissage carburant - TIER IV	1	307P232480	
51	Blue	Information - Outlet 240V	1	4000027120	
68	Blue	Information - Transport height	1	4000417570	
78	Other	QR Code - MyCompanion	1	4001281820	
82	Other	Regeneration of diesel particles filter (STAGE V engine only)	1	For CE and UKCA standards only: 4001075370	
200	Other	Made in Europe	1	For CE and UKCA standards only: 4000137690	
201	Red	Wearing of a safety harness is essential	2	AS standard only: 3078144520	

## B - Familiarization

## CE, UKCA and AS standards - HT23RTJ O SW - HT23RTJ PRO SW

Marking	Color	Description	Quantity	HT23RTJ O SW	HT23RTJ PRO SW
1	Red	Height of the floor and load	2	4000701940	
1	Red	Height of the floor and load - Dual load	2	4000701950	
2	Blue	Maximum Pressure per Tire - Floor Loading	4	4000025100	
3	Other	Commercial name - Bright machine	1	4000388920	4000388960
3	Other	Commercial name - Dark machine	1	4000388930	4000388970
4	Other	Decal HAULOTTE® - Small format - Bright machine	1	307P217080	
4	Other	Decal HAULOTTE® - Small format - Dark machine	1	307P224740	
4	Other	Decal HAULOTTE® - Small format - Red machine	1	307P220360	
5	Other	Decal HAULOTTE® - Large size - Bright machine	1	4000365570	
5	Other	Decal HAULOTTE® Large size - Dark machine	1	4000390040	
5	Other	Decal HAULOTTE® - Large size - Red machine	1	4000390030	
6	Other	Identification plate	1	4001243980	
8	Other	Noise emission level	1	For CE and UKCA standards only: 4000012860	
9	Other	Control of movements - WHITE directional arrow	3	4001319630	
10	Other	Control of movements - RED directional arrow	3	4001319640	
11	Other	Lanyard attachment points	9	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	4	4000421700	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	4000024800	
18	Orange	Hand crushing hazard - Risk of crushed hands	3	4000024890	
19	Red	Operation instructions	1	4000025140	

**B - Familiarization**

Marking	Color	Description	Quantity	HT23RTJ O SW	HT23RTJ PRO SW
20	Red	Operation instructions	1	In german (CE and UKCA standards) : 307P222730	
20	Red	Operation instructions	1	In english (CE, UKCA and AS standards) : 307P222740	
20	Red	Operation instructions	1	In chinese (CE and UKCA standards) : 4000698920	
20	Red	Operation instructions	1	In croatian (CE and UKCA standards) : 4000360810	
20	Red	Operation instructions	1	In danish (CE and UKCA standards) : 307P222760	
20	Red	Operation instructions	1	In spanish (CE and UKCA standards) : 307P222770	
20	Red	Operation instructions	1	In estonian (CE and UKCA standards) : 4000360870	
20	Red	Operation instructions	1	In finnish (CE and UKCA standards) : 307P222780	
20	Red	Operation instructions	1	In french (CE and UKCA standards) : 3078149030	
20	Red	Operation instructions	1	In dutch (CE and UKCA standards) : 307P222790	
20	Red	Operation instructions	1	In hungarian (CE and UKCA standards) : 4000360890	
20	Red	Operation instructions	1	In italian (CE and UKCA standards) : 307P222800	
20	Red	Operation instructions	1	In japanese (CE and UKCA standards) : 4000359830	
20	Red	Operation instructions	1	In latvian (CE and UKCA standards) : 4000359840	
20	Red	Operation instructions	1	In lithuanian (CE and UKCA standards) : 4000359850	
20	Red	Operation instructions	1	In norwegian (CE and UKCA standards) : 4000359900	
20	Red	Operation instructions	1	In polish (CE and UKCA standards) : 4000359860	
20	Red	Operation instructions	1	In portuguese (CE and UKCA standards) : 307P222810	
20	Red	Operation instructions	1	In romanian (CE and UKCA standards) : 4000359870	

**B - Familiarization**


Marking	Color	Description	Quantity	HT23RTJ O SW	HT23RTJ PRO SW
20	Red	Operation instructions	1	In Russian (CE and UKCA standards) : 4000359920	
20	Red	Operation instructions	1	In slovakian (CE and UKCA standards) : 4000359880	
20	Red	Operation instructions	1	In slovenian (CE and UKCA standards) : 4000359890	
20	Red	Operation instructions	1	In swedish (CE and UKCA standards) : 307P222820	
20	Red	Operation instructions	1	In ukrainian (CE and UKCA standards) : 4000359910	
22	Orange	Wound foot - Do not place foot	2		4000027090
23	Red	Risk of crushing - Driving direction	1		400024690
24	Red	Danger of electrocution	2	For CE and UKCA standards only: 4000025070 AS standard only: 4000227500	
25	Red	Risk of crushing - Closing drop rail	1		4000025080
26	Red	Danger of electrocution - Ground for welding	1		4000027100
27	Red	Verification of tilt operation	1		4000027110
28	Red	Do not interchange	1		4000504670
32	Blue	Anchorage point - Traction	6		4000027310
33	Blue	Anchorage point - Elevation	4		4000027330
34	Red	Risk of electrocution - Water projection	1		4000025130
36	Red	Risk of crushing - Emergency lowering	1		4000027460
37	Red	Risks of explosion - Tank	1		4000027370
38	Orange	Hand crushing hazard - Burn injuries	1		4000027450
39	Other	Engine oil CJ-4	1		4000019700
40	Orange	Hand crushing hazard - Snapping up	1		4000027430
41	Blue	Revolving cradle	1		3078151730

**B - Familiarization**

Marking	Color	Description	Quantity	HT23RTJ O SW	HT23RTJ PRO SW
47	Blue	Remplissage carburant - TIER IV	1	307P232480	
51	Blue	Information - Outlet 240V	1	4000027120	
68	Blue	Information - Transport height	1	4000417570	
78	Other	QR Code - MyCompanion	1	4001281820	
82	Other	Regeneration of diesel particles filter (STAGE V engine only)	1	For CE and UKCA standards only: 4001075370	
200	Other	Made in Europe	1	For CE and UKCA standards only: 4000137690	
201	Red	Wearing of a safety harness is essential	2	AS standard only: 3078144520	

B - Familiarization

EAC standard - HT23RTJ O - HT23RTJ PRO

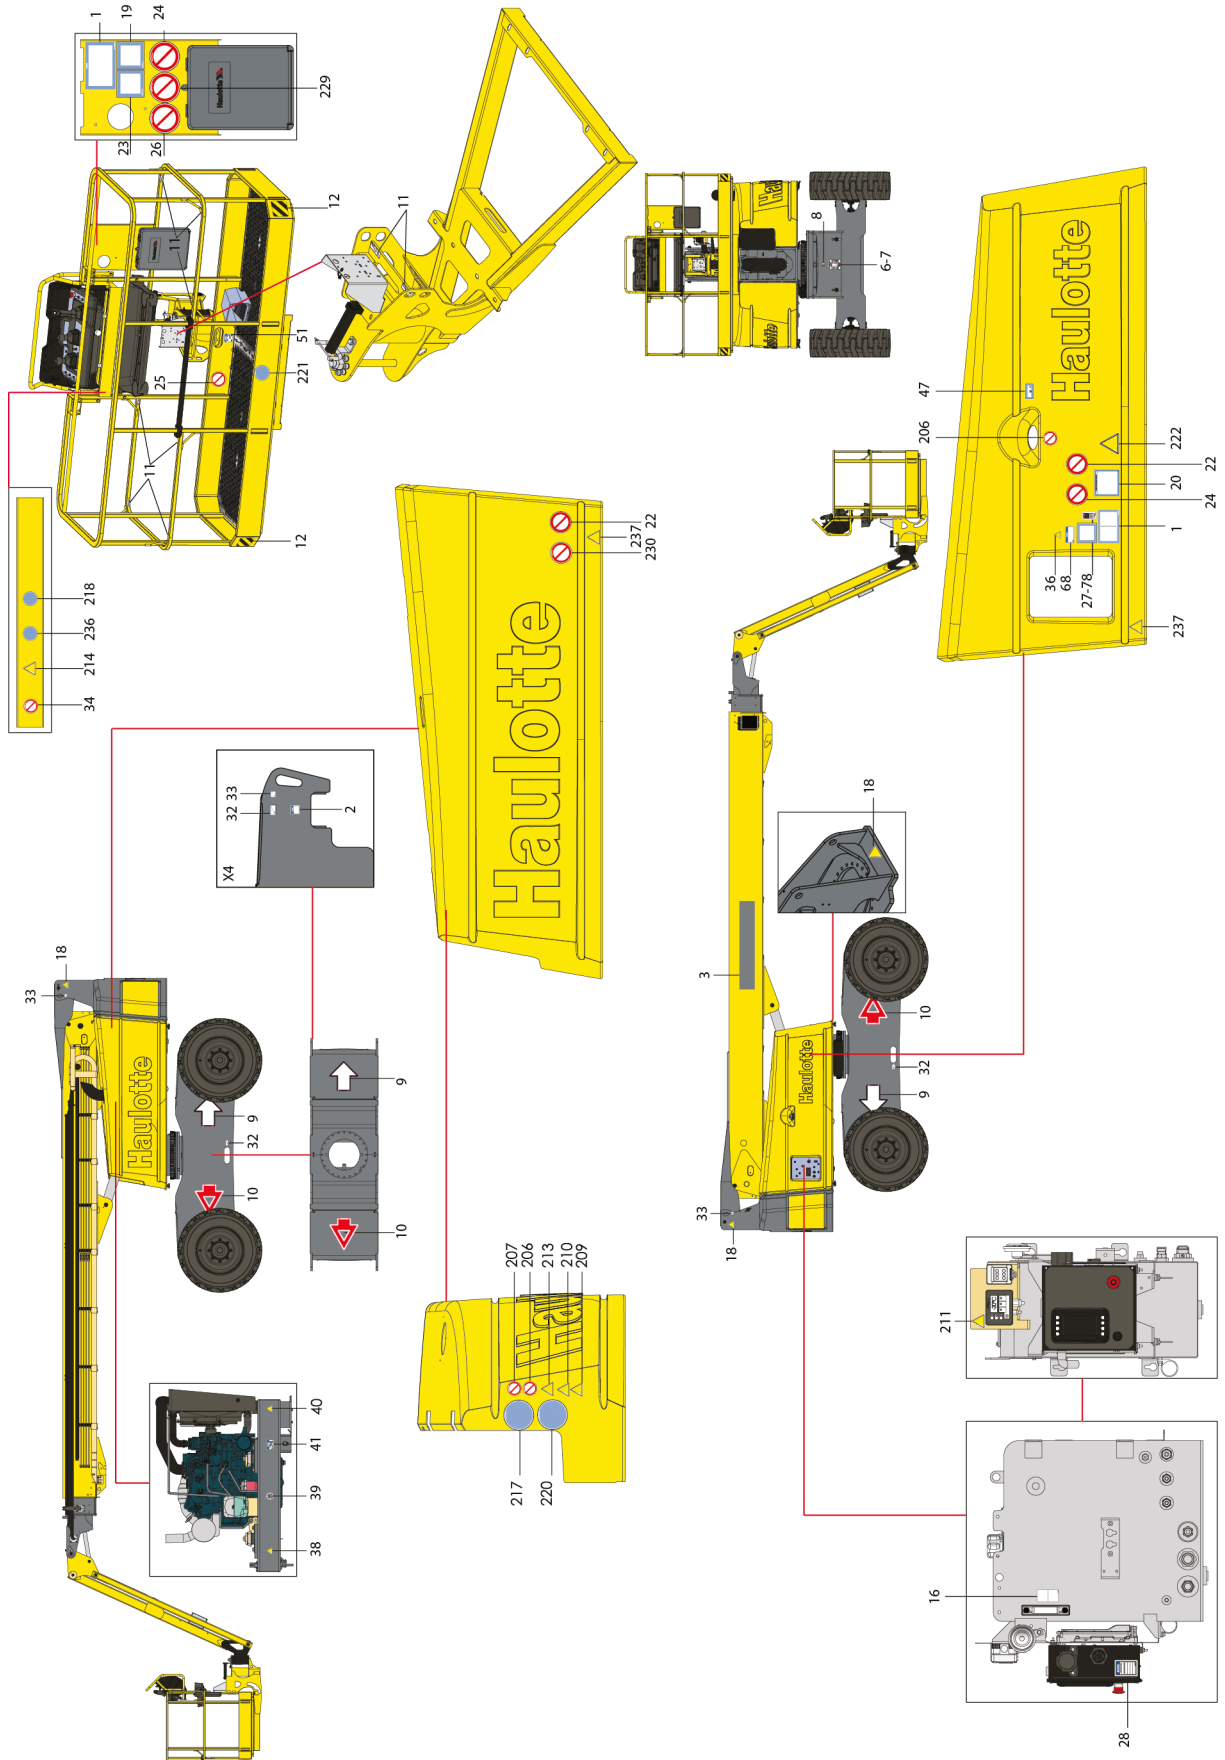

## B - Familiarization

## EAC standard - HT23RTJ O - HT23RTJ PRO

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
1	Red	Height of the floor and load	2	4000174860	
2	Blue	Maximum Pressure per Tire - Floor Loading (Standard foam)	4	4000025100	
2	Blue	Maximum Pressure per Tire - Floor Loading (Solid tires/tyres)	4	4001258030	
3	Other	Commercial name - Bright machine	1	4000388920	4000388960
3	Other	Commercial name - Dark machine	1	4000388930	4000388970
6	Other	Identification plate	1	For Russia: 4000278870 For Ukraine: 307P227830	
8	Other	Noise emission level	1	3078148700	
2	Blue	Maximum Pressure per Tire - Floor Loading	4	4000025100	
9	Other	Control of movements - WHITE directional arrow	3	4001319630	
10	Other	Control of movements - RED directional arrow	3	4001319640	
11	Other	Lanyard attachment points	9	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	4	4000421700	
16	Other	Max and min oil level	1	307P221060	
18	Orange	Hand crushing hazard - Risk of crushed hands	3	307P227660	
19	Red	Operation instructions	1	For Russia: 307P227190 For Ukraine: 307P227840	
20	Red	Operation instructions	1	In Russian (CE standard) : 4000359920 In ukrainian (CE standard) : 4000359910	
22	Orange	Wound foot - Do not place foot	2	307P227010	
23	Red	Risk of crushing - Driving direction	1	307P227040	
24	Red	Danger of electrocution	2	307P226960	
25	Red	Risk of crushing - Closing drop rail	1	307P226950	
26	Red	Danger of electrocution - Ground for welding	1	307P226970	

**B - Familiarization**


Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
27	Red	Verification of tilt operation	1	For Russia: 307P227060 For Ukraine: 307P227870	
28	Red	Do not interchange	1	4000504670	
32	Blue	Anchorage point - Traction	6	4000135970	
33	Blue	Anchorage point - Elevation	4	4000135960	
34	Red	Risk of electrocution - Water projection	2	307P226780	
36	Red	Risk of crushing - Emergency lowering	1	4000014290	
38	Orange	Hand crushing hazard - Burn injuries	1	4000200810	
39	Other	Engine oil CJ-4	1	4000318680	
40	Orange	Hand crushing hazard - Snapping up	1	307P226940	
41	Other	Revolving cradle	1	307P215290	
47	Blue	Remplissage carburant - TIER IV	1	For Russia: 4000416640 For Ukraine: 4000416650	
51	Blue	Information - Outlet 240V	1	4000027120	
68	Other	Transport height	1	4000417570	
78	Other	QR Code - MyCompanion	1	4001281820	
206	Red	Flames prohibited	2	307P226750	
207	Red	Smoking forbidden	1	307P226760	
209	Yellow	Battery danger	1	307P226790	
210	Yellow	Fire Hazard	1	307P226800	
211	Yellow	Electrical danger	1	307P226810	
213	Yellow	Corrosion hazard	1	307P226830	
214	Yellow	Danger unstable side	1	307P226930	
217	Blue	Caution glasses	1	307P227460	
218	Blue	Caution helmet compulsory	1	307P226680	
220	Blue	Hand protection compulsory	1	307P227490	
221	Blue	Obligatory routing	1	307P227510	

## B - Familiarization

Marking	Color	Description	Quantity	HT23RTJ O	HT23RTJ PRO
222	Yellow	Danger unstable side	1	307P227680	
229	Red	Do not travel down slopes in high speed	1	307P226990	
230	Red	No admittance to unauthorized persons	1	307P227560	
236	Blue	Caution glasses	1	307P226670	
237	Yellow	Risk of crushing	2	307P227670	

B - Familiarization

ANSI and CSA standards - HT67RTJ O - HT67RTJ PRO

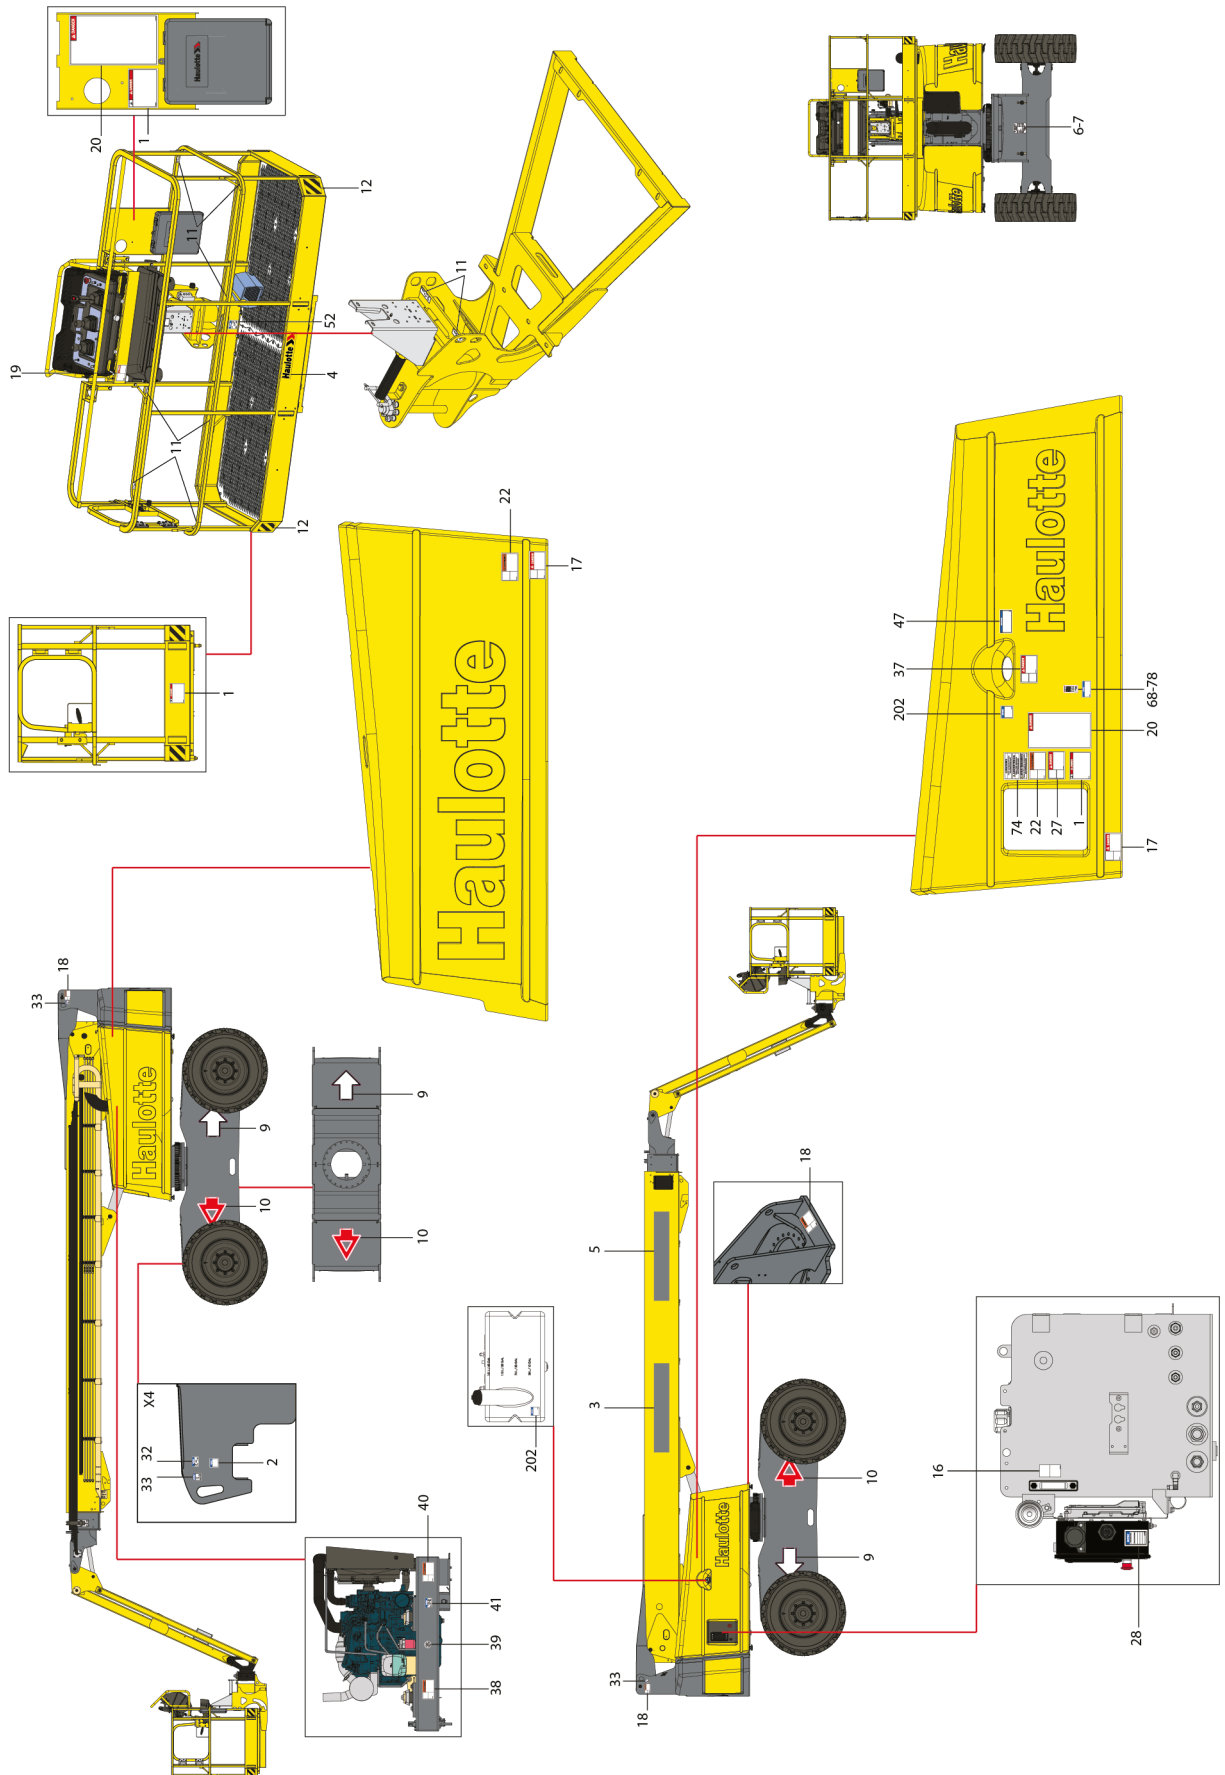

**B - Familiarization****ANSI and CSA standards - HT67RTJ O - HT67RTJ PRO**

Marking	Color	Description	Quantity	HT67RTJ O	HT67RTJ PRO
1	Red	Height of the floor and load	3	4000701920	
2	Blue	Maximum Pressure per Tire - Floor Loading (Standard foam)	4	4000025120	
2	Blue	Maximum Pressure per Tire - Floor Loading (Solid tires/tyres)	4	4001258030	
3	Other	Commercial name - Bright machine	1	4000389630	4000389040
3	Other	Commercial name - Dark machine	1	4000389640	4000389050
4	Other	Decal HAULOTTE® - Small format - Bright machine	1	307P217080	
4	Other	Decal HAULOTTE® - Small format - Dark machine	1	307P224740	
4	Other	Decal HAULOTTE® - Small format - Red machine	1	307P220360	
5	Other	Decal HAULOTTE® - Large size - Bright machine	1	4000365570	
5	Other	Decal HAULOTTE® - Large size - Dark machine	1	4000390040	
5	Other	Decal HAULOTTE® - Large size - Red machine	1	4000390030	
6	Other	Identification plate	1	4000700170	
9	Other	Control of movements - WHITE directional arrow	3	4001319630	
10	Other	Control of movements - RED directional arrow	3	4001319640	
11	Other	Lanyard attachment points	9	307P216290	
12	Other	Material risk - Yellow and black adhesive tape	4	4000421700	
16	Other	Max and min oil level	1	307P221060	
17	Red	Risk of crushing	2	In english: 4000024640 In french: 4000067680 In spanish: 4000086460	
18	Orange	Hand crushing hazard - Risk of crushed hands	3	In english: 4000024770 In french: 4000067110 In spanish: 4000086490	
19	Red	Operation instructions	1	4000025140	

**B - Familiarization**

Marking	Color	Description	Quantity	HT67RTJ O	HT67RTJ PRO
20	Red	Operation instructions	2	In english: 4000027570 In french: 4000068880 In spanish: 4000086640	
22	Orange	Wound foot - Do not place foot	4	In english: 4000024840 In french: 4000068180 In spanish: 4000086610	
27	Red	Verification of tilt operation	1	In english: 4000024860 In french: 4000068090 In spanish: 4000086520	
28	Red	Do not interchange	1	4000504670	
32	Blue	Anchorage point - Traction	4	4000027310	
33	Blue	Anchorage point - Elevation	6	4000027330	
37	Red	Explosion hazard	1	In english: 4000025010 In french: 4000068130 In spanish: 4000086560	
38	Orange	Hand crushing hazard - Heat burns	1	In english: 4000025040 In french: 4000068110 In spanish: 4000086540	
39	Other	Oil CJ 4 (if fitted)	1	4000019700	
40	Orange	Hand crushing hazard - Fan	1	In english: 4000025020 In french: 4000068100 In spanish: 4000086530	
41	Blue	Revolving cradle	1	3078151730	
47	Blue	Information - Explanation - LOW SULFUR	1	307P232480	
52	Blue	Socket - 110 V	1	4000027590	
74	Other	California warning - P65	1	4001026850	
78	Other	QR Code - MyCompanion	1	4001281820	
202	Blue	Diesel Fuel Only	2	4000201430	



## C - Pre-operation inspection

<b>1</b>	<b>Recommendations.....</b>	<b>3</b>
<b>2</b>	<b>Working area assessment.....</b>	<b>4</b>
<b>3</b>	<b>Inspection and Functional test.....</b>	<b>5</b>
<b>3.1</b>	<b>Daily inspection.....</b>	<b>5</b>
<b>4</b>	<b>Safety functional checks.....</b>	<b>10</b>
<b>4.1</b>	<b>Emergency Stop button check.....</b>	<b>10</b>
<b>4.2</b>	<b>Activation of controls.....</b>	<b>11</b>
<b>4.3</b>	<b>Fault detector.....</b>	<b>11</b>
<b>4.4</b>	<b>Automatic engine cut-out.....</b>	<b>12</b>
<b>4.5</b>	<b>Overload sensing system.....</b>	<b>12</b>
<b>4.6</b>	<b>Oscillating axles (If equipped) .....</b>	<b>12</b>
<b>4.7</b>	<b>Slope warning device.....</b>	<b>12</b>
<b>4.8</b>	<b>Travel speed limitation.....</b>	<b>13</b>
<b>4.9</b>	<b>On-board electronics.....</b>	<b>13</b>
<b>4.10</b>	<b>Load selection system (if fitted).....</b>	<b>13</b>
<b>4.11</b>	<b>Braking test.....</b>	<b>14</b>
<b>4.12</b>	<b>Overload test.....</b>	<b>14</b>



## C - Pre-operation inspection

---

### 1 Recommendations

The owner, the site manager, the supervisor and the operator are all responsible to ensure the machine is fit for the work it is to perform; i.e. that the machine is suitable to carry out the work in complete safety and in compliance with this Operator's Manual. All managers who are responsible for persons operating the machine must be familiar with the local regulations currently applicable in the country of use and ensure that they are adhered to.

Before using the machine, read the previous chapters in this manual. Ensure that you have understood the following points:

- Safety precautions.
- Operator's responsibilities.
- Conditions and the operating principles of the machine.

## C - Pre-operation inspection

---

### 2 Working area assessment

**Before carrying out any operations, ensure that the machine corresponds to the work to be done and the working environment:**

- Carry out a thorough inspection of the site to identify any potential risks within the work zone.
- Take the necessary precautions to avoid collisions with other machinery or people within the work area.
- Mark out the work area.
- **Ensure that:**
  - The weather conditions (wind, rain, etc.) allowing the machine to be used.
  - The ground withstands the weight of the machine and has not been affected by the poor weather conditions.
- Check that the authorisations to work with the machine on the site in question have been obtained (.g. chemical product factories).
- Define a rescue plan for all the risks, including the risk of falls and crushing.

## C - Pre-operation inspection

### 3 Inspection and Functional test

#### 3.1 Daily inspection

Each day before the beginning of a new work session and with each change of operator, the machine must be subjected to a visual inspection and a complete functional test.




- Never use a defective or a malfunctioning aerial work platform.
- If any item on the check list is marked "No" during the inspection; machine must be tagged and placed out of service.
- Do not operate the machine until all identified items are corrected and it has been declared safe for operation.

In case of loose fasteners, refer to torque table value in maintenance book.

In case of leaks, replace the damaged part before use.

In case of structural part deformation (cracks, broken weld, paint chips) replace the part before use.



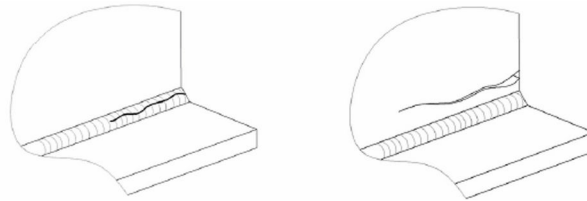





#### Examples of cracked welds



We recommend these forms to be completed daily and stored to assist with your maintenance schedule.

Each action is depicted in the daily inspection sheet using the following symbols.












Use the detailed program below.

	Oil change		Lubrication-Lubrication		Tightening
	Levelling		Systematic replacement		Functional adjustments / Checks / Cleaning
	Visual inspection		To check by test		






Serial number: Hours of operation: HAULOTTE Services® contract reference: Intervention record number: Date: Name:	Model: Signature:
--	----------------------

## C - Pre-operation inspection

### Articulated and telescopic fuel-powered aerial work platforms









 




	Daily	OK	NOK	Corrected	Comments
<b>Chassis assembly: Wheel, reducer, steering, wheel pivot</b>					
Check state of tires/tyres and inflations					
<b>Thermal engines</b>					
Check engine fuel level (Top up the oil if necessary)					
Check engine oil level (Top up the oil if necessary)					
No leaks from engine components (engine, hoses, radiator)					
Check the condition of the battery					
Check the cooling circuit level (Top up the oil if necessary)					
Check the condition of the circuit LPG (If equipped)					
Check the operation of the lock on the engine casing					
<b>Turntable</b>					
Test the operation of the turntable locking system					
<b>Hydraulic : oils, filters and hoses</b>					
Check the hydraulic oil level (Top up the oil if necessary ; Machine stowed)					

## C - Pre-operation inspection







<b>Haulotte</b> 	Daily	OK	NOK	Corrected	Comments
Check the clogging indicator on the hydraulic pressure filter (change if clogged)					
Check the hoses, blocks and pumps, fittings, cylinders and the tank for the absence of leaks, deformations and damage					
<b>Platform</b>					
Ensure that the gate or sliding bar shall be designed to either return automatically to the closed and latched position					
Check that the harness anchor points are not cracked or damaged					

## C - Pre-operation inspection

### Articulated and telescopic fuel-powered aerial work platforms

	Daily	OK	NOK	Corrected	Comments
<b>General</b>					
Check for the presence, cleanliness and readability of the manufacturer's plates, security labels, user manual and maintenance manual					
Check the cleanliness and readability of the control box					
Test the opening and closure of covers (chassis, turntable, upper control box)					
Check the condition of electrical harnesses, cables and connectors					
Check for the absence of abnormal noise and jerky movements					
Check for the absence of visible deterioration and damage					
Check for the absence of cracks, broken welds and chipped paintwork on the structure					
Check for the absence of missing or loose screws and bolts					
Check for the absence of deformation, cracking and breakage of axis stops, bushing and axes					
Check for the absence of foreign bodies in joints and sliding parts					
<b>Safety devices</b>					
Test the operation of the upper and lower control boxes: manipulators, switches, buttons, horn, emergency stops, screens and lights					
Test the operation of visual and audible alarms					

## C - Pre-operation inspection

	Daily	OK	NOK	Corrected	Comments
Test the operation of the tilt system					
Test the operation of the emergency lowering system					
Test the operation of the axle locking system					
Check the operation of the overload indicator					
Test the operation of the Activ Shield Bar (If equipped)					

## C - Pre-operation inspection

### 4 Safety functional checks

To protect the user and the machine, safety systems prevent the movement of the machine beyond its operating limits. These safety systems when activated immobilize the machine and prevent further movement.

The operator must be familiar with this technology and understand that is not a malfunction but an indication that the machine has reached an operation limit.

The aerial work platforms are fitted with a platform control box (main control box) and a ground control box (emergency control box) enabling users to use the machine safely. An auxiliary device (Overriding system) is available on the ground control box to allow the machine to be folded in the event of an overload caused by blockage against a structure or when the emergency stop button on the upper control box is activated.


The following checks describe the operation of the machine and the specific controls required.




For the location and description of these controls: refer to section B 3.2 and D 2 - Ground control box and B 3.3 and D 3 - Platform control box.

#### 4.1 Emergency Stop button check

##### Ground control box Emergency Stop button

Step	Action
1	Pull the Emergency Stop button ( 9 ) at the ground control box.
2	Set the key switch ( 22 ) at ground box to the  position
3	The indicator ( 10 ) lights up on ground control box
4	Start the engine by pressing the engine start-up selector ( 16 ).
5	Push in the Emergency Stop button ( 9 ).
6	Check that the engine stops running.
7	Check no movements are functional.

##### Platform control box Emergency Stop button

Step	Action
1	Pull both Emergency Stop buttons ( 9 ) at ground box and (46) at platform box.
2	Set the key switch ( 22 ) at ground box to the  position
3	The indicator ( 13 ) lights up on ground display panel
4	Start the engine from platform using Start/Stop switch ( 230 ).
5	Push in Emergency Stop button ( 46 ) at platform.
6	Check that the engine stops running.
7	Check no movements are functional.

## C - Pre-operation inspection

### 4.2 Activation of controls

The enable foot pedal (enable switch) must be activated to allow any movement.

The "Enable Switch" system depends on the machine configuration and will consist of one of the following

- Enable switch at ground box (6).
- Foot pedal (enable switch) in the platform (C42).

**N.B.-:THE ENABLE SWITCH MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.**

### 4.3 Fault detector

The machine is equipped with an on-board fault detection system, which indicates the type of fault to the operator.

The fault is identified by a default code.


The default code is displayed at the ground control box.

According to the type of fault, the machine MAY switch into DOWNGRADEMODE mode and certain movements are prevented to maintain Operator's safety.


Do not use the machine until the fault has been corrected.

#### 4.3.1 Indicators/LED's test

##### From the ground control box

Step	Action
1	Pull the Emergency Stop button (46) at the platform control box.
2	Set the key switch ( 22 ) at ground box to the  position.
3	Check that indicators ( 10, 13, 15, 19 ) flash upon start-up and ACTIV'SCREEN is lit.


##### From the platform control box

Step	Action
1	Pull Emergency Stop button ( 9 ) at ground box.
2	Set the key switch ( 22 ) at ground box to the  position.
3	First push in the Emergency Stop button ( 46 ) at platform box, then pull out.
4	Check that the indicators ( 101 - 117 ) on the platform control box flash upon start-up.

## C - Pre-operation inspection

### 4.3.2 Buzzers test

#### From the ground control box

Step	Action
1	Pull both Emergency Stop buttons ( 9 ) at ground box and ( 46 ) at platform box.
2	Set the key switch ( 22 ) at ground box to the  position.
3	The buzzers on the ground and platform beep upon start-up.

### 4.4 Automatic engine cut-out

The engine automatically cuts out in the following conditions:

- The machine has been inactive for 90 s.
- The alternator is not functioning.
- Engine temperature is too high.
- Oil pressure is too low.
- The Emergency Stop(s) is (are) pushed in
- The machine is switched off.


### 4.5 Overload sensing system

If the platform load exceeds the maximum allowed load, no movement is possible from the 2 control boxes. At ground and platform control boxes a buzzer sounds and an indicator light warns the operator.

To return the machine to normal operation remove weight from the platform until the load is below the maximum allowed load.

Daily check that the LED's illuminate when the machine is switched on:

- Verify that the Overload system is active: Refer to Indicator ( 15 ) at ground control box and LED ( 114 ) at platform control box display.
- Verify that the buzzers are functioning: Refer to  Buzzers test.

A periodic inspection of this device must be performed according to the recommendation in  Maintenance Schedule.

### 4.6 Oscillating axles (If equipped)

To improve the driving capability on rough terrain, the front axle is equipped with an oscillating mechanism. When the extending structure is retracted and is in the stowed position, oscillating mechanism is unlocked to adapt itself to the features of ground operation. When the extending structure is out of the stowed position, a safety device locks the oscillating mechanism to reduce overturning hazard.

A visual inspection must be performed to ensure the absence of leaks from the oscillating cylinder and associated plumbing connections including the hydraulic hoses.

A periodic inspection of this device must be conducted according to the recommendation in the maintenance schedule.

### 4.7 Slope warning device

From each control box, a buzzer alerts the operator that the machine is not folded/stowed and is positioned on a slope exceeding the slope allowed.

***N.B.-:THE SLOPE SENSOR IS ONLY ACTIVE WHEN THE PLATFORM IS NOT IN THE STOWED POSITION.***

When machine is on a slope greater than the rated slope, with extending structure out of the stowed position:

## C - Pre-operation inspection


- The DRIVE and LIFTING (RAISING) commands are deactivated.

The lowering speeds are reduced.

In this case, fully lower the platform and reposition the machine on level ground before raising the platform again.

To check the tilt sensor at ground level, perform the following steps:

### To check the tilt sensor at ground level

Step	Action
1	Open the right hand compartment cover (Component location diagrams) and locate the tilt sensor ( C28 ). Tilt sensor is located on the base plate of turret on the right hand side of the ground control box.
2	Pull both Emergency Stop buttons; ( 9 ) at ground box and ( 46 ) at platform box.
3	Set the key switch ( 22 ) at ground box to the  position.
4	Start the engine by pressing the engine start-up selector ( 16 ) START / STOP.
5	Machine in stowed position: Extend the telescope by 1 m(3 ft3 in).
6	Manually tilt the sensor ( C28 ) and hold.
7	Check that the audible beep sounds.

#### 4.8 Travel speed limitation

Drive Speed Selector switch ( 45 ) at the platform control provides a 2 speed selection (high or low).

**N.B.-:IF THE STEERING MODE SELECTOR ( 201 ) ON THE PLATFORM CONTROLS IS ON 4WS POSITION, THE HIGH-SPEED DRIVING IS NOT AVAILABLE.**

Drive speed is proportional to the movement of the drive joystick ( 33 ). Adjust position of jib to enhance field of vision during driving.

Whatever the position of the drive speed selector switch ( 45 ) on the platform control box, the drive speed is limited when the machine is unfolded.

#### 4.9 On-board electronics

The machine is equipped with a specific calculator configured for this machine's functionalities.

Do not interchange calculators between machines, as this may result in the loss of parameters, settings, calibrations, and render the machine inoperable.

#### 4.10 Load selection system (if fitted)

The machine is equipped with a selector load capacity (230 kg (500 lbs) or 450 kg (1000 lbs)). In case that the capacity 450 kg (1000 lbs) is selected, the work area is automatically limited.

Refer to  B 4.2 - Working area / Range of motion.

Daily check:

- From the ground control box:
  - Switch on the machine.
  - Pull out the Emergency Stop buttons at the ground and platform boxes.
  - Start the engine.
  - Fully stow the machine on flat ground with the boom fully retracted.

## C - Pre-operation inspection

- Check that the load selector ( 82 ) on the platform control box is on 450 kg (1000 lbs)
- The LED ( 117 ) at platform display panel lights up to indicate 450 kg (1000 lbs).
- From the platform control box:
  - Turn the load selector ( 82 ) on 450 kg (1000 lbs).
  - Extend the telescoping boom.
  - Boom extension stops automatically, when the orange LED ( 113 ) on the display at ground box lights up.
  - Raise the boom until the indicator/LED ( 113 ) light turns off.
  - Fully extend the telescoping boom.
  - Lower the boom. Lowering stops automatically, indicator/LED ( 113 ) lights.
  - Retract the telescoping boom.
  - Lower the boom.
  - The indicator/LED ( 113 ) goes out.

### 4.11 Braking test



Check that there are no hazards in the test area:

- Position the machine on a flat and firm surface, clear of obstructions (beware of power lines).
- The machine must be completely stowed.
- Ensure that there is sufficient distance to stop the machine in complete safety.
- Position the steered wheels so that they are straight.
- To set up a beaconing of safety around the test area.
- Personal fall protection equipment (PFPE) is compulsory to carry out this test

#### Platform control box

Step	Action
1	Pull both Emergency Stop buttons; at ground box and at platform box.
2	Turn the ground control box selector key to platform control box position.
3	Select low drive speed , then slowly move the drive joystick.
4	Drive the machine forward in low speed on a ramp inclined at less than the maximum authorized slope.
5	Release joystick.
6	The machine comes to a complete stop. Keep the machine immobilized for 5 seconds.
7	Check the ability of the brakes to keep the machine immobilized. The machine must remain immobile.

### 4.12 Overload test

**N.B.-:-**





**THE OVERLOAD SYSTEM IS AN ESSENTIAL PART OF MACHINE SAFETY. THE TEST MUST BE CARRIED OUT BEFORE THE SALE/RESALE OF THE MACHINE AND/OR AT LEAST ONCE A YEAR.**

## C - Pre-operation inspection



### SECTION MAINTENANCE - PLEASE REFER TO PARAGRAPH PERIODIC INSPECTION.

#### You will need:

	<ul style="list-style-type: none"> <li>- Personal protective equipment</li> <li>- DO NOT OPERATE tag</li> <li>- Standard tool kit</li> <li>- Lifting equipment adapted and suitable for placing and removing the load from the platform</li> <li>- 2 loads of 100% and 120% of the nominal load: Refer to section B  - Technical specifications.</li> </ul>		<ul style="list-style-type: none"> <li>- Place barriers around the perimeter of the work area</li> </ul>
	1 person		

#### Procedure:

#### Platform control box

Step	Action
1	Position the machine on a flat and firm surface, clear of obstructions (beware of power lines).
2	Start the machine.
3	Put the machine in stowed position.
4	Mark out the work area (barriers, cones, marking tape) .
5	Restrict access to the area (restricted access sign).
6	Place a do not operate tag at the start/stop switch location to inform personnel that the equipment is being worked on.
7	Use external lifting equipment to position 100% of the nominal load in the center of the platform.
8	From the ground control box: Check that there is no overload alarm.
9	Remove the weight from the platform.
10	Use external lifting equipment to position 120% of the nominal load in the center of the platform.
11	Check that the overload/fault indicators are lighted on the 2 control boxes.
12	Check that the overload alarms are displayed on the screens of the 2 control boxes.
13	Remove the load from the platform.

## C - Pre-operation inspection



### Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## D - Operation instructions

<b>1</b>	<b>Operation.....</b>	<b>3</b>
1.1	Introduction.....	3
1.2	Major description.....	3
1.3	Operation from the ground control box (Service / Emergency station) .....	3
1.4	Operation from the platform control box (Main station).....	4
<b>2</b>	<b>Ground control box - Service / Emergency station.....</b>	<b>6</b>
2.1	To start and stop the machine-Diesel engine.....	6
2.2	To start and stop the machine - Petrol / gas (Propane) Engine.....	6
2.3	Movement control.....	7
2.4	Additional controls.....	8
<b>3</b>	<b>Platform control box - Main station.....</b>	<b>9</b>
3.1	To start and stop the machine.....	9
3.2	Drive and steer control.....	9
3.3	Movement control.....	10
3.4	Additional controls.....	12
<b>4</b>	<b>Rescue and emergency procedures.....</b>	<b>13</b>
4.1	In case of power loss.....	13
4.2	To rescue operator in platform.....	13
4.3	Operation of overriding system from ground control box.....	14
4.4	No power available.....	14
<b>5</b>	<b>Transportation.....</b>	<b>15</b>
5.1	Transport configuration.....	15
5.2	Machine stowage for transport- HT23RTJ O - HT23RTJ O SW - HT67RTJ O HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO.....	16
5.3	Unloading.....	17
5.4	Towing.....	17
5.5	Storage.....	18
5.6	Lifting operation.....	19
<b>6</b>	<b>Cold Weather Recommendations.....</b>	<b>22</b>
6.1	Engine oil.....	22
6.2	Hydraulic oil.....	23

## D - Operation instructions



### Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## D - Operation instructions

### 1 Operation

#### 1.1 Introduction

Only trained and authorized personnel shall be permitted to operate this aerial work platform.

Prior to operation:

- Read, understand and obey all instructions and safety precautions in this manual and attached to the aerial work platform.
- Read, understand and obey all local regulations.
- Become familiar with the proper use of all controls and emergency systems.

#### 1.2 Major description

All the machines are equipped with:

- Platform control box.
- Ground control box.



- An Emergency Stop button is present at each control box.
- The Emergency Stop button at the ground control box stops all movements when pressed in.
- The Emergency Stop button at the platform control box stops all movements when pressed in and the platform control box is selected. The Emergency Stop button at the platform control box is neutralized when the ground control box is selected.

#### 1.3 Operation from the ground control box (Service / Emergency station)

The ground control box is designed for maintenance and emergency rescue operations only.

- Turning "ON" and "OFF" of the machine is performed with the Control box activation key switch ( 22 ).
- Activation of a desired control box is achieved by turning the Control box activation key switch ( 22 ) to



the desired position .

- The ground control box is energized and is active ONLY when:
  - The emergency stop on the ground control box is not pushed in.
  - The machine is switched on.
  - Ground control box is selected.


**N.B.-:DO NOT TURN OFF THE POWER SUPPLY OF THE MACHINE USING THE EMERGENCY STOP BUTTON (USE ONLY IN CASE OF EMERGENCY) . TURN OFF THE POWER SUPPLY OF THE MACHINE USING THE CONTROL BOX**



**ACTIVATION KEY SWITCH ( 22 ) TO POSITION.**

- An Enable Switch ( 6 ) provided must be activated and maintained to authorize one or more function movements. If Enable Switch ( 6 ) is kept engaged without selecting a function movement for more than 8s; Enable Switch is automatically de-activated.

**N.B.-:THE ENABLE SWITCH ( 6 ) MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.**

- Drive and steer movements are not possible from the ground control box.
- All controls operating a movement, return automatically to neutral when released.
- At power up, all controls must be in their neutral position (not activated).
- Enable Switch / Back-up unit selector ( 6 ):
  - With engine running, the selector ( 6 ) functions as an Enable Switch only.
  - With engine stopped, the selector ( 6 ) functions as the Enable Switch and activates the back-up unit (emergency pump).
- Overriding system: The ground control box is an auxiliary control box to use in emergencies only. Refer to  D 4.2 - To rescue operator in platform.

## D - Operation instructions


- The status of the controls is tested automatically when the machine is switched on.
- Pressing engine start-up selector ( 16 ) starts or stops the engine.
- A buzzer beeps in the following conditions:
  - When power is switched on.
  - Overload.
  - Slope if machine is out of stowed position.
  - Hydraulic oil overheating.
  - Movement buzzer option.
  - Drive buzzer option.
- Indicators ( 10 ), ( 13 ), ( 15 ) and ( 19 ) are checked when the machine is powered on.

### For petrol / gas machines:

- For desired type of fuel; activate button ( 18 )  for petrol or ( 17 )  for propane gas.


### 1.4 Operation from the platform control box (Main station)

- The platform control box is energized only when:
  - The Emergency Stop buttons on both ground and platform control boxes are not pressed in.
  - To switch ON the machine, turn the Control box activation key switch ( 22 ) at the ground control box

to platform control box position .

- A faulty joystick is not taken into account to control a movement. If this fault disappears, the movement is authorised again.


***N.B.-:DO NOT TURN OFF THE POWER SUPPLY OF THE MACHINE USING THE EMERGENCY STOP BUTTON (USE ONLY IN CASE OF EMERGENCY) . TURN OFF THE POWER SUPPLY OF THE MACHINE USING THE CONTROL BOX***

***ACTIVATION KEY SWITCH ( 22 ) TO  POSITION.***

- A Foot Switch ( C42 ) is present that should be activated and maintained to authorize one or more movements. If Foot Switch is kept engaged without selecting a function movement for more than 8 seconds ; Enable switch is automatically de-activated.

***N.B.-:THE ENABLE SWITCH ( C42 ) MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.***

- The release of foot pedal switch while performing a movement, stops that function movement and all other movements are inactive. The stop of movements is progressive. If the Foot Switch is pressed again quickly within 0,5 s the movement restarts. If the Foot Switch and / or Enable Switch is not pressed again quickly enough within + 0,5 s the movement will not restart. It could restart only when the selected function switch/joystick is released to neutral position.
- All switches and joystick operating a movement, return automatically to neutral when released.
- Pressing the Foot Switch ( C42 ) restarts the machine when its engine has been stopped by the Stop Emission System after 90 s of inactivity.
- At power up, all switches and joysticks must be in their neutral position.
- For petrol / gas machines:
  - The fuel selection (petrol or liquid propane gas) is done by turning the switch ( 44 ) to the desired position.
- The status of the switches is tested automatically when the machine is switched on and checked at every starting. A switch will be activated only after it has been detected in neutral position. Emergency pump.

 D 4.1 - In case of engine power failure)

- Indicators: All indicators (LEDs 101 - 117) are checked when the machine is powered on
- A buzzer beeps in the following conditions:
  - When power is switched on.

## D - Operation instructions

---

- Overload.
- Slope if machine is out of stowed position.
- Hydraulic oil overheating.
- Movement buzzer option.
- Drive buzzer option.



### While driving on a slope

- While driving, always place the boom above the rear axle, in the direction of movement.
- Always orientate the machine in the direction of the slope.
- Always place the boom in fully retracted and in stowed position.
- Do not travel down slopes in high speed.
- Do not drive fast in narrow or cluttered areas. Keep speed under control while making turns or sharp bends.


## D - Operation instructions

### 2 Ground control box - Service / Emergency station

#### 2.1 To start and stop the machine-Diesel engine

- Check that the Emergency Stop buttons ( 9 ) at ground control box and ( 46 ) at platform control box are not pressed in.




- Turn the control box selector ( 22 ) to position  to energize the ground control box. The LED display panel comes on.
- Push the starter selector ( 16 ) upwards. The engine starts. The indicators go out.
- Let the engine heat up.

To shut-down the machine from the ground control box

- Push the starter selector ( 16 ) upwards. The engine stops.



- Turn the key activation selector switch ( 22 ) in position .
- The machine is now switched off.


**N.B.-:THIS OPERATION TURNS THE MACHINE OFF AND IT IS REQUIRED TO PREVENT BATTERY DISCHARGE.**

**N.B.-:THE ACTIV'SCREEN AUTOMATICALLY GOES INTO STANDBY IF IT IS NOT USED FOR AN EXTENDED PERIOD. TO SWITCH THE ACTIV'SCREEN BACK ON, TURN THE KEY SELECTOR TO POSITION OFF THEN FOLLOW THE START-UP PROCEDURE.**

#### 2.2 To start and stop the machine - Petrol / gas (Propane) Engine

- Open the gas bottle valve ( C140 ).
- At the ground control box, check that the Emergency Stop button ( 9 ) is not pressed in.




- Turn the control box selector ( 22 ) to position  to energize the ground control box.
- Press the propane gas control ( 17 ) for liquid gasoline supply.
- Press the starter selector ( 16 ) to start the engine.
- Let the engine heat up.

**To shut-down the machine from the ground control box:**

- Press the starter selector ( 16 ) to stop the engine.



- Turn the activation selector key switch ( 22 ) to off position .
- Power supply is now switched off.
- Close the gas bottle valve ( C140 ).

**N.B.-:THIS OPERATION TURNS OFF THE POWER SUPPLY TO MACHINE AND IT IS REQUIRED TO PREVENT BATTERY DISCHARGE.**



If the gas bottle is empty, the engine stops. Press switch ( 18 ) for gasoline supply. Restart the engine.

**N.B.-:THE ACTIV'SCREEN AUTOMATICALLY GOES INTO STANDBY IF IT IS NOT USED FOR AN EXTENDED PERIOD. TO SWITCH THE ACTIV'SCREEN BACK ON, TURN THE KEY SELECTOR TO POSITION OFF THEN FOLLOW THE START-UP PROCEDURE.**
















## D - Operation instructions

### 2.3 Movement control

**N.B.-:-THE ENABLE SWITCH ( 6 ) MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.**

**N.B.-:-RELEASING THE ENABLE SWITCH ( 6 ) WILL STOP ALL MOVEMENTS.**
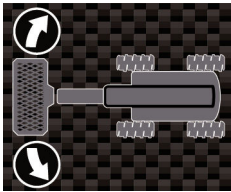
#### Ground box controls (emergency station)

Command		Action
Raising / lowering of boom		Press the boom raising control ( 4 ) upwards  to raise the boom.
		Press the boom raising control ( 4 ) downwards  to lower the boom.
Boom telescoping extend / retract		Press the boom telescoping control ( 3 ) to the left  to extend the boom.
		Press the boom telescoping control ( 3 ) to the right  to retract the boom.
Jib raising / lowering (If applicable)		Press the jib control ( 2 ) upwards  to raise the jib.
		Press the jib control ( 2 ) downwards  to lower the jib.
Turntable rotation		Press the turntable rotation control ( 7 ) for a clockwise rotation  .
		Press the turntable rotation control ( 7 ) for an counterclockwise rotation  .
Platform rotation		Press the platform rotation control ( 8 ) for a clockwise rotation  .
		Press the platform rotation control ( 8 ) for an counterclockwise rotation  .

## D - Operation instructions

---

### 2.4 Additional controls

#### For the machines equipped with beacon light:

- Press the beacon light selector switch ( 14 ) to turn ON the beacon light.
- Press the beacon light selector switch ( 14 ) to turn OFF the beacon light.
- Push the horn selector ( 12 ) to the right to sound the horn. The horn stops when the selector switch is released.

## D - Operation instructions

### 3 Platform control box - Main station

#### 3.1 To start and stop the machine

##### 3.1.1 To start the machine

###### At the ground control box:

- Check that the Emergency Stop button ( 9 ) is not pressed in.



- Turn the control box activation key switch ( 22 ) to platform position to energize platform control box.

###### At the platform control box:

- Check that the Emergency Stop button ( 46 ) on platform control box is not pressed in.
- Push the starter selector switch ( 230 ) upwards. During pre-heating, the indicator ( 102 ) comes ON on the display panel of the platform control box. Pre-heating begins and the engine starts.
- Allow the engine to heat up and initialize.

##### 3.1.2 To stop the engine

- Press the engine starter selector ( 230 ) and the engine stops.

##### 3.1.3 If engine is stopped by Stop Emission System

- The Stop Emission System automatically stops the engine after 90 s of inactivity.
- Press the foot switch ( C12 ) to restart the engine.

**N.B.-:IF THE FOOT SWITCH IS STILL ENGAGED, RELEASE AND PRESS AGAIN.**



The Activ'Screen automatically goes into standby if it is not used for an extended period. To switch the Activ'Screen back on, press the emergency stop button then follow the start-up procedure.

#### 3.2 Drive and steer control








**N.B.-:THE ENABLE SWITCH ( C42 ) MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.**

**N.B.-:RELEASING THE ENABLE SWITCH ( C42 ) WILL STOP ALL MOVEMENTS.**

Before moving, locate the white and red directional arrows on the chassis and the platform control box.

Move the drive control joystick ( 33 ) in the direction matching the directional arrows.

## D - Operation instructions

Command		Action
Steering		Press thumb/rocker switch on joystick ( 33 ) to the right to steer right.
		Press thumb/rocker switch on joystick ( 33 ) to the left to steer left.
Steering mode selection		Synchronised axle: 4 wheel steering mode
		2 front steering wheels from axle
		Crab mode axle
Drive speed		Position the drive speed selector switch ( 45 ) on  for high-speed driving.
		Position the driving speed selector ( 45 ) on  for low-speed driving (short distance, final approach, unloading from lorries/trucks).

**N.B.-:-STEERING MODE OPERATES BY OIL TRANSFER. TO REALIGN THE REAR AXLE, IT MAY BE NECESSARY TO SWITCH BACK TO 2 WHEEL DRIVE FIRST.**

### 3.3 Movement control







**N.B.-:-THE ENABLE SWITCH ( C42 ) MUST BE ACTIVATED FIRST BEFORE ANY ACTION ON THE JOYSTICK OR SWITCHES.**

**N.B.-:-RELEASING THE ENABLE SWITCH ( C42 ) WILL STOP ALL MOVEMENTS.**

#### Foot Switch



## D - Operation instructions

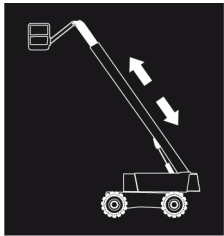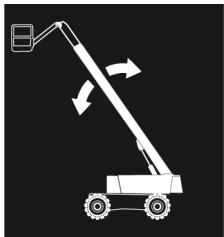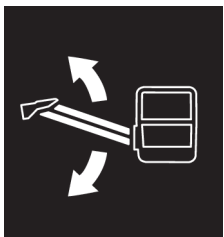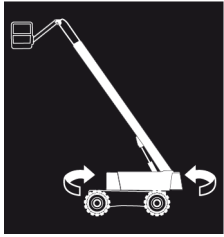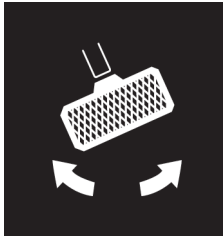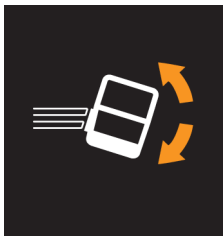Command		Action
Boom telescoping extend / retract		Push the boom telescoping joystick ( 233 ) forwards to retract the boom.
		Pull the boom telescoping joystick ( 233 ) backwards to extend the boom.
Boom raising / lowering		Move the boom/turntable joystick ( 232 ) upwards to raise the boom.
		Move the boom/turntable joystick ( 232 ) downwards to lower the boom.
Jib raising / lowering (If equipped)		Push the jib switch ( 129 ) upwards to raise the jib.
		Push the jib switch ( 129 ) downwards to lower the jib.
Turntable rotation		Move the boom/turntable joystick ( 232 ) to the left for a clockwise (CW) rotation.
		Move the boom/turntable joystick ( 232 ) to the right for a counter clockwise (CCW) rotation.
Platform rotation		Move the platform rotation switch ( 38 ) to the right for a counter clockwise (CCW) rotation.
		Move the platform rotation switch ( 38 ) to the left for a clockwise (CW) rotation.
Platform leveling		Move the platform levelling switch ( 40 ) upwards to raise the platform to the front of the machine.
		Move the platform levelling switch ( 40 ) downwards to tilt the platform to the rear of the machine.

## D - Operation instructions

### 3.4 Additional controls

- Horn: Push the horn selector ( 43 ) to the right to sound the horn. The horn stops when the switch is released.

#### 3.4.1 Stop Emission System


The machine is equipped with the innovative Stop Emission System that automatically stops the engine after 90 s of inactivity. Engine can be restarted by pressing the 'enable switch' foot pedal ( C42 ).

**N.B.-:THIS SYSTEM IS ONLY AVAILABLE WHEN THE PLATFORM CONTROL BOX IS SELECTED.**



If the machine is equipped with arctic option, Stop Emission System is deactivated. The Stop Emission System can be reactivated at any time by a HAULOTTE Services® technician.

#### 3.4.2 Activ' Lighting System

Refer to  B 3.3 - Platform control box.

This option means that the operator will be able to safely load (or unload) the machine onto the truck.

Located on the turntable, boom and platform, the Activ' Lighting System system lights up the controls and surrounding areas of the machine. Users can then safely move the machine.


#### 3.4.3 Dual load selector (if fitted)

**N.B.-:THE LOAD SELECTION ( 82 ) MUST BE DONE ONLY IN STATIC POSITION. LOAD SELECTION CAN BE DONE ONLY FROM THE PLATFORM CONTROL BOX.**

- When the machine is switched on (whatever control box is selected) the machine recognizes the load per the selector ( 82 ) position on the platform control box (450 kg (1000 lbs) or 230 kg (500 lbs)).
- When 450 kg (1000 lbs) is selected, movement is automatically cut off when the machine reaches the limit of the 450 kg (1000 lbs) work zone. The load selection indicator ( LED 109 ) is on.
- When 230 kg (500 lbs) is selected, there is no load chart limit. The load selection indicator ( LED 109 ) is on.
- All movements are authorized.

To safely utilize the working area/range of motion, follow the below steps and as shown in the illustrations:

1. If boom lowering is cut-off, then retract the boom to recover the lowering movement.
2. If boom telescoping is cut off, lift the boom to recover the boom telescoping movement.

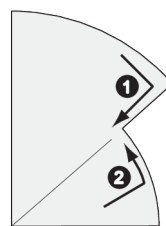

**N.B.-:THE WORK ZONE CORRESPONDS TO THE POSITION OF THE 230 KG (500 LBS) / 450 KG (1000 LBS) LOAD SELECTOR. THE WORK ZONE REFERS TO THE LABEL LOCATED ON THE PLATFORM. IF THE PLATFORM LOAD IS BETWEEN 230 KG (500 LBS) AND 450 KG (1000 LBS), THEN THE PLATFORM CANNOT BE POSITIONED IN THE RESTRICTED AREA.**

**N.B.-:IF THE LOAD SELECTION INDICATOR ( LED 109 ) FLASHES, THIS MEANS THAT THE LOAD SELECTION HAS NOT BEEN TAKEN INTO ACCOUNT. RETRACT THE TELESCOPE TO THE STOP THEN SELECT THE LOAD AGAIN USING THE LOAD SELECTOR ( 82 ).**

## D - Operation instructions

### 4 Rescue and emergency procedures

#### 4.1 In case of power loss

Should the main power source fail, the secondary emergency power supply, powered by the starter battery, enables movements to be controlled both from the ground control box (on the ground) or from the platform control box (in the platform).

As the electric pump has limited power, it is advisable to reach the ground in the most direct manner possible.

The use of the electric pump is exclusively reserved for lowering the boom in emergency situations only. You are advised to retract the telescope before lowering the boom.

**N.B.-:TEST THE OPERATION OF EMERGENCY SYSTEM ATLEAST ONCE A MONTH. REFER TO THE SERVICE MANUAL.**

Depending on the control box in use, push and hold the back-up/auxiliary power switch ( 6 ) at ground box or switch ( 41 ) at platform box. Retract the boom and lower it by using switches ( 3 ) and ( 4 ) at ground box or joysticks ( 233 ) and ( 232 ) at platform box.

In an emergency, if the operator has to exit the platform while it is elevated, the transfer of the operator must respect the following recommendations.

- Exit onto a sturdy and safe structure.
- Allowance must be made for the possibility of boom deflection when egressing from the platform.
- The occupant(s) must ensure that the 2 harness straps provided are used, for safety. One must be attached to the designated anchorage point on platform the occupant(s) is in and the other attached to the structure intended to get on.
- Do not leave the platform without taking into account the possibility that the machine might move when removing the load.
- Occupant(s) must exit the current platform through the normal access.

**N.B.-:DO NOT DETACH THE LANYARD FROM THE CURRENT PLATFORM IF THE TRANSFER TO THE NEW STRUCTURE POSES ANY DANGER OR UNTIL THE TRANSFER IS SAFELY COMPLETED. DO NOT ATTEMPT TO CLIMB DOWN THE BOOM. INSTEAD WAIT FOR ASSISTANCE FOR A SAFE EXIT.**

#### 4.2 To rescue operator in platform



In a situation where an operator located in the platform needs to be rescued (for example in case of illness, injury or trapped against a structure making the control box inaccessible), the rescue personnel at ground level needs to obtain rapid and direct access to operating functions.

HAULOTTE® has implemented a control system for safely lowering the operator to the ground in the event of an emergency to enable him to receive the necessary treatment.



The system allows occupant(s) to be lowered to the ground level, even if an Emergency Stop is engaged or if an overload is detected.

#### Procedure

- Turn the ground control box key control ( 22 ) to the ground control box  position.
- The platform box controls are now de-energized.
- Check that the Emergency Stop button ( 9 ) at ground is not pressed in.
- To lower the platform, hold down the Enable Switch ( 6 )  and simultaneously activate the desired control function.

## D - Operation instructions





### 4.3 Operation of overriding system from ground control box

**N.B.-:IF THE SAFETY SYSTEMS DO NOT ALLOW NORMAL MOVEMENT FROM THE GROUND CONTROL BOX, OR IN THE EVENT OF OVERHEATING, USE THE OVERRIDING SYSTEM DESCRIBED BELOW.**



Operation of the "overriding system" switch must be an exception and not a normal emergency operation.

#### Procedure:

- Press and hold the "overriding" system control ( 11 ) .
- Press simultaneously the telescoping boom control ( 3 ) to retract the boom .
- Press the boom raising control ( 4 ) to raise  or lower  the boom.

**N.B.-:ONCE RESCUE OPERATIONS ARE COMPLETE, WRITE AN INCIDENT REPORT.**

### 4.4 No power available

In case of loss of the main power and the secondary power unit not functioning, do not attempt to activate any function movement using hydraulic manifold unless trained and authorized by HAULOTTE Services®. All safety functions are no longer active and several hazards may occur. Improper use of the equipment will result in death or serious injuries.



If the operator cannot be lowered by any of the above mentioned methods, contact HAULOTTE Services® immediately.

## D - Operation instructions

### 5 Transportation

#### 5.1 Transport configuration



During loading, ensure that:

- The loading ramp can support the machine weight.
- The loading ramp is correctly attached to transport vehicle.
- The loading ramp has sufficient grip surface.
- The transport vehicle must be parked on a level surface and must be secured to prevent rolling away while machine is being loaded or unloaded.
- The floor of the transport truck and/or the trailer can bear the weight of the machine.



Do not place yourself below or too close to the machine during loading.

The machine must be completely in the stowed configuration:

- Check the platform is completely empty.

To climb the slope, select low driving speed.

If the slope is too steep, use a winch in addition to the low speed drive.

- Ensure that the jib is raised as necessary to give ground clearance when driving the machine onto the loading ramp.
- Drive onto the truck bed slowly. While constantly checking the wheel position.
- Secure the machine to the tie down points provided ( Section D - Machine layout).
- Lock the turntable with the rotation stop pin located under the turntable before transporting ( Section D - Machine layout).
- The platform/basket must be chocked and the boom strapped to prevent bouncing up and down, thus preventing possible material damage during transporting.
- Do not use excessive downward force when securing boom section.




A wrong move can lead to machine tipping over and may cause serious injuries and material damage.



Always align the boom in the axis of the machine and climb slopes with the platform lowered and on the downhill side of the machine.



To enter or exit from the platform: Falling Hazards ( A 2.1.2).



Risk of overturning: Ensure the stability and strength of the trailer or transport platform before performing turret rotation.


## D - Operation instructions

### 5.2 Machine stowing for transport- HT23RTJ O - HT23RTJ O SW - HT67RTJ O HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO

Turntable rotation pin



Machine stowing

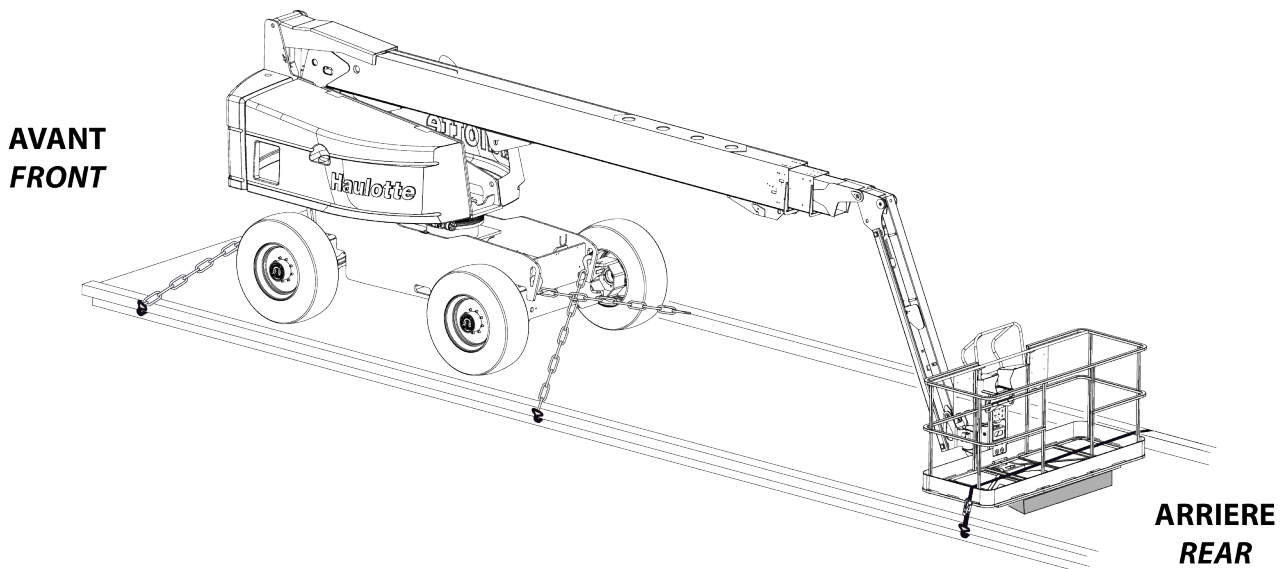


**N.B.:-SECURE TURNTABLE WITH THE TURNTABLE LOCKING PIN BEFORE TRAVELING LONG DISTANCES OR HAULING MACHINE ON A TRUCK.**

## D - Operation instructions

### 5.3 Unloading

Before unloading, check that the machine is in good condition and that it has not suffered any damage during transport.

- Remove the turntable rotation locking pin (  Section D - Machine layout).
- Remove the tie downs.
- Select low drive speed at the platform control box.
- Start the machine from platform control box.



Upon starting a machine that has been secured and transported, the safety system may detect a false overload preventing all movement from the platform control box.

To reinstate the system, lift the jib a few centimetres (inches) using the ground control box.

### 5.4 Towing




In the event of a machine breakdown, the machine can be towed a short distance to load it onto a transport vehicle:

- Ensure that no one is in the platform during towing.
- Ensure boom is in the stowed position and the turntable is locked, prior to towing.
- The platform must be empty.

To tow a broken-down machine, disconnect the wheel drive hubs.

In the towing configuration, the machine braking system is inactive. Use a drawbar to avoid any risk of accident:

- Do not exceed the maximum freewheel speed (Refer to  B 4.1 - Technical specifications).
- Do not use on a slope with a gradient greater than 25%.



Perform these operations on flat, horizontal ground. Block the wheels to immobilize the machine. The machine is in free wheel mode, so the braking system is not active.

#### 5.4.1 Disengaging the drive hubs

- Use an 11 spanner to undo and remove the 2 screws from the plate.



## D - Operation instructions

- Remove the plate, turn it over and install it in place with the 2 screws removed previously.

**N.B.: - THE PLATE BOSS WILL PUSH THE SPRING IN. THE DRIVE HUBS ARE NOW DISENGAGED.**



When drive hubs are disengaged, the machine is in free wheel mode and the brake system no longer functions.

### 5.4.2 Re-engaging the drive hubs

- To return machine to normal operation and braking, reverse the steps performed in disengaging the drive hubs.



Carry out a few driving movements. The drive hubs are now re-engaged.

Machine is now in the normal driving mode.

### 5.5 Storage



The machine can be stored in a designated area when not in use. If it is stored for more than 3 months without being used, an inspection must be carried out before it is put back into service.



For engine storage condition follow engine supplier operator and maintenance manuals.

Machine must be parked in a protected/designated area with the boom in a stowed configuration, however the boom can be raised but must not be extended. Make sure there is no load in the platform.



Turn the control box activation key switch ( 22 ) at the ground control box to the extreme left to shut OFF the power.

Ensure that the turntable rotation locking pin is removed and stored properly.

Remove the ignition key to prevent unauthorized operation of the machine.



Storing of the machine with an obstacle under the boom structure is forbidden.



To avoid any risk of corrosion on rods of cylinders during a storage period of more than 1 month:

- In a normal atmospheric environment: perform a complete cycle for the cylinders every 2 months while they are in storage.
- In harsh environments (high levels of salinity in the atmosphere: close to the sea, industrial environment with chloride emissions and/or humidity >70%), we recommend applying the following protection process:
  - Wash and rinse the entire machine with plenty of clean water.
  - Dry all the cylinder rods using an air gun.
  - Apply a solvent-based oil leaving an oily film after evaporation of the solvent directly to all rods left exposed when the machine is in storage position.

## D - Operation instructions

- Re-apply the product every month.



After washing the machine, make sure it is fully air-dry and does not contain moisture on corrosive parts (cylinders rods for example). Do not wash electrical components with a high pressure washer. Wipe away dirt from around electrical components with a dry cloth.

### 5.6 Lifting operation



During loading / unloading operation, if it becomes necessary to lift the machine using an overhead crane, it is important to respect the following

- Put the machine in stowed position, boom fully retracted and lowered.
- Verify absence of load in platform.
- Align the turntable with the chassis, jib in lowered position and boom horizontal.
- Lock the turntable with the rotation stop pin located under the turntable.
- Verify that lifting accessories are in good operation and match the technical specifications listed below. It is important that the lifting devices are attached only to the designated lifting eyes.
- Each of the slings used for lifting the machine must be adjusted to keep the machine level and to minimize the risk of damage to the machine.
- ONLY trained and authorized personnel should attempt to lift the machine.


#### Procedure for the use of slings



## D - Operation instructions

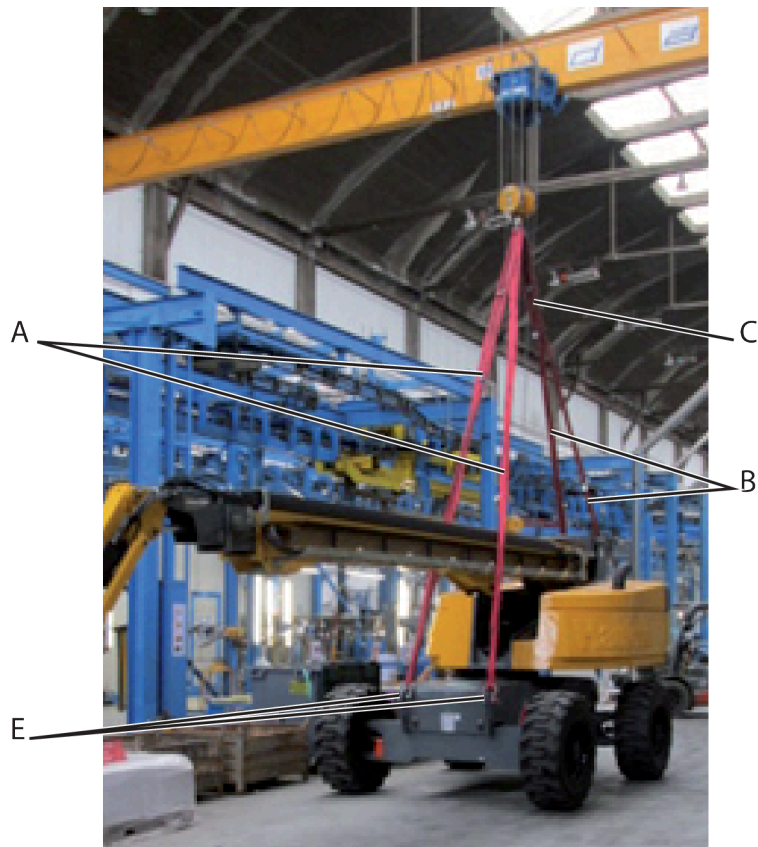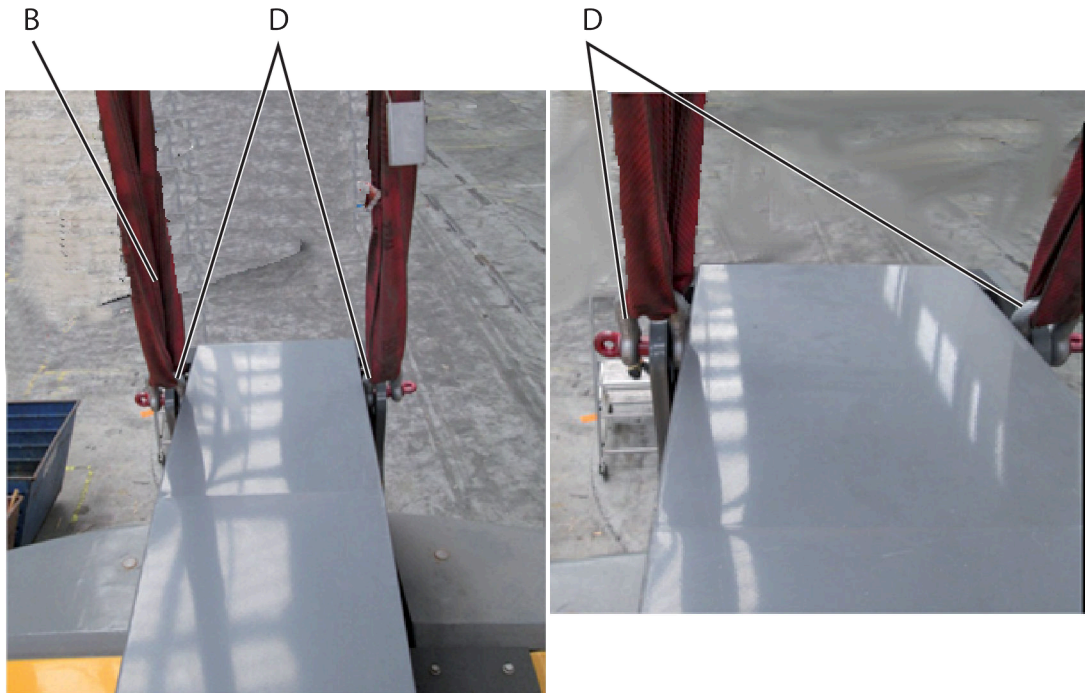

## D - Operation instructions

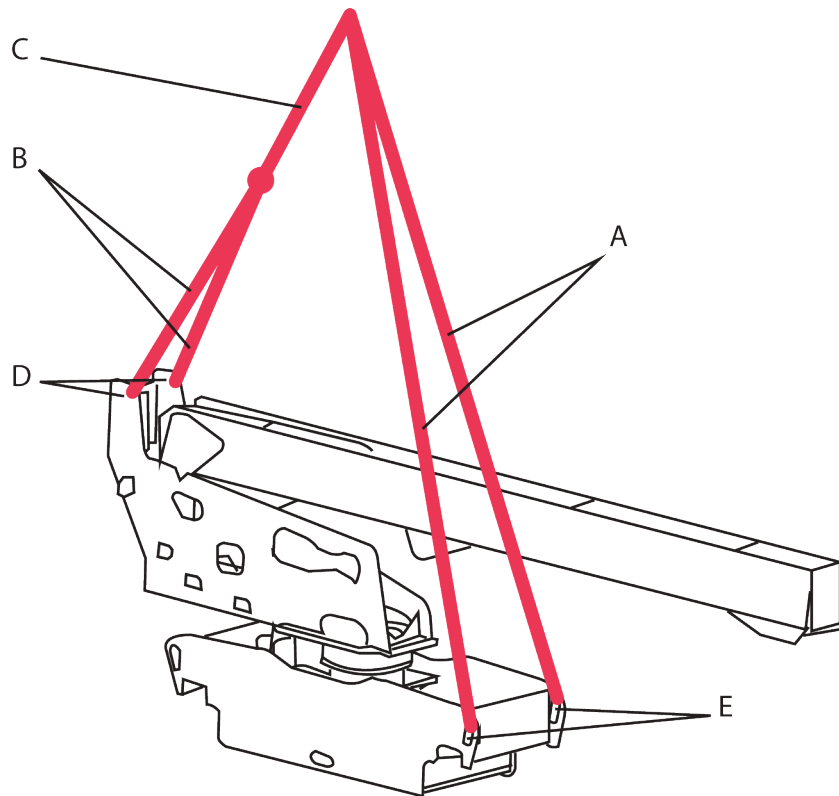

	Strap			Shackle	
	Number of slings	Length	Maximum load per sling	Number of shackles	Maximum load per shackle
A - Fixed on the chassis	2	5 m (16 ft 5 in)	5 T (11,025 lbf)		
B - Fixed on the chassis	1 - Doubled	5 m (16 ft 5 in)	5 T (11,025 lbf)		
C	1 - Doubled	2,5 m (8 ft 2 in)	3 T (6,615 lbf)		
D				2	6,5 T (14,350 lbf)
E				2	8,5 T (18,800 lbf)

## D - Operation instructions

### 6 Cold Weather Recommendations

In cold weather conditions, allow engine to run for at least 5 min to warm up ; before operating any function thereby preventing any damage to the hydraulic system.

In extreme cold conditions, machines should be equipped with optional cold start kits.

Attempting to start engine when temperature is in the negative range, may require the use of a booster battery.

If engine fails to start, do not crank for an extended time. Allow starter to "cool off" for a few minutes before attempting again. If engine fails after several attempts, refer to the engine maintenance manual.

**N.B.-:INITIAL STARTING SHOULD ALWAYS BE PERFORMED FROM THE GROUND CONTROL BOX.**

**N.B.-:WHEN POWER IS SWITCHED ON, THE LED ( 102 ) AT PLATFORM CONTROL DISPLAY PANEL FLASHES, INDICATING THAT THE ENGINE IS IN AUTOMATIC PRE-HEATING MODE. UPON THE EXTINCTION OF THIS LIGHT (JUST IN SECONDS) AT PLATFORM, STARTING OF THE MACHINE IS POSSIBLE.**

#### 6.1 Engine oil

The correct SAE viscosity grade of oil is determined by the minimum ambient temperature during cold engine start-up, and the maximum ambient temperature during engine operation.

In general, use the oil with the lowest viscosity to meet starting temperature requirements.

Engine oil viscosity		
Viscosity index	Ambient temperature	
	Minimum	Maximum
SAE 0W20	-40°C (-40°F)	10°C (50°F)
SAE 0W30	-40°C (-40°F)	30°C (86°F)
SAE 0W40	-40°C (-40°F)	40°C (104°F)
SAE 5W30	-30°C (-22°F)	30°C (86°F)
SAE 5W40	-30°C (-22°F)	40°C (104°F)
SAE 10W30	-20°C (-4°F)	40°C (104°F)
SAE 15W40	-10°C (14°F)	50°C (122°F)

#### Classification API

Fuel type	Engine oil classification
Low sulfur fuel ≤ [0.05% (500 ppm)] Sulfur content < 0.50% (5000 ppm)	APICJ-4 or CK-4 (If fuel with a high sulfur content is used, change the engine oil more frequently (reduce the intervals between each oil change by approximately half))

**N.B.-:FOR ADDITIONAL ENGINE OIL RECOMMENDATIONS, REFER TO THE ENGINE MANUAL PROVIDED WITH THE MACHINE.**

## D - Operation instructions

### 6.2 Hydraulic oil

External environmental conditions can reduce performance of the machine if the hydraulic oil temperature does not reach its optimum range.

It is recommended to use the hydraulic oil according to weather condition. Refer to the table below.

Environmental conditions	SAE Viscosity grade
Ambient temperature between - 35°C (- 31°F) and + 35°C (+ 95°F)	HV 32 ARTIC
Ambient temperature between - 15°C (5°F) and + 40°C (+ 104°F)	HV 32
Ambient temperature between 0°C (+ 32°F) and + 45°C (+ 113°F)	HV 68

***N.B.: -IT IS RECOMMENDED TO REPLACE LOW TEMPERATURE OIL AS THE AMBIENT TEMPERATURE REACHES + 15°C (59°F). IT IS NOT ADVISABLE TO MIX OILS OF DIFFERENT BRANDS OR TYPES.***



## E - General Specifications

---


<b>1</b>	<b>Machine dimensions.....</b>	<b>3</b>
<b>2</b>	<b>Major component masses.....</b>	<b>5</b>
<b>3</b>	<b>Acoustics and vibrations.....</b>	<b>6</b>
<b>4</b>	<b>Wheel/Tire assembly.....</b>	<b>7</b>
<b>4.1</b>	<b>Technical specifications.....</b>	<b>7</b>
<b>4.2</b>	<b>Inspection and maintenance.....</b>	<b>8</b>



## E - General Specifications

### 1 Machine dimensions

Stowed / Transport position: Configuration that takes the minimum floor space necessary for storage and / or delivery of the machine-Access position. HT23RTJ O - HT67RTJ O - HT23RTJ O SW - HT23RTJ PRO - HT67RTJ PRO - HT23RTJ PRO SW

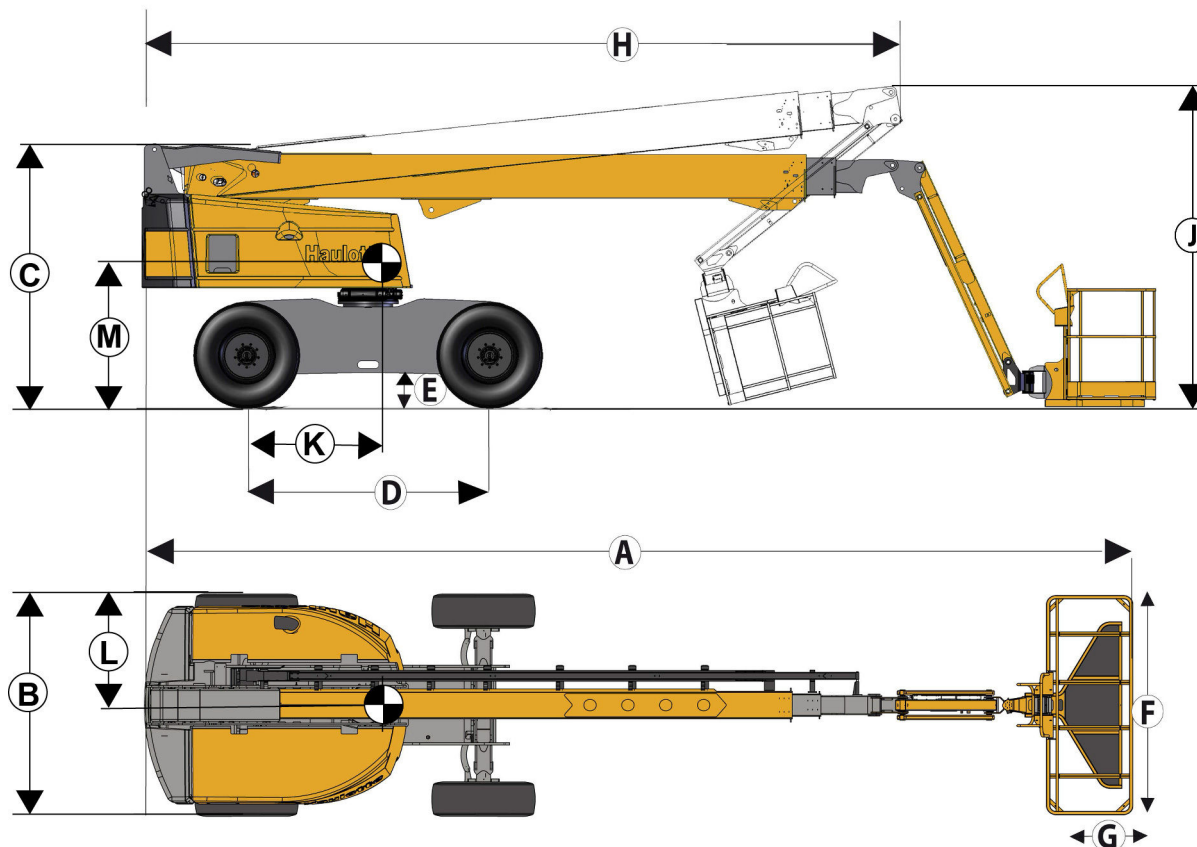

Machine		HT23RTJ O - HT67RTJ O HT23RTJ PRO - HT67RTJ PRO		HT23RTJ O SW HT23RTJ PRO SW	
Marking	Specifications-Dimensions	SI	Imp.	SI	Imp.
A	Overall length of machine	10,4 m	34 ft	10,4 m	34 ft
B	Overall width of machine	2,48 m	8 ft 1 in	2,48 m	8 ft 1 in
B	Overall width of machine - With sand tires	2,75 m	9 ft	2,75 m	9 ft
C	Overall height of machine	2,71 m	8 ft 10 in	2,71 m	8 ft 10 in
D	Wheel base	2,5 m	8 ft 2 in	2,5 m	8 ft 2 in
E	Ground clearance	33 cm	1 ft 1 in	33 cm	1 ft 1 in
F X G	Platform dimensions	2,44 x 0,91 m	8 ft x 3 ft	2,44 x 0,91 m	8 ft x 3 ft

## E - General Specifications

Machine		HT23RTJ O - HT67RTJ O		HT23RTJ O SW	
		HT23RTJ PRO - HT67RTJ PRO		HT23RTJ PRO SW	
H	Storage length	7,8 m	25 ft 8 in	7,8 m	25 ft 8 in
J	Storage height	3,3 m	10 ft 10 in	3,3 m	10 ft 10 in
K	Center of gravity -X	1,42 m	4 ft 8 in	1,42 m	4 ft 8 in
L	Center of gravity -Y	1,20 m	3 ft 11 in	1,20 m	3 ft 11 in
M	Center of gravity -Z	1,45 m	4 ft 9 in	1,45 m	4 ft 9 in

## E - General Specifications

### 2 Major component masses

*N.B.-:MASSES MEASURED WITH EMPTY TANKS.*

Component	HT23RTJ O - HT23RTJ PRO - HT67RTJ O - HT67RTJ PRO	HT23RTJ O SW - HT23RTJ PRO SW
Wheel mass	279 kg +/- 18kg (611 lb +/- 39 lb)	
Frame assembly mass	7000 kg - 15,434 lbs	7000 kg - 15,434 lbs
Counterweight mass-Turntable	2450 kg - 5.402 lbs	2450 kg - 5.402 lbs
Counterweight mass-Chassis	2 x 763 kg - 2 x 1,682lbs	2 x 763 kg - 2 x 1,682lbs
Turret assembly mass	4250 kg - 9,371 lbs	
Engine compartment mass	360 kg - 794 lbs	
Boom assembly mass	1830 kg - 4,035 lbs	
Jib assembly mass	153 kg - 337 lbs	
Platform assembly mass (with a sliding bar)	191 kg - 421 lbs	
Platform assembly mass (with a door)	197 kg - 434 lbs	

## E - General Specifications

### 3 Acoustics and vibrations

The acoustics and vibrations specifications are based upon the following conditions:

- The airborne noise emissions at workstation are determined per European Directive 2006/42/CE.
- The guaranteed sound power level LWA (displayed on the product) is determined per European Directive 2000/14/CE.
- The vibrations transmitted by the machinery to the hand/arm system and to the whole body are determined per European Directive 2006/42/CE.

Specifications	
Sound pressure level at workstation	75 dBA
Guaranteed sound power level	101 dBA
Vibrations hand/arm	Vibration transmitted by this MEWP to the hand-arm does not exceed 2,5 m/s <sup>2</sup> (98,4 in/s <sup>2</sup> )
Vibrations whole body	Vibration transmitted by this MEWP to the whole body does not exceed 0,5 m/s <sup>2</sup> (19,6 in/s <sup>2</sup> )

## E - General Specifications

### 4 Wheel/Tire assembly

#### 4.1 Technical specifications



Component	Standard wheel	Variant wheels
Reference number	Solideal 385 x 65-22.5	Exmile 1025 x 365
Type	Standard foam	Solid tires/tyres
Wheel mass	279 kg +/- 18kg (611 lb +/- 39 lb)	288 kg +/- 5kg (635 lb +/- 11 lb)
Size	1100 / 401 mm (3ft 7in / 1ft 4in)	1025 / 365 mm (3 ft 4 in / 1 ft 2 in)
Torque	300 Nm (221 ft lbs)	

## E - General Specifications

### 4.2 Inspection and maintenance

Replace the wheels and the tires if any of the following conditions exist

- Presence of cracks, damage, deformation or other faults on the hub
- Damage to the tire:
  - Cut or hole > 3 cm (2 in) in the rubber side wall.
  - Blister or pronounced lump on the external and lateral wall.
  - Damaged wheel stud.
  - Damage or wear on the side wall to the extent that the reinforcing wire is visible.
  - Consistent wear of the ground contact surface greater than 25%

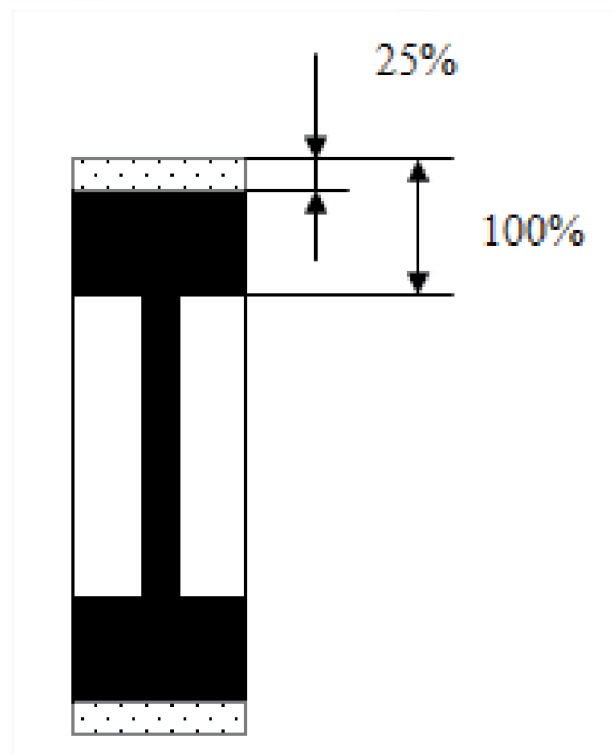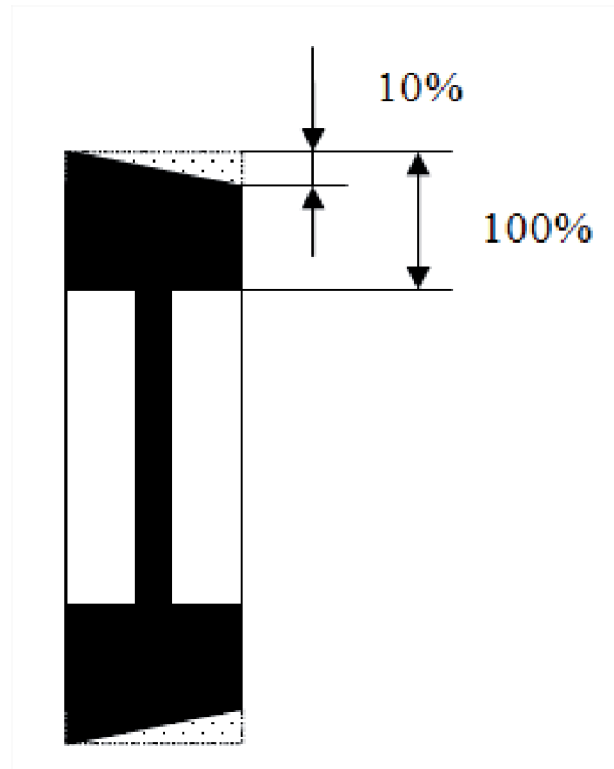

## E - General Specifications

---



Tires and rims are critical components for the stability of the machine. For safety reasons

- Use only HAULOTTE® spare parts according to the technical characteristics of the machine. Refer to the spare parts catalog.
- Do not replace factory-installed tires with tires of different specifications or ply rating.
- Never replace foam filled tire with a pneumatic (air filled) tire.

### Procedure of replacement

- Loosen the wheel nuts on the wheel to be removed.
- Raise the machine using a jack or a hoist.
- Remove the wheel nuts.
- Remove the wheel.
- Install the new wheel.
- Lower the machine to the ground.
- Tighten the wheel nuts to the recommended torque.

***N.B.-:IF A WHEEL HAS BEEN REPLACED, WHILE OBSERVING THE AXLE TRACK PATTERN CHECK FOR CORRECT INSTALLATION.***



## F - Maintenance

---

<b>1</b>	<b>General.....</b>	<b>3</b>
<b>2</b>	<b>Maintenance Schedule.....</b>	<b>4</b>
<b>3</b>	<b>Inspection program.....</b>	<b>5</b>
3.1	General program.....	5
3.2	Daily inspection.....	5
3.3	Periodic inspection.....	5
3.4	Reinforced inspection.....	6
3.5	Major inspection.....	6
<b>4</b>	<b>Repairs and adjustments.....</b>	<b>7</b>



## 1 General

As an owner and/or operator of Haulotte equipment, your Safety is of utmost importance to HAULOTTE® , which is why HAULOTTE® places such a high priority on product safety.

INSPECTIONS are not only required by HAULOTTE®, but may also be required by industry standards and/or local regulations.

To ensure your equipment continues to achieve the level of performance set in the factory, it is important to maintain it regularly. We remind you that it is strictly forbidden to make any modifications. Regular and timely inspections will reduce equipment down time as well as prevent possible injury.

***N.B.-:DO NOT OPERATE UNLESS YOU ARE FAMILIAR AND TRAINED IN THE PRINCIPLES OF SAFE MACHINE OPERATION.***

Overview:

- A walk-around inspection of the machine takes only a few minutes at the beginning and end of each shift  
— The best way to prevent issues.

What to Do:

- Use your senses: sight, smell, hearing and touch.

Frequency:

- Check your machine periodically during your entire workday.
- Make sure to do your inspection the same way every time.
- Complete one of these inspections at the start and end of each shift.


***N.B.-:IF DAMAGE OR UNAUTHORIZED MODIFICATIONS ARE DISCOVERED, THE MACHINE MUST BE REMOVED FROM SERVICE UNTIL REPAIRS ARE MADE BY A QUALIFIED SERVICE TECHNICIAN.***

It is the owner's responsibility to ensure the required maintenance as recommended by Haulotte is completed prior to the operation of the machine.

If regular maintenance is not carried out, this may:

- Void the warranty.
- Cause machine malfunction.
- Reduce machine reliability and shorten its service life.
- Jeopardize operator safety.

HAULOTTE Services® technicians are specially trained to carry out extensive repairs, interventions or adjustments on the safety systems or elements of HAULOTTE® machines. They carry genuine HAULOTTE spare parts and tools as required, and also provide fully documented reports on all work completed.

The inspection and maintenance table, identifies the role and the responsibilities of each party in periodical machine maintenance.  C 3 - Inspection and Functional test.

## 2 Maintenance Schedule

This section provides the necessary information needed to place the machine in safe operation. In accordance with the regulations that are currently applicable, this machine is designed to have a 10 year life span in normal usage conditions. The life may be extended or reduced dependent on the severity of operating conditions, the machine condition itself and by conducting effective inspections and maintenance in addition to other external factors. There are a number of factors which can affect the design life including but not limited to, severity of operating conditions/routine maintenance which should be carried out in accordance with this manual.

Severity of operating conditions may require a reduction in time between maintenance periods. Machines that have been out of service or have not been in use for more than 3 months must undergo a periodic inspection before the machine is put back into service.

Maintenance must be carried out by a competent company or person familiar with mechanical procedures.

Maintenance operations performed must be recorded in a register / log book of the machine.

### 3 Inspection program

#### 3.1 General program

The machine must be inspected on a regular basis at intervals of no less than once 1 per year. The purpose of the inspection is to detect any defect which could lead to an accident during routine use of the machine. Local standards and regulations may require more frequent inspections.

HAULOTTE® requires Reinforced and Major Inspections to be carried out on the product to extend its service life.


Inspections must be carried out by a competent company or person.

The inspection results must be recorded in the safety register or machine log book controlled and overseen by the company manager. This register or machine log book and the list of competent repair persons must be made available to the government work inspector and HAULOTTE Services®.

When	Person-in-charge	Stakeholder	What
Before sale	Owner (or renter)	Competent technician or qualified technician HAULOTTE Service®	Periodic inspection
Before rent	Owner (or renter)	Competent technician or qualified technician HAULOTTE Service®	Daily inspection
Before use or every change of user	Operator	Operator	Daily inspection
Annually ( 1 year)	Owner (or renter)	Competent technician or qualified technician HAULOTTE Service®	Periodic inspection
5 years	Owner (or renter)	Competent technician or qualified technician HAULOTTE Service®	Reinforced inspection
10 years	Owner (or renter)	Competent technician or qualified technician HAULOTTE Service®	Major inspection

#### 3.2 Daily inspection

The Daily inspection includes a visual inspection, operational checks and testing of the safety systems. This must be conducted by the operator before using the machine.

This inspection is the responsibility of the user. Refer to  C 3.1 - Daily inspection.

#### 3.3 Periodic inspection

The Periodic inspection is a thorough evaluation of the operation and safety features of the machine.

It must be conducted before the sale / resale of the machine and/or at least once every year.

Local regulations may have specific requirements on frequency, and content of inspections.

The severity of operating conditions may require frequent inspections.

This inspection is the responsibility of the owner, and inspections must be carried out by a competent company or person.

This inspection is in addition to the daily inspection.

This inspection should also be conducted after:

- Extensive dismantling and reassembly of major components.
- Repairs involving the machine's essential components.
- Any accident causing stress to the machine.

### 3.4 Reinforced inspection

The Reinforced inspection is a thorough evaluation of the machine's structural components, to ensure proper functionality of the machine.

This evaluation must occur at a frequency of 5000 hours or every 5 years.

This inspection is the responsibility of the owner, and it must be conducted by a HAULOTTE Services® technician or by a competent company or person.

This inspection includes:

- Daily inspection
- Periodic inspection

***N.B.-:REFER TO THE MAINTENANCE MANUAL FOR DETAILS.***

### 3.5 Major inspection

The Major inspection is a thorough evaluation of the machine's integrity and proper functioning; after a normal service life of 10 years.

This evaluation must take place after 10 years of operation and then repeated every 5 years thereafter.

The severity of operating conditions may require frequent inspections.

This inspection is the responsibility of the owner, and it must be conducted by a HAULOTTE Services® technician or by a competent company or person.

This inspection includes:

- Daily inspection
- Periodic inspection
- Reinforced inspection

***N.B.-:REFER TO THE MAINTENANCE MANUAL FOR DETAILS.***

## 4 Repairs and adjustments

Extensive repairs, interventions or adjustments on the safety systems or components must be performed by a HAULOTTE Services® technician. Use original spare parts and components only.

***N.B.-HAULOTTE SERVICES® TECHNICIANS ARE TRAINED PROFESSIONALS TO PERFORM EXTENSIVE REPAIRS, INTERVENTIONS AND ADJUSTMENTS ON THE SAFETY SYSTEMS OR COMPONENTS OF HAULOTTE® MACHINES. THE TECHNICIAN CARRIES GENUINE HAULOTTE® SPARE PARTS AND TOOLS AS REQUIRED, AND ALSO PROVIDES FULLY DOCUMENTED REPORTS ON ALL WORK COMPLETED.***

HAULOTTE Services® will not take responsibility for any outcomes resulting from inferior services or repairs performed by other unauthorised personnel.

HAULOTTE® reminds that NO modifications SHALL be carried out without the written permission of HAULOTTE®.

Any unauthorised repairs/modifications will void HAULOTTE® warranty.

**To check for safety campaigns, consult our website: [www.haulotte.com](http://www.haulotte.com)**



***N.B.-WHEN DISPOSING OR SCRAPPING THIS MACHINE, PLEASE CONSIDER APPROPRIATE METHODS OF RECYCLING. ANY ITEMS THAT REQUIRE SPECIFIC DISPOSAL ARE LISTED WITH INSTRUCTIONS IN THE MAINTENANCE MANUAL.***



**G - Options**

<b>1</b>	<b>Compatibility.....</b>	<b>3</b>
<b>2</b>	<b>Advanced Access Management - Access control and usage restriction.....</b>	<b>4</b>
2.1	Description.....	4
2.2	Additional functions.....	5
2.3	SUPER USER status.....	6
2.4	Code for removing restrictions.....	6
2.5	Operation.....	7
<b>3</b>	<b>Dual load.....</b>	<b>18</b>
<b>4</b>	<b>Platform.....</b>	<b>19</b>
4.1	Swing gate.....	21
<b>5</b>	<b>On-board generator.....</b>	<b>22</b>
5.1	Description.....	22
5.2	Characteristics.....	22
5.3	Safety precautions.....	22
5.4	Pre-operation inspection.....	22
5.5	Operation.....	23
<b>6</b>	<b>Glazier's kit.....</b>	<b>24</b>
6.1	Description.....	24
6.2	Characteristics.....	24
6.3	Safety precautions.....	24
6.4	Pre-operation inspection.....	24
6.5	Operation.....	24
6.6	Assembly/Dis-assembly.....	26
6.7	Specific decals .....	27
<b>7</b>	<b>Welder's kit.....</b>	<b>28</b>
7.1	Description.....	28
7.2	Characteristics.....	28
7.3	Safety precautions.....	28
7.4	Pre-operation inspection.....	28
7.5	Operation.....	28
7.6	Assembly-Dis-assembly.....	29
7.7	Specific decals .....	30
<b>8</b>	<b>Plumber's kit.....</b>	<b>31</b>
8.1	Description.....	31
8.2	Characteristics.....	31
8.3	Safety precautions.....	31
8.4	Pre-operation inspection.....	31
8.5	Operation.....	31
8.6	Assembly-Dis-assembly.....	32
8.7	Specific decals, optional.....	33
<b>9</b>	<b>Activ' Shield Bar - Secondary crush risk reduction system (If fitted) .....</b>	<b>34</b>
9.1	Description.....	34
9.2	Characteristics.....	34
9.3	Safety precautions.....	35
9.4	Pre-operation inspection.....	36
9.5	Operation.....	36
9.6	Specific decals .....	36



## 1 Compatibility



Before installing any options or accessories, consult HAULOTTE® to check compatibility.

## 2 Advanced Access Management - Access control and usage restriction

### 2.1 Description

Access control and usage restriction are options available on a machine equipped with the SHERPAL solution. These options enable the use of the machine to be limited.

These limitations are set and managed from the MyHaulotte platform by the fleet manager.

#### 2.1.1 Access control

The purpose of the access control is to prohibit lifting by an unauthorised operator. Access to the machine is via the RFID code and/or RFID board on the keyboard of the remote RFID reader.

Access control also allows the machine owner to block access to the machine's diagnostic screens for users without the level 3 code (Code available to authorised technicians only). The level 3 code must be entered on the machine's screen.

#### 2.1.2 Usage restriction


The usage restriction is a machine-related limitation. The usage restriction restricts the use of the machine when it is outside of the conditions of use predefined by the manager.

This function can be set from the MyHaulotte platform by those with the appropriate roles and rights.

The configurable conditions of use are as follows:

- GEOFENCE:-Authorisation for geolocalised use
- TIMEFENCE:-Authorisation for use according to defined time slots
- Remote restriction:-Forced activation of a usage restriction, regardless of the GEOFENCE and TIMEFENCE conditions
- Tracker fault:-Activation of the restriction if tracker in default

When the machine is outside of its conditions of use, only movements allowing micro-speed movement and folding are authorized.

When the machine is subject to a restriction, a message indicates this on the screen of the ground control panel. The user in the basket is notified by the indicator light on the control panel  which flashes at a frequency of 1s ON - 1s OFF.

#### 2.1.3 GEOFENCE

The manager can activate the GEOFENCING restrictions in order to limit the machine's use inside a so-called AUTHORIZED geographical zone or outside a so-called PROHIBITED geographical zone, which he has defined. If the machine leaves this perimeter, its functionality will be restricted..

#### 2.1.4 TIMEFENCE

The manager can activate the TIMEFENCING restrictions in order to restrict the usage during the defined period (Day, Time slot, ...). If the machine is used outside of the time slot defined by the manager, its functionalities will be restricted.

A GEOFENCING and/or TIMEFENCING restriction becomes active after the machine is folded.

#### 2.1.5 Remote restriction

It is also possible for the fleet manager to set a restriction remotely.

This is equivalent to the forced activation of a restriction, independent of the temporary TIMEFENCING or geolocalized GEOFENCING conditions of use.

## 2.2 Additional functions



### 2.2.1 Access control and usage restriction combination

The access control can be combined with the machine's usage restriction. If access control and usage restriction are active, the combination of the two applies so that the user is subject to the constraints of the strongest restriction.

### 2.2.2 tracker default function

This function allows you to force activation of the restriction in the event of a problem (e.g. tracker removed, unplugged or defective)..

This function is deactivated by default. This function can be activated on the Machine Sheet from the MyHaulotte platform.

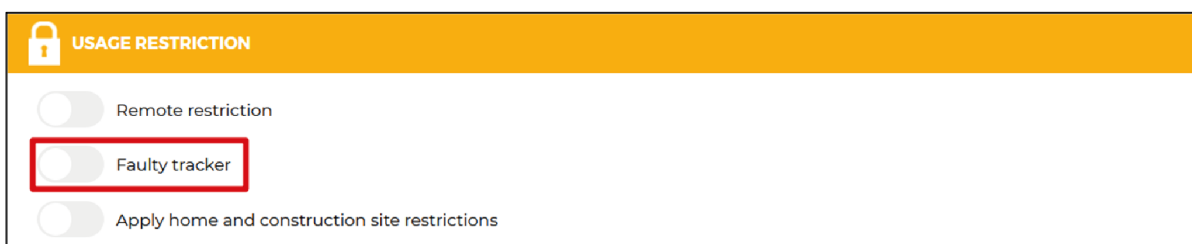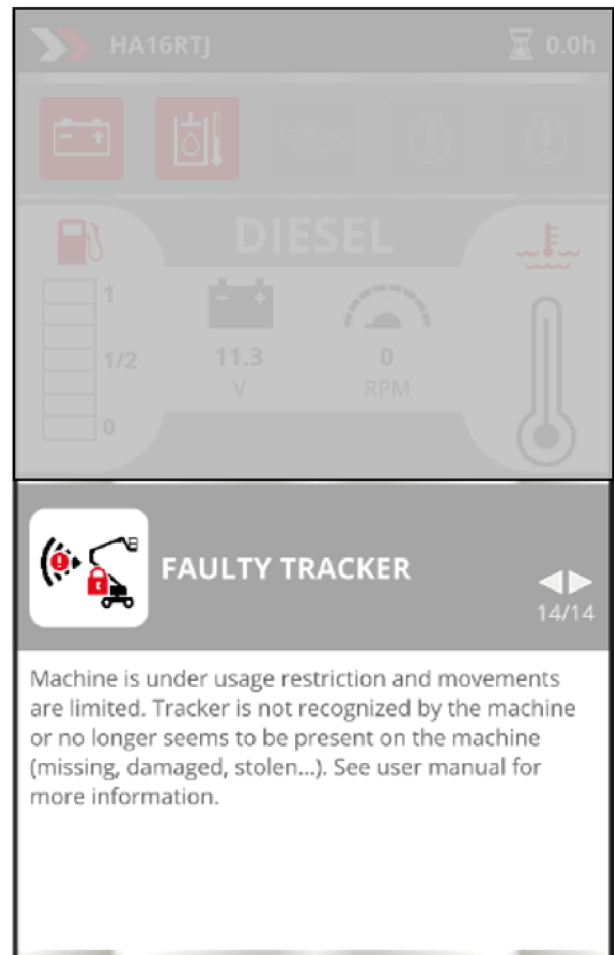

## 2.3 SUPER USER status

The fleet manager can add Super User status to a user from the MyHaulotte platform. The Super User profile enables the machine to be used, even if it is subject to a usage restriction.


The Super User profile can be connected to one or more machines.

The Super User profile can then start these machines using the PIN code generated by the fleet manager on MyHaulotte or using the RFID card assigned to him.

## 2.4 Code for removing restrictions

This code enables all restrictions to be permanently removed from a machine (Access control, usage restriction and remote restriction).


The code for removing restrictions is generated by the fleet manager on MyHaulotte. This code must then be entered on the machine's Restrictions Removal Code screen to unlock it permanently.

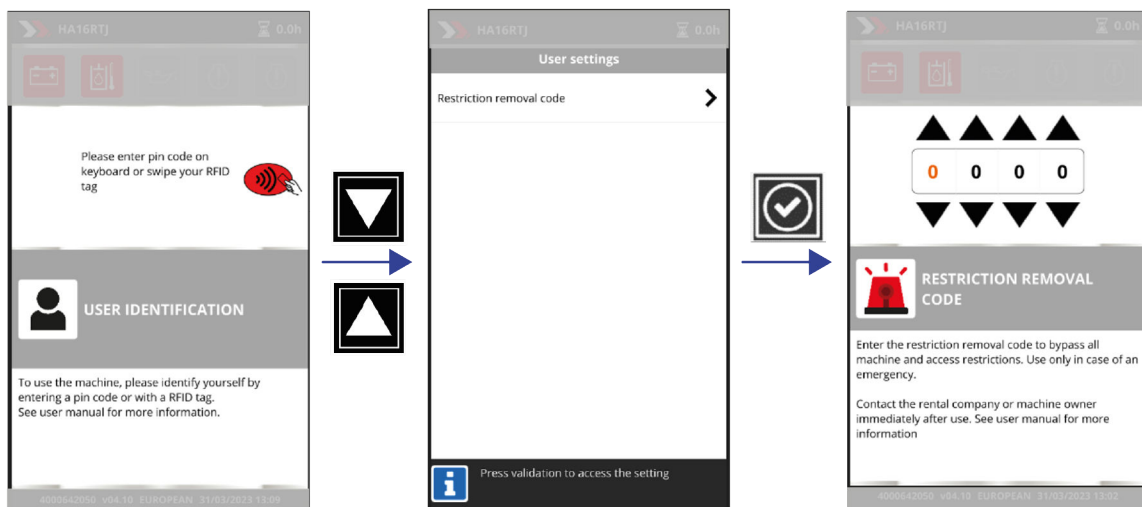

Enter the restriction removal code.




Permanently disable the restrictions and access control.

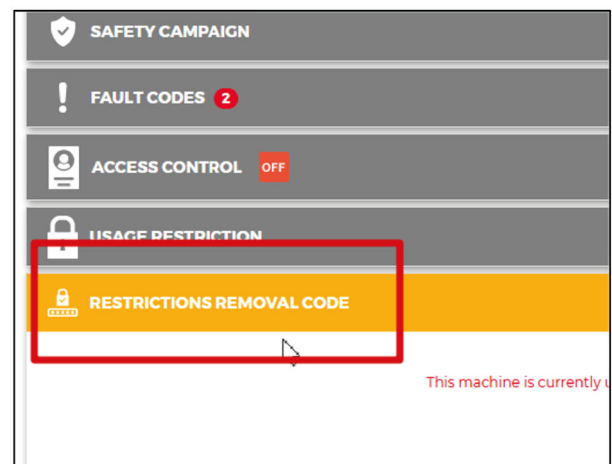

## 2.5 Operation


### 2.5.1 Using a machine with access control enabled

The following screen appears when starting up (energizing) the machine.

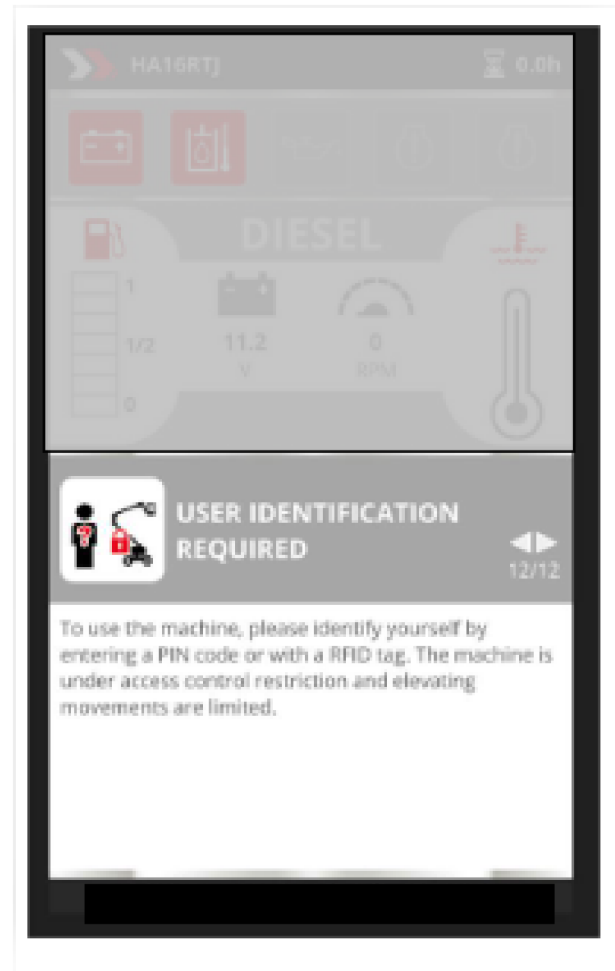


The machine can then be started by:

- A user with a User Identification start-up code. This code must be entered on the remote RFID keyboard.
- A Haulotte® technician with a Haulotte technician Identification. The level 3 code must be entered on the machine's screen.
- A user with a Restrictions Removal Code. This code is owned by the fleet manager or machine owner. The code is generated on the MyHaulotte platform and must be entered on the machine's screen. This code cannot be provided by Haulotte®.

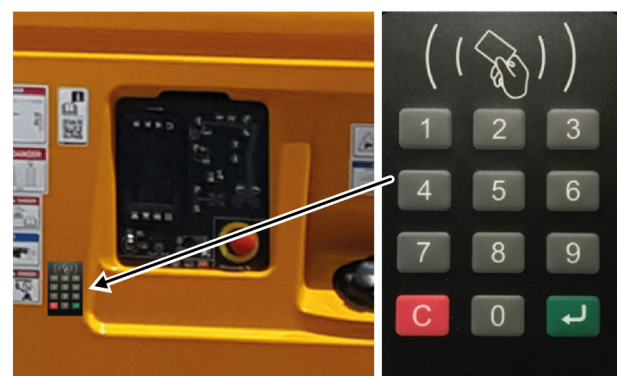



**Start-up when access control is enabled:**

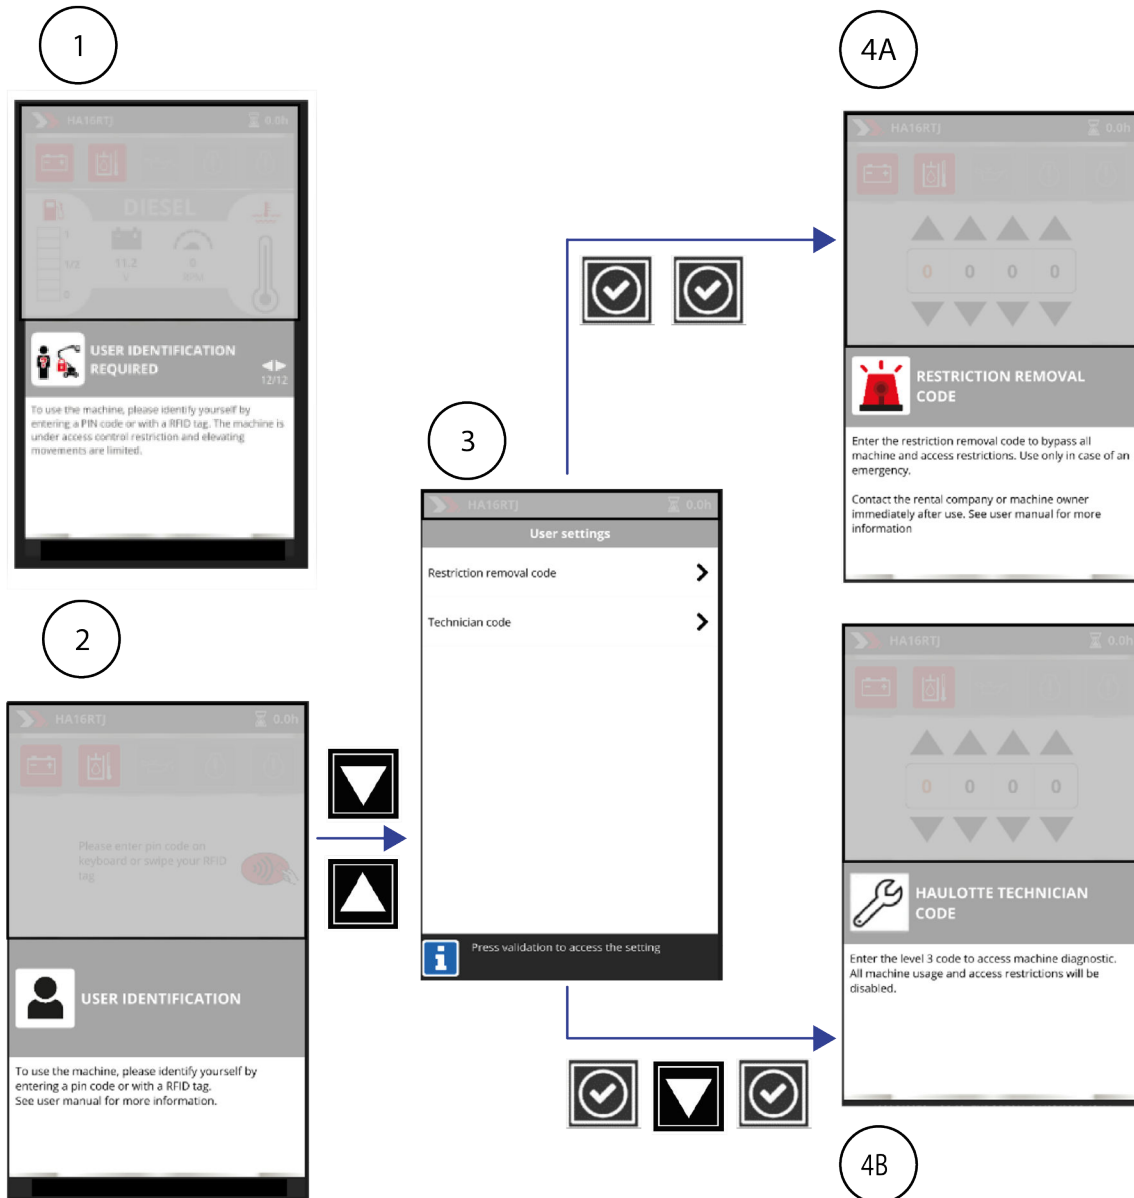- Enter the access code or use the RFID swipe card.
- Enter the Super User access code or use the Super User RFID swipe card.
- An authorized technician can use the level 3 code.
- Enter the restriction removal code on the machine's screen.



## G - Options

Marking	Actions
1	On the RFID keyboard, enter the PIN code or use an RFID card or enter the Super User code
2	/
4A	 Permanently disable the restrictions and access control. Return to normal operation.
4B	Enter the level 3 code  Temporary deactivation (until the machine is switched off) of the restrictions and access control.

## 2.5.2 Starting a machine with usage restriction enabled

### Timefencing restriction activated and use within the time slot authorized


Conventional start-up without access code:



- The following screen indicates that a restriction is in place on the machine.

### Timefencing restriction enabled and use outside range is permitted

Start-up when a TIMEFENCING usage restriction is programmed and enabled:

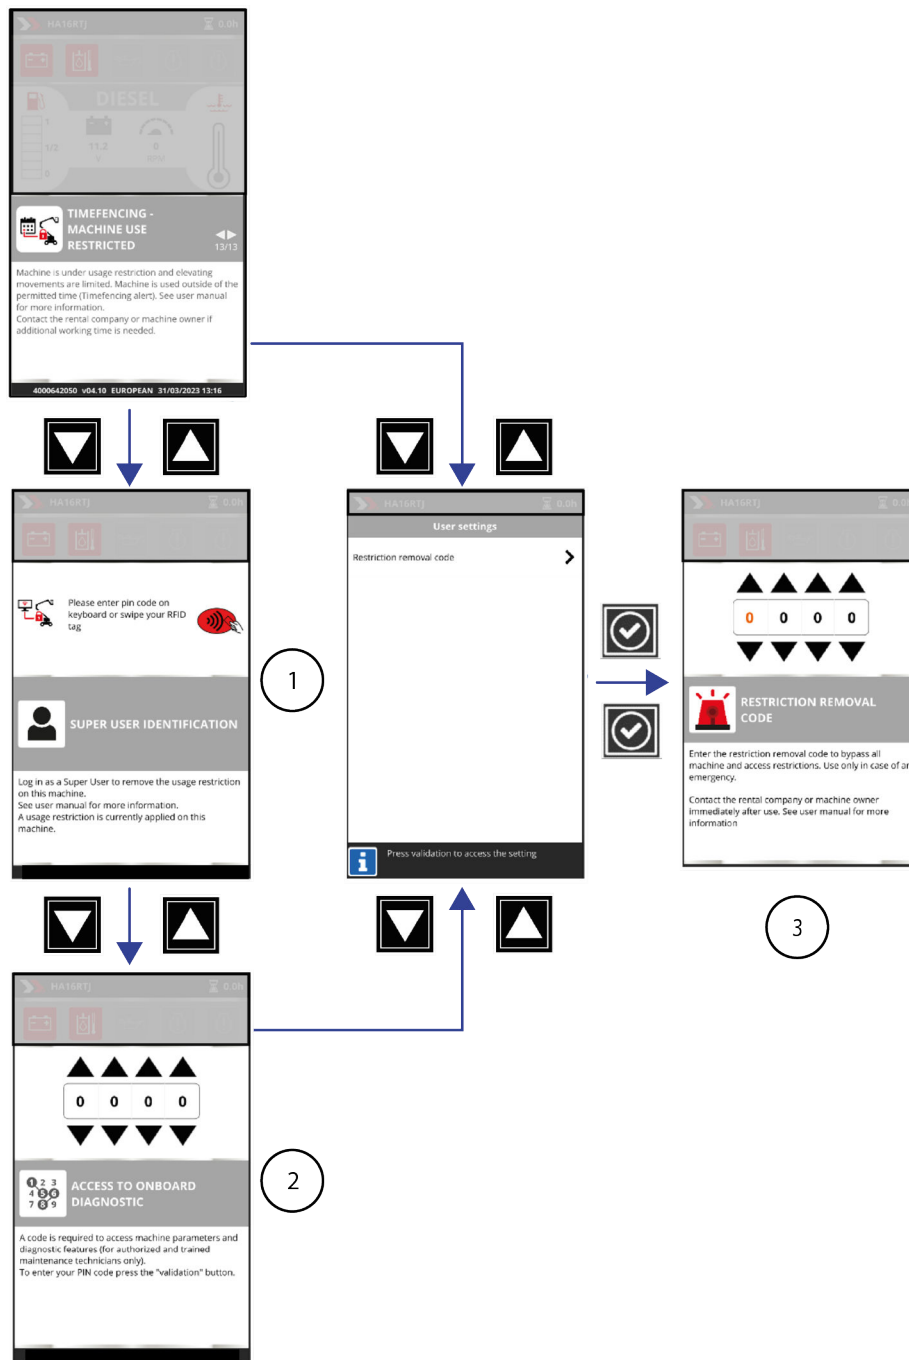- A message on the screen indicates that a restriction is enabled.
- Enter a Super User access code or use the Super User RFID swipe card.
- An authorized technician can use the level 3 code.
- A user with a code can enter the restriction removal code on the machine's screen.



Marking	Actions
1	On the RFID keyboard, enter the PIN Super User code or use an RFID card or enter the Super User code
2	Enter the level 3 code  Temporary deactivation of restrictions and access control.
3	Enter the restriction removal code  Permanently disable the restrictions and access control. Return to normal operation.

## Geofencing restriction enabled and used in an authorized geographical zone


Conventional start-up without access code:

- The following screen indicates that a restriction is in place on the machine.



## Geofencing restriction enabled and used outside of the authorized geographical zone

Start-up when a GEOFENCING usage restriction is programmed and enabled:

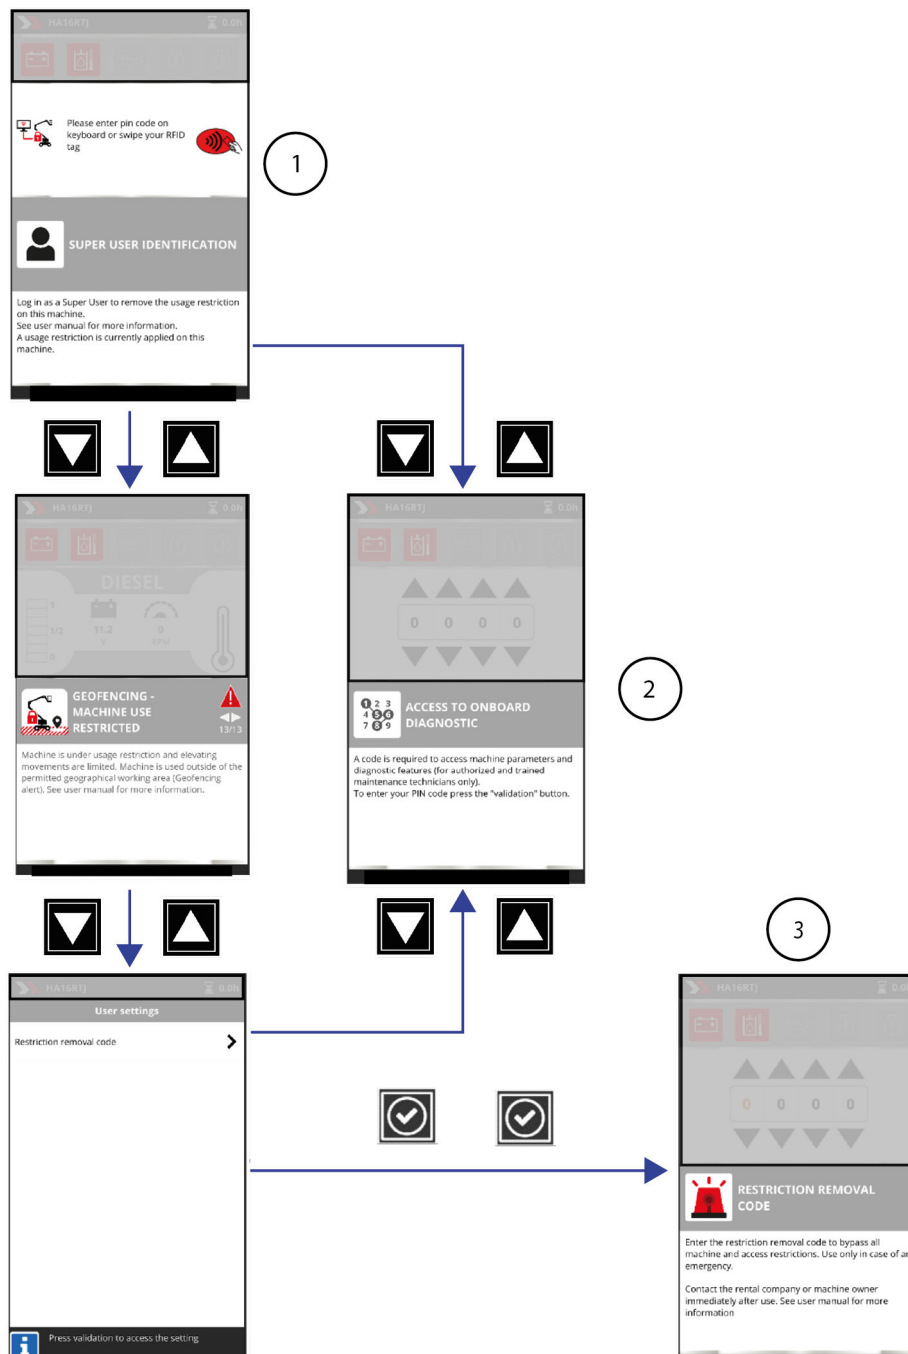- A message on the screen indicates that a restriction is enabled.
- Enter a Super User access code or use the Super User RFID swipe card.
- An authorized technician can use the level 3 code.
- Enter the restriction removal code on the machine's screen.




## G - Options

Marking	Actions
1	On the RFID keyboard, enter the PIN Super User code or use an RFID Super User card or enter the Super User code
2	Enter the level 3 code  Temporary deactivation of restrictions and access control.
3	Enter the restriction removal code  Permanently disable the restrictions and access control. Return to normal operation.



## Remote restriction

Start-up when remote restriction is programmed and enabled:

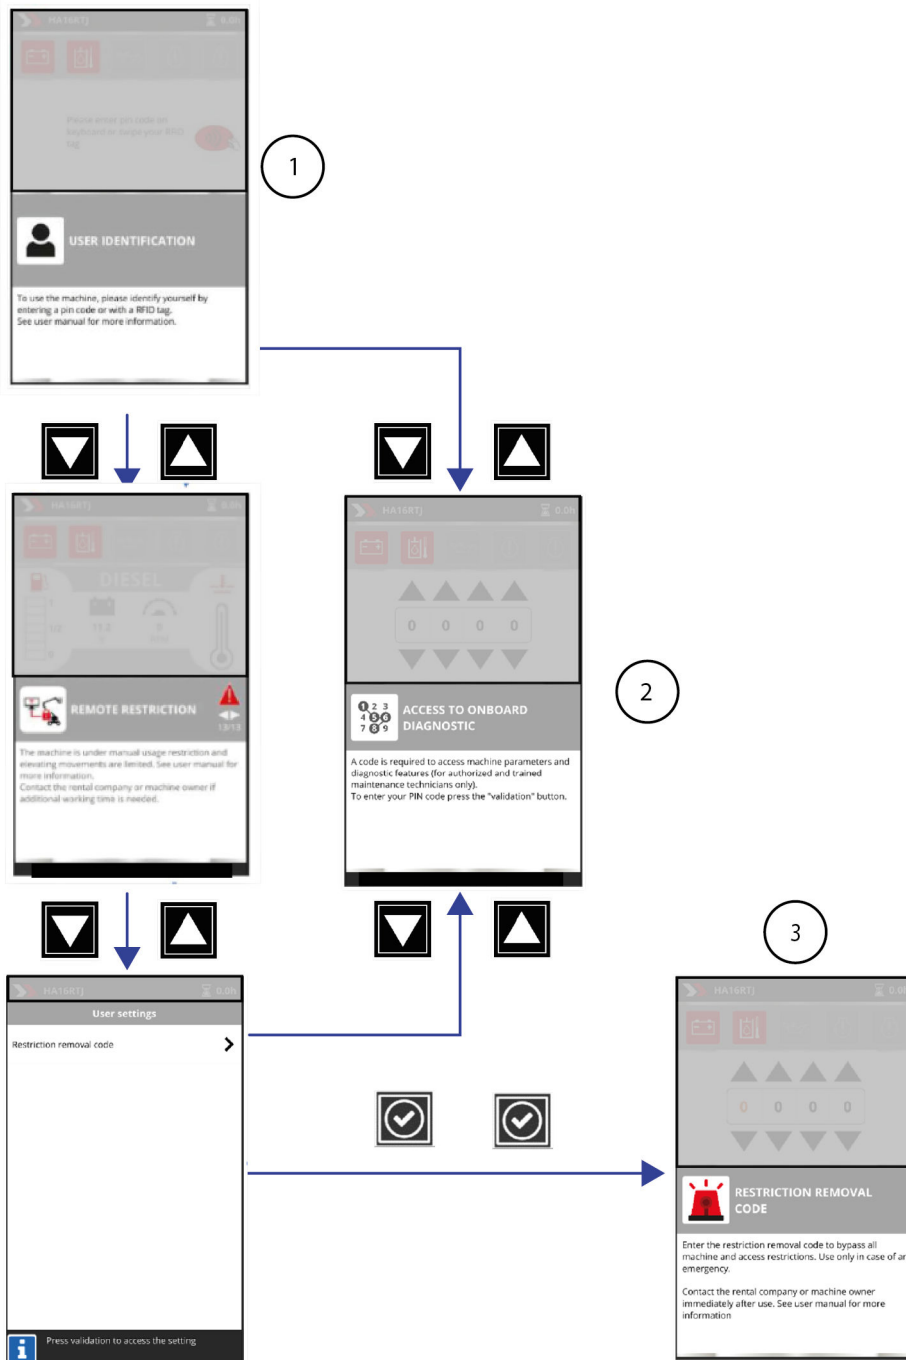- A message on the screen indicates that a restriction is enabled.
- Enter a Super User access code or use the Super User RFID swipe card.
- An authorized technician can use the level 3 code.
- Enter the restriction removal code on the machine's screen.




## G - Options



Marking	Actions
1	On the RFID keyboard, enter the PIN Super User code or use an RFID Super User card or enter the Super User code
2	Enter the level 3 code  Temporary deactivation of restrictions and access control.
3	Enter the restriction removal code  Permanently disable the restrictions and access control. Return to normal operation.

### Access control and usage restriction combination

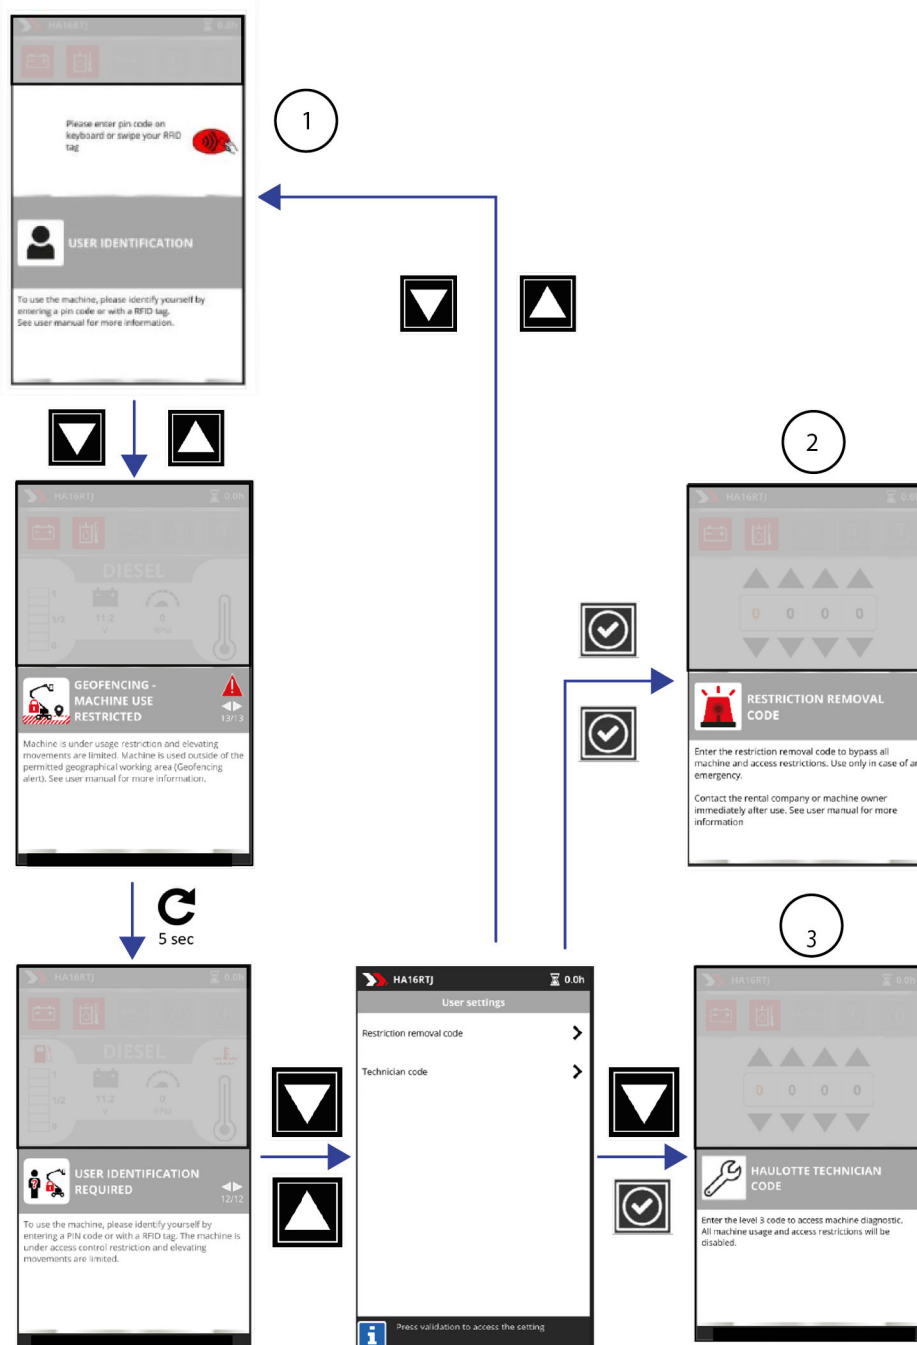- Enter the machine's access code or use the RFID swipe card (the machine remains under restricted use) or use the RFID Super User swipe card or use the Super User code.
- An authorized technician can use the level 3 code.
- Enter the restriction removal code on the machine's screen.



## G - Options

Marking	Actions
1	On the RFID keyboard, enter the PIN code or use an RFID card or enter the Super User code
2	Enter the restriction removal code  Permanently disable the restrictions and access control. Return to normal operation.
3	Enter the level 3 code  Temporary deactivation of restrictions and access control.

### 3 Dual load

#### Main specifications with the option fitted

Characteristics	HT23RTJ O - HT23RTJ O SW - HT67RTJ O - HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO
Maximum platform load	230 kg - 450 kg / 500 lbs - 1000 lbs

## 4 Platform

### Technical specifications

Type	HT23RTJ O - HT23RTJ O SW - HT67RTJ O - HT23RTJ PRO - HT23RTJ PRO SW - HT67RTJ PRO		Platform entry
Small platform	Platform width	0,8 m - 2 ft 7	Sliding bar
	Platform length	1,80 m - 5 ft 11 in	Swing gate
Large platform	Platform width	0,91 m - 3 ft	Sliding bar
	Platform length	2,44 m - 8 ft	Swing gate

### Sliding bar




**Swing gate**



**Technical specifications**

Type	HT67RTJ O - HT67RTJ PRO		Platform entry
Ultra narrow platform (Option - Only for single load machines) <sup>(1)</sup>	Platform width	0,77 m - 2 ft 6 in	Sliding bar
	Platform length	1,27 m - 4 ft 2 in	

**Ultra narrow platform**

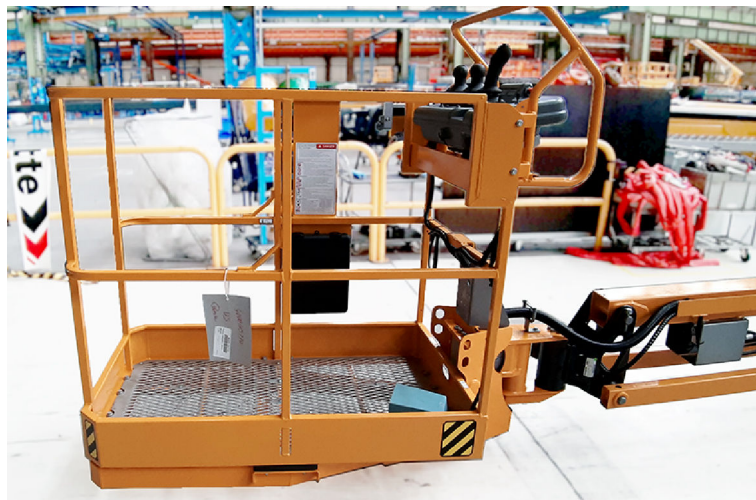

<sup>(1)</sup> For ANSI and CSA standards only

## 4.1 Swing gate

### 4.1.1 Description

SWING GATE consists of a laterally mounted pivoting  $\frac{1}{2}$  gate with closing latch, which enables a better access to platform. Spring loaded hinges and a latching mechanism allows the gate to swing inwards only.

### 4.1.2 Safety precautions



- The door forms part of the guardrail system and must be closed after entering the platform.




Pay attention to the toeboard when entering or leaving the platform.

### 4.1.3 Pre-operation instructions

- Check that the locking mechanism is correctly fastened.
- Check the hinges and latch operate correctly and are not deformed.
- Ensure that the gate returns automatically to the closed and fastened position after entering or exiting the platform.

### 4.1.4 Specific decals, optional

Location of the decals

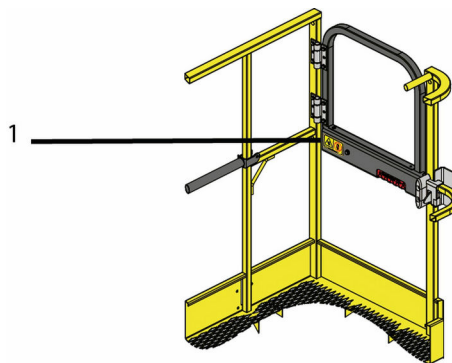

Marking	Description	Quantity	Part number
1	Hand crushing hazard	1	4001052080

## 5 On-board generator

### 5.1 Description

The optional socket on the platform is supplied by a hydraulically powered generator. The generator is located in the engine compartment. The generator is activated by a switch on the platform control box. The power output and voltage available at the socket depends on the option installed.

### 5.2 Characteristics

Nominal power output	Main output voltage	Alternating current frequency	Socket plug type	Regulation zone
3,5 kw	230 V	50 Hz	Single-phase	European community market
3,7 kw	115 V	50 Hz	Single-phase	United Kingdom market
3,7 kw	110 V	60 Hz	Single-phase	American market
6,5 kw	400 V	50 Hz	Three-phase	European conformity and Australian markets
9 kw	210 V	60 Hz	Three-phase	American market
9 kw	120 V	60 Hz	Single-phase	American market
12 kw	210 V	60 Hz	Three-phase	American market

### 5.3 Safety precautions



- Please read the instructions before using the option.
- Make sure that no one is beneath the platform.
- Check that the voltage required by the tool matches the voltage supplied by the socket.
- Do not overload the power circuit.
- Do not use electrical tools in water.
- Do not exceed the nominal output power.



Do not expose the platform socket to direct contact with a water beam or a pressure washer.


### 5.4 Pre-operation inspection




- Check that the generator is securely attached, that there are no missing or loose parts and no damage.
- Check the hoses before use to make sure there are no leaks or damage.
- Check the relay wiring.

## 5.5 Operation


Power on:

- Start the machine.
- Heat the engine for 15 min before any operation.
- From the platform control box, move the generator selector switch ( 79) to the right to activate the generator (  B - Platform control box) .
- Connect the tool to the socket.
- Connect or disconnect from the socket at any time.

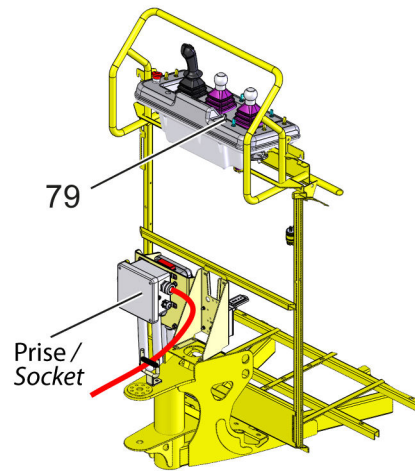

***N.B.-:MACHINE MOVEMENTS ARE PREVENTED WHEN THE GENERATOR SWITCH IS ON.***

Power off:

- Disconnect the tool from the socket.
- Move the generator selector switch ( 79) to the left to switch off the generator (  B - Platform control box) .
- Machine movements are once again functional.

## 6 Glazier's kit

### 6.1 Description

This attachment is an assembly designed to transport panels. This accessory comprises a tray that extends along the floor outside the platform. The panel(s) should be placed in the tray and secured to the guard rail with a strap (not supplied).

**N.B.:-THIS TRAY CAN BE USED ONLY WITH A SIDE ENTRY PLATFORM.**

### 6.2 Characteristics

Component	Characteristics
Maximum capacity	115 kg (220 lbs)
Weight of attachment	10 kg (22 lbs)
Maximum load surface	3 m <sup>2</sup> (32 sq.ft)
Maximum allowable height of the panel	1,20 m (3 ft 11 in)
Maximum allowed wind	CE / UKCA / AS : 12,5 m/s - 45 km/h - 28 mph ANSI / CSA : 7 m/s - 25 km/h - 15 mph

### 6.3 Safety precautions



- Please read and assimilate the instructions before using the attachment.
- This attachment is designed for transporting panels. Do not use this attachment for transporting other types of load.
- Do not suspend loads.
- Do not overload the attachment and ensure that the equipment is correctly attached by means of a strap (not supplied).
- Do not exceed the maximum allowable platform capacity. The combined weight of the attachment, the panel(s), the occupants, the tools and any other equipment must not exceed the maximum allowable platform capacity.
- Do not load panels whose surface area exceeds the maximum authorized surface area. Exposing an additional surface area to the wind reduces machine stability. Do not install any other attachments that increase the surface area exposed to the wind.
- Check that the position of the panel is not reducing visibility during maneuvers in the work environment. Do not transport panels whose height exceeds the authorized limit.
- When maneuvering, ensure that a safe distance is maintained between the panel and the obstacles in the work environment.
- Do not use the machine if the wind speed exceeds the allowable limit with the attachment.

### 6.4 Pre-operation inspection



- Check that the tray has no cracks or other damage.
- Check that the cradle is correctly installed and secured to the platform.
- Check that the information decal is present on the cradle and is legible.
- Check that the strap is not twisted or torn.

### 6.5 Operation

- Load the panel onto the tray on platform.
- Secure the panel tray on the guardrail by means of a strap (not supplied) with the correct strength and dimensions.

Strapping example(s)-Large panel




Strapping example(s)-Small panel



## 6.6 Assembly/Dis-assembly

### Tray

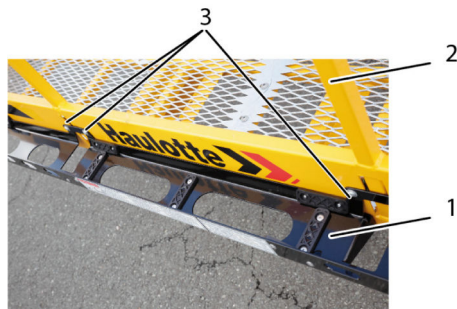

Marking	Description
1	Tray (Panel carrier)
2	Platform
3	Screws and nuts
4	Collars COLSON
5	Plastic protection


- Fix the tray ( 1 ) to the platform ( 2 ) using screws and bolts ( 3 )
- Install plastic protection ( 5 ) on the handrail and attach it using collars ( 4 )

#### **N.B.-:-TORQUE REQUIREMENTS: 16 NM**

- Pre-operation test: Place a load of 176 kg (390 lbs) on the carrier and carry out an inspection. Refer to the chapter on pre-operation inspection.

6.7 Specific decals

Location of the decals

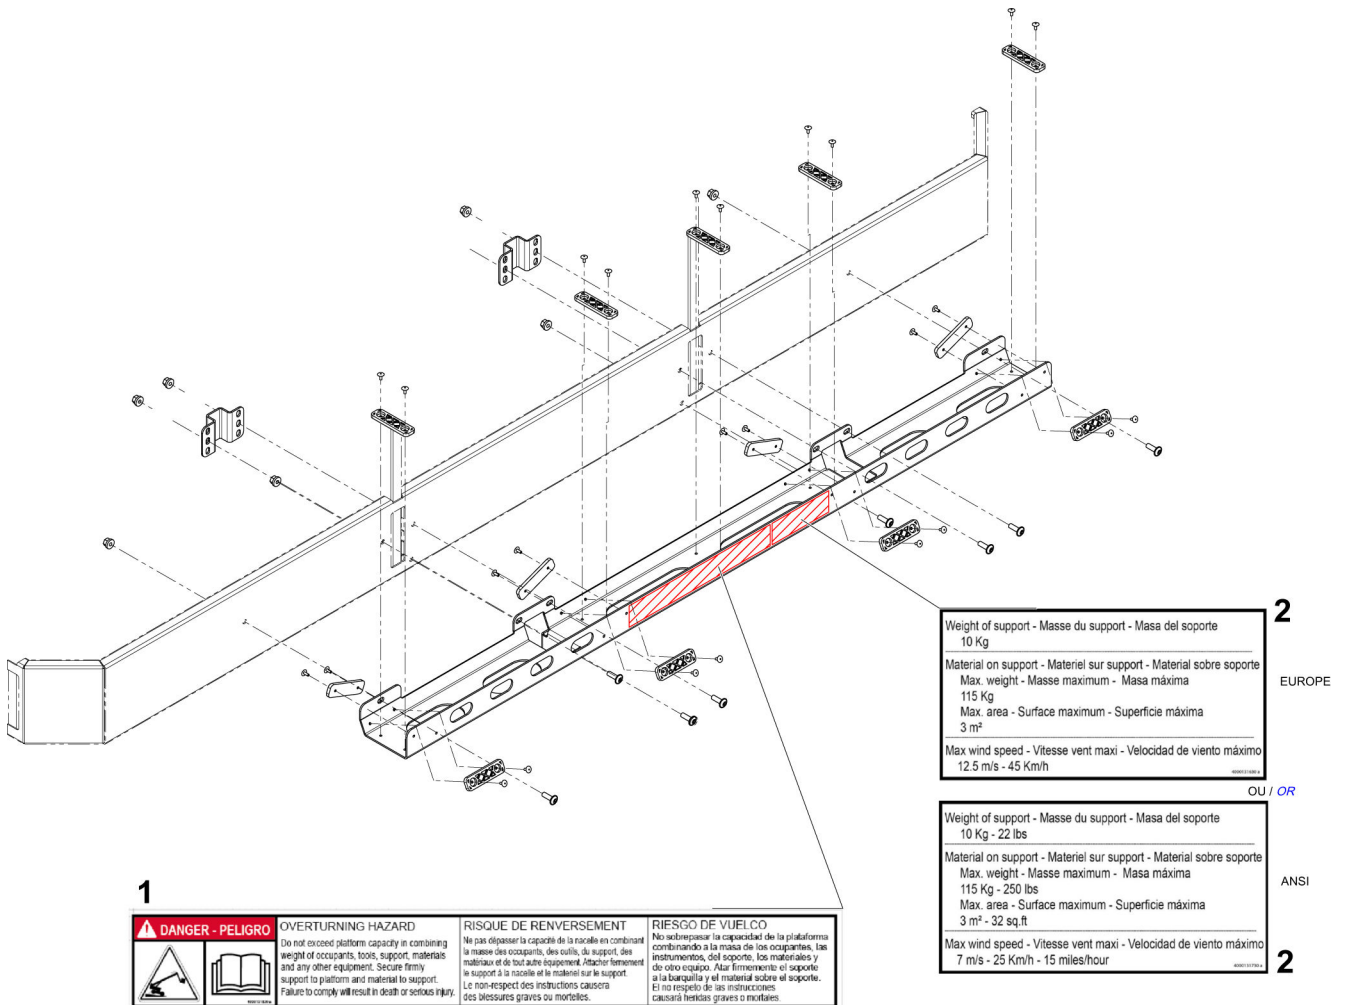

Marking	Description	Quantity	Part number
1	Risk of overturning	1	40000131830
2	Equipment characteristics	1	CE / UKCA / AS : 4001267770 ANSI / CSA: 4000131730

## 7 Welder's kit

### 7.1 Description

This carrier is designed for installing a welder (model type Miller CST280) on the carrier installed on the platform. The welder unit must be correctly attached to the carrier using the supplied flanges.

### 7.2 Characteristics

Component	Characteristics
Weight of the carrier	10 kg (22 lbs)
Maximum weight of the welding station (Carrier + welder)	30 kg (65 lbs)

### 7.3 Safety precautions



- Please read and assimilate the instructions before using the attachment.
- Do not use this attachment for installing any other type of welder unit. This attachment is specifically designed for the welder model type Miller CST280.
- Do not overload the carrier. Ensure that the carrier is secured to the platform and welder is retained with the fastening plate.
- Do not exceed the maximum allowable platform capacity. The combined weight of the attachment, the welding station, the occupants, the tools and any other equipment must not exceed the maximum allowable platform capacity.
- The carrier should always be positioned so that it is within the platform.

### 7.4 Pre-operation inspection




- Check that the carrier has no cracks or other damage.
- Check that the carrier is correctly installed and secured to the platform.
- Check that the information decal is present on the carrier and is legible.

### 7.5 Operation

- Load the welding station onto the carrier.
- Securely attach the welding station to the carrier using the flanges supplied.

## 7.6 Assembly-Dis-assembly

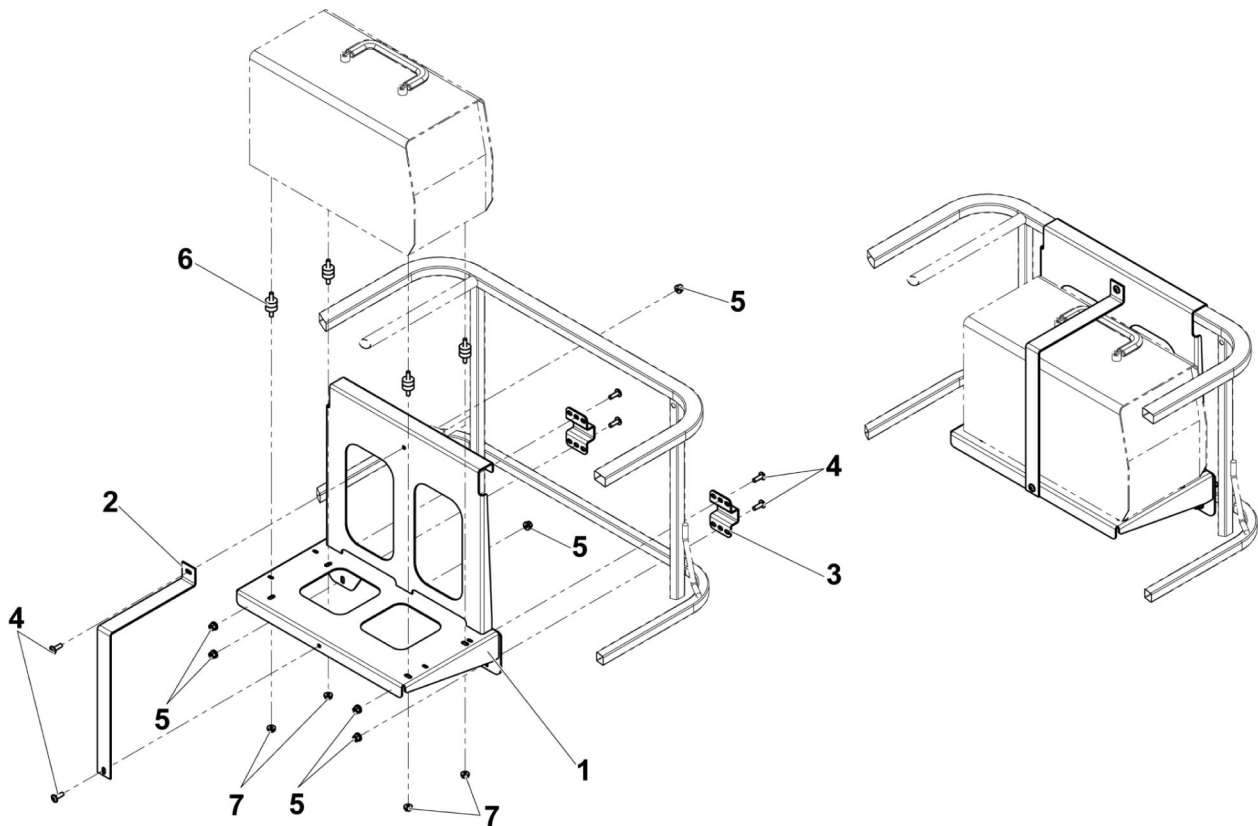

Marking	Description
1	Carrier
2	Fastening plate
3	Flange
4	Screws
5	Nuts
6	Rubber block
7	Nuts


- Place the carrier ( 1 ) flange over the top of the horizontal guardrail tube.
- Using the 2 flanges ( 3 ), 4 screws ( 4 ) and 4 locknuts ( 5 ), secure the carrier to the intermediate horizontal guardrail tube.
- Tighten the hardware to the recommended torque.

### **N.B.-:TORQUE REQUIREMENTS: 16 NM**


- Place the welder on the carrier ( 1 ).
- Secure the welder to the carrier using 4 rubber blocks ( 6 ), 4 nuts ( 7 ), 6 nuts ( 5 ) and fastening plate ( 2 ).
- Install the fastening plate ( 2 ) over the welder and secure it to the carrier with 2 screws ( 4 ) and 2 nuts ( 5 ).

7.7 Specific decals

Location of the decals

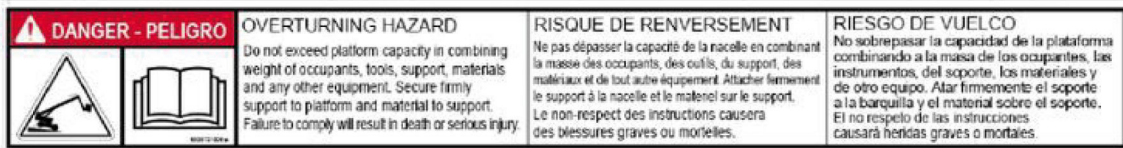

1

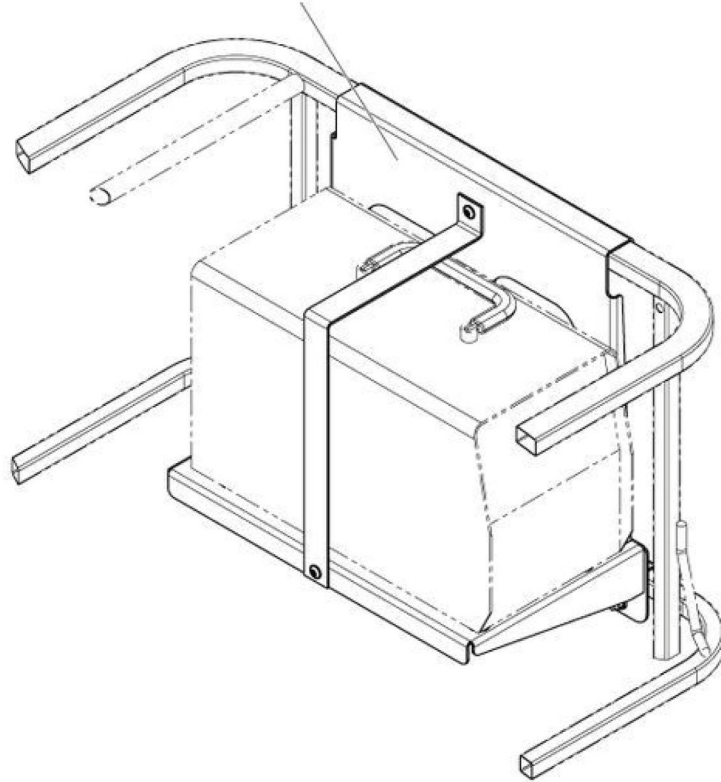

Marking	Description	Quantity	Part number
1	Risk of overturning	1	4000131830

## 8 Plumber's kit

### 8.1 Description

This attachment is an assembly designed to transport pipes and tubes. It comprises 2 cradles fixed to the rear side inside the platform. The load (material) should be placed in both the cradles and secured with a strap (not supplied).

### 8.2 Characteristics

Component	Characteristics
Weight of the carrier	8 kg (20 lbs)
Weight of the equipment on the carrier	80 kg (175 lbs)
Maximum load surface	0,8 m <sup>2</sup> (Ø 0,32 m x 2,5 m) / 8.6 sq.ft (Ø 1 ft x 8.6 ft)
Maximum wind speed allowed	12,5 m/s - 45 km/h - 28 mph

### 8.3 Safety precautions



- Please read and assimilate the instructions before using the attachment.
- This attachment is designed for transporting pipes and tubes. Do not use this attachment for transporting other types of load.
- Do not suspend loads.
- Do not overload the attachment and ensure that the equipment is correctly attached by means of a strap (not supplied).
- Do not exceed the maximum allowable platform capacity. The combined weight of the attachment, load, the occupants, the tools and any other equipment must not exceed the maximum allowable platform capacity.
- Do not load tubes whose surface area exceeds the maximum authorized surface area. Exposing an additional surface area to the wind reduces machine stability. Do not install any other attachments that increase the surface area exposed to the wind.
- Do not use the machine if the wind speed exceeds the authorized limit of the attachment.
- The cradles should always be positioned such that they are within the platform. Position the bottom end of the cradles such that they are resting on the platform floor.
- When maneuvering, ensure you maintain a safe distance between the load and the obstacles in the work environment.

### 8.4 Pre-operation inspection



- Check that the cradle has no cracks or other damage.
- Check that the cradle is correctly installed and secured to the platform.
- Check that the information decal is present on the cradle and is legible.
- Check that the strap is not twisted or torn.
- Check that the position of the load and attachment is not obstructing access to the platform or the controls.
- Check that the position of the attachment and the load is not reducing visibility during maneuvers in the work environment.


### 8.5 Operation

- Position the load to rest on the 2 cradles.
- Center the load on the cradles.
- Securely attach the load to each cradle with strap of adequate strength and dimensions.

## Strapping example(s)



## 8.6 Assembly-Dis-assembly

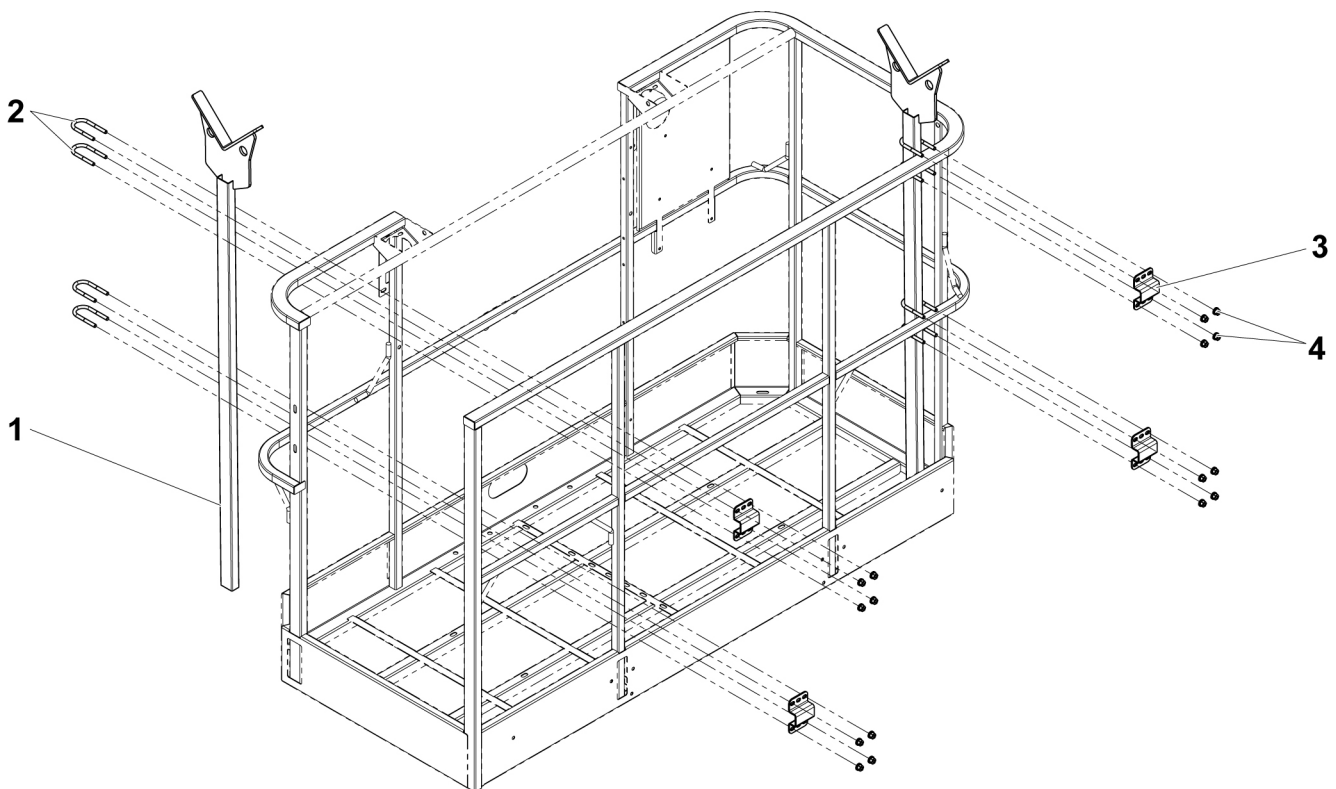

Marking	Description
1	Cradle
2	Fastening screw U bolt
3	Flange
4	Nuts

- Locate the cradles such that the load will be parallel to the length of the platform.
- Install two cradles ( 1 ) to the guardrails using 4 supplied flanges ( 3 ).


- Tighten up the flange using 2 supplied screw U bolts ( 2 ) and 4 nuts ( 4 ), wherever a cradle and the horizontal guardrail tubes intersect.

**N.B.-:TORQUE REQUIREMENTS: 16 NM**

- Ensure that the bottom of cradle is resting on the platform floor.
- Ensure that the distance between the 2 cradles support and center the load.
- Pre-operation test: Place and secure the load of 120 kg (265 lbs) on the cradles. Ensure that the cradles can support the load and that there is no visual structural damage.

### 8.7 Specific decals, optional

#### Location of the decals

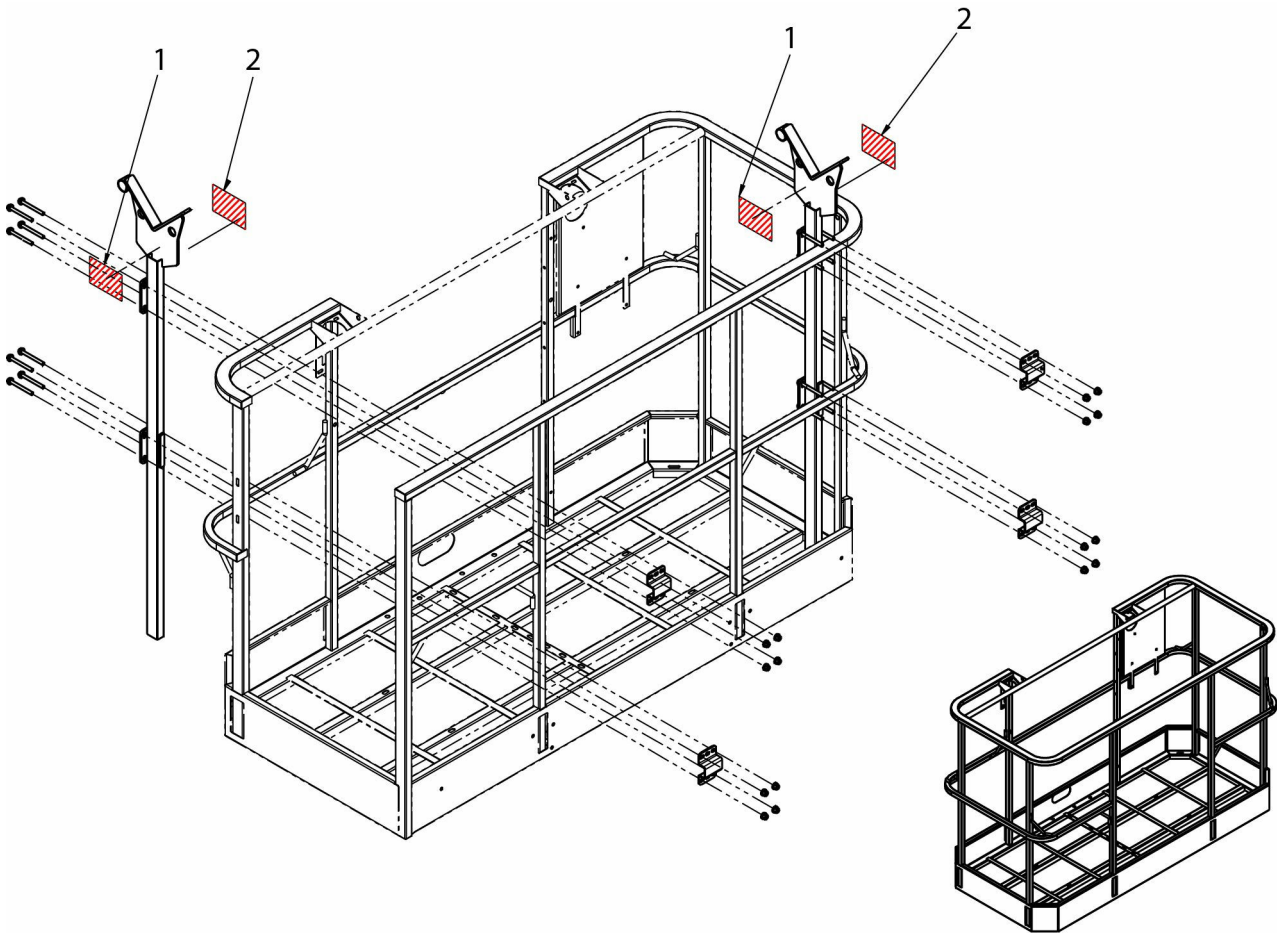

Marking	Description	Quantity	Part number
1	Risk of overturning	2	- In english: 4000131600 - In french: 4000131610 - In spanish: 4000131620 - In german: 4000708570
2	Equipment characteristics	2	4000131650

## 9 Activ' Shield Bar - Secondary crush risk reduction system (If fitted)

### 9.1 Description



General Specification Activ' Shield Bar:

- The Activ' Shield Bar system is a device designed to reduce the risk of crushing against the control console when the machine moves, and to notify ground personnel if it is triggered.
- If the Activ' Shield Bar is triggered, all movements are stopped, the horn will sound and the blue light will activate.
- From the platform control console, only movements allowing the user to be freed are possible.
- System status:
  - The green indicator light on the Activ' Shield Bar system is off when the system is inactive or disabled.
  - The green indicator light on the Activ' Shield Bar system flashes when the system is active (machine not moving).
  - The green indicator light on the Activ' Shield Bar system is on when the system is active (machine moving).




- The system does not protect against external collisions when the machine is not moving.
- The system does not reduce the risk of crushing when the speed of movements is excessive and/or not adapted to the environment.



This system does not relieve the operator from the responsibilities of learning and practicing the principles of safe use and operation of the machine as provided by the user manual, employer's safety rules and worksite regulations.

### 9.2 Characteristics

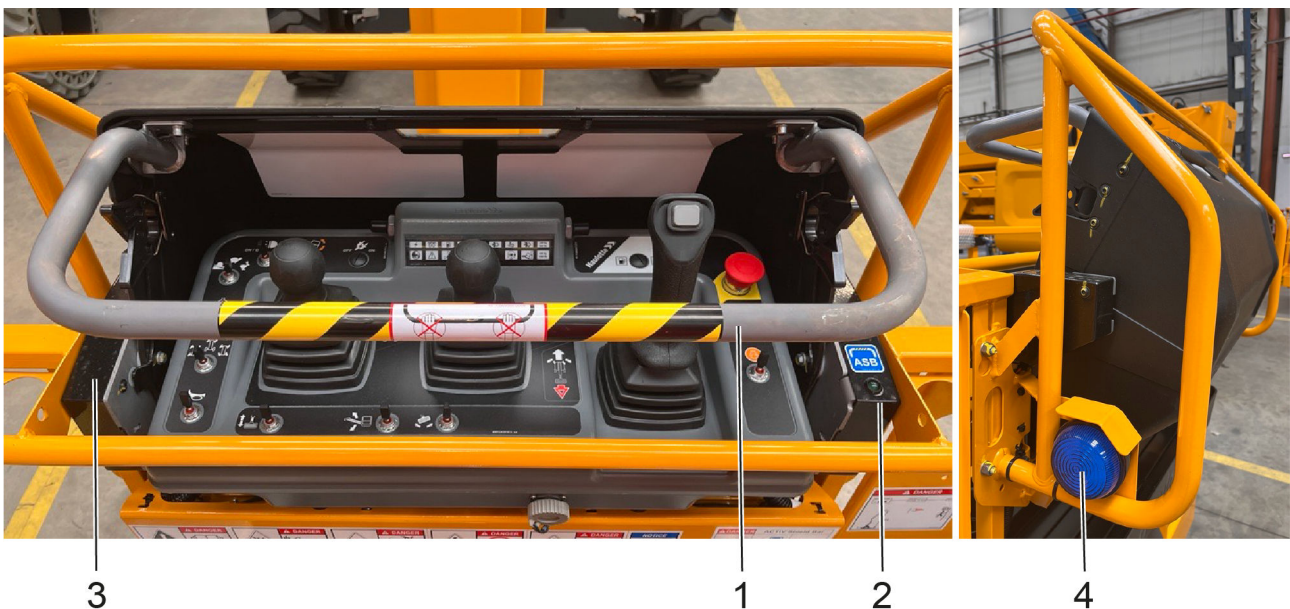

Marking	Description
1	Activation bar
2	Green indicator light
3	Sensor
4	Flashing light

### 9.3 Safety precautions





It is mandatory to ensure that the Activ' Shield Bar is functional at each start-up of the machine



Do not use the Activ' Shield Bar as a handhold. This could result in an inadvertent triggering of the Activ' Shield Bar.

- Check the work area for overhead clearances, obstructions or other possible hazards.
- When driving, position the platform so as to provide the best visibility possible and avoid any blind spots.
- Always ensure that the wheels are never driven any closer than 1 m from holes, bumps, tilts, obstructions, debris and ground coverings that may hide dangers.
- During operation, keep all the parts of the body inside the platform.
- To position the machine close to obstacles, you are advised to use the movements of the boom (arm, boom, etc.) instead of the drive movements.
- Do not drive fast in narrow or cluttered areas. Keep speed under control while making turns or sharp bends.

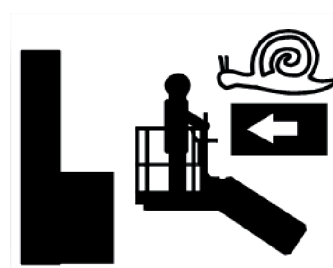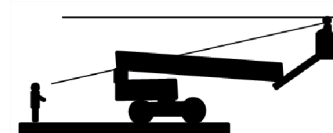

## 9.4 Pre-operation inspection



- If any item on the checklist is marked NO during the inspection; machine must be tagged and locked out and placed out of service.
- DO NOT operate the machine until all identified items are corrected and it has been declared safe for operation.

**You will need:** All machine functional tests to result positive.

Description	Yes	No
To ensure Activ' Shield Bar device is functioning correctly, perform the following:		
Select the upper console.		
Press the activation pedal and check that the green indicator light ( 2 ) flashes (machine not moving).		
Perform a movement and check that the green indicator light ( 2 ) is on.		
Simultaneously make a movement and push forward the activation bar to trigger the system: <ul style="list-style-type: none"> <li>- Check that all movements are interrupted.</li> <li>- Check that the horn and blue indicator light ( 4 ) are working.</li> </ul>		

**N.B.:-TO RESET THE ACTIV' SHIELD BAR SYSTEM, RELEASE THE ACTIVATION BAR, THE ACTIVATION PEDAL, THE CONTROLS, AND PRESS THE ACTIVATION PEDAL.**

## 9.5 Operation


The Activ' Shield Bar system is triggered by pushing the activation bar. All movements are interrupted, the horn sounds and the blue indicator light comes on. Only movements allowing the user to be freed are possible (all necessary precautions must be taken during these operations to prevent any collision with or entrapment against the structures).

For safety procedures, refer to  D 4 Rescue and Emergency Procedures.

To reset the Activ' Shield Bar system, release the activation bar, the activation pedal, the controls, and press the activation pedal.


## 9.6 Specific decals

### Location of the decals

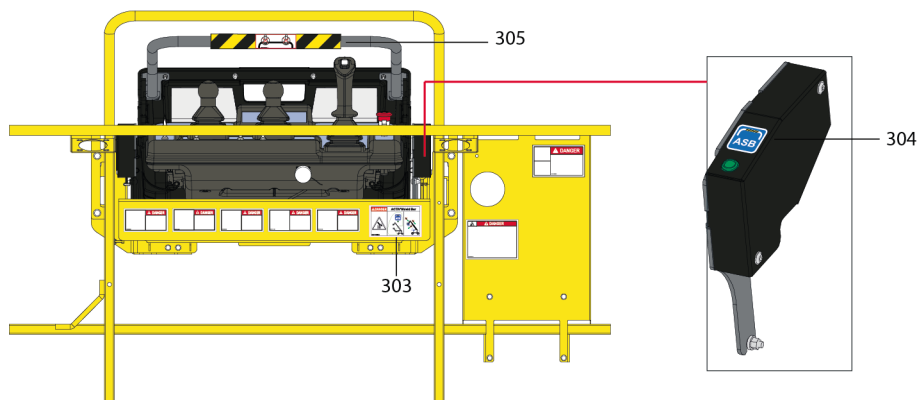

Marking	Description	Quantity	Part number
303	Activ' Shield Bar controls	1	4001364690
304	Activ' Shield Bar controls	1	4000596720
305	Do not lean on the bar	1	4000206690

**Activ' Shield Bar instructions**

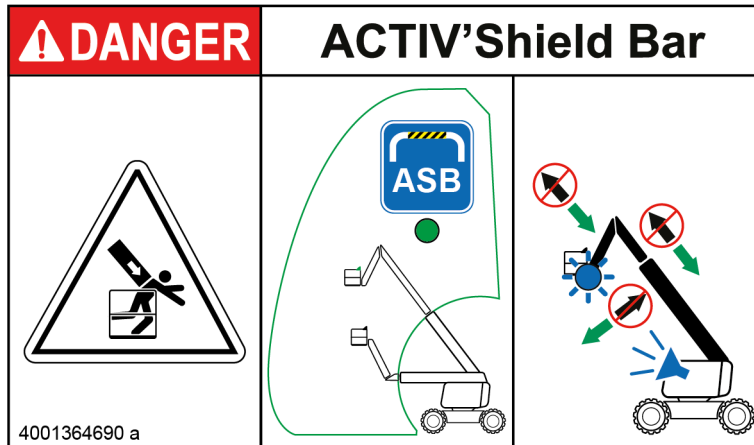



## H - Other information

---

<b>1</b>	<b>Conditions of warranty.....</b>	<b>3</b>
<b>2</b>	<b>Subsidiary contact information.....</b>	<b>4</b>
<b>2.1</b>	<b>California warning.....</b>	<b>5</b>



## H - Other information

---

### 1 Conditions of warranty

Our warranty conditions and extension contracts are now available on the websites of our sales network: [www.haulotte.com](http://www.haulotte.com)







## 2 Subsidiary contact information

	<p>HAULOTTE FRANCE PARC DES LUMIERES 601 RUE NICEPHORE NIEPCE 69800 SAINT-PRIEST <b>TECHNICAL Department:</b> <b>+33 (0)820 200 089</b> <b>SPARE PARTS : +33 (0)820 205 344</b> FAX : +33 (0)4 72 88 01 43 E-mail : <a href="mailto:haulottefrance@haulotte.com">haulottefrance@haulotte.com</a> <a href="http://www.haulotte.fr">www.haulotte.fr</a></p>		<p>HAULOTTE ITALIA VIA LOMBARDIA 15 20098 SAN GIULIANO MILANESE (MI) <b>TEL: +39 02 98 97 01</b> FAX: +39 02 9897 01 25 E-mail : <a href="mailto:haulotteitalia@haulotte.com">haulotteitalia@haulotte.com</a> <a href="http://www.haulotte.it">www.haulotte.it</a></p>		<p>HAULOTTE INDIA Unit No. 1205, 12th floor, Bhumiraj Costarica, Plot No. 1&amp;2, Sector 18, Palm Beach Road, Sanpada, Navi Mumbai- 400 705 Maharashtra, INDIA <b>Tel. : +91 22 66739531 to 35</b> E-mail : <a href="mailto:hlindia@haulotte.com">hlindia@haulotte.com</a> <a href="http://www.haulotte.in">www.haulotte.in</a></p>
	<p>HAULOTTE HUBARBEITSBÜHNEN GmbH Ehrenkirchener Strasse 2 D-79427 ESCHBACH <b>TEL : +49 (0) 7634 50 67 - 0</b> FAX : +49 (0) 7634 50 67 - 119 E-mail : <a href="mailto:adv-gmbh@haulotte.com">adv-gmbh@haulotte.com</a> <a href="http://www.haulotte.de">www.haulotte.de</a></p>		<p>HAULOTTE AUSTRALIA PTY Ltd 51 Port Link Drive DANDENONG - VIC - 3175 <b>TEL : 1 300 207 683</b> FAX : +61 (0)3 9792 1011 E-mail : <a href="mailto:sales@haulotte.com.au">sales@haulotte.com.au</a> <a href="http://www.haulotte.com.au">www.haulotte.com.au</a></p>		<p>HAULOTTE DO BRASIL Av. Alameda Caiapós, 589 CEP: 06460-110 - TAMBORE BARUERI - SAO PAULO - BRASIL <b>TEL : +55 11 4196 4300</b> FAX : +55 11 4196 4316 E-mail : <a href="mailto:haulottebrasil@haulotte.com">haulottebrasil@haulotte.com</a> <a href="http://www.haulotte.com.br">www.haulotte.com.br</a></p>
	<p>HAULOTTE IBERICA C/ARGENTINA Nº 13 - P.I. LA GARENA 28806 ALCALA DE HENARES MADRID <b>TEL : +34 902 886 455</b> TEL SAT : +34 902 886 444 FAX : +34 911 341 844 E-mail : <a href="mailto:iberica@haulotte.com">iberica@haulotte.com</a> <a href="http://www.haulotte.es">www.haulotte.es</a></p>		<p>HAULOTTE POLSKA Sp. Z.o.o. UL. GRANICZNA 22 05-090 RASZYN - JANKI <b>TEL : +48 22 720 08 80</b> FAX : +48 22 720 35 06 E-mail : <a href="mailto:haulottepolska@haulotte.com">haulottepolska@haulotte.com</a> <a href="http://www.haulotte.pl">www.haulotte.pl</a></p>		<p>HAULOTTE MÉXICO, S.A. de C.V. Calle 40 SUR ESQUINA 13 ESTE No. S/N Colonia CIVAC, JIUTEPEC, MORELOS CP 62578 México <b>TEL : +52 77 7321 7923</b> FAX : +52 77 7516 8234 E-mail : <a href="mailto:haulotte.mexico@haulotte.com">haulotte.mexico@haulotte.com</a> <a href="http://www.haulotte.com.mx">www.haulotte.com.mx</a></p>
	<p>HAULOTTE in JAPAN SBJ ShinOsaka BLDG 3F 4-6-5 Nishinakajima Yodogawa-ku, Osaka, JAPAN, Post Code: 532-0011 <b>TEL : +81 6 6795 9008</b> FAX : +81 6 6795 9009 <a href="http://www.haulotte.com">www.haulotte.com</a></p>		<p>HAULOTTE SINGAPORE Pte Ltd. No.26 CHANGI NORTH WAY, SINGAPORE 498812 <b>Parts and service Hotline:</b> <b>+65 6546 6150</b> FAX : +65 6536 3969 E-mail : <a href="mailto:haulotteasia@haulotte.com">haulotteasia@haulotte.com</a> <a href="http://www.haulotte.sg">www.haulotte.sg</a></p>		<p>HAULOTTE MIDDLE EAST FZE PO BOX 293881 Dubai Airport Free Zone DUBAI United Arab Emirates <b>TEL : +971 (0)4 299 77 35</b> FAX : +971 (0) 4 299 60 28 E-mail : <a href="mailto:haulottemiddle-east@haulotte.com">haulottemiddle-east@haulotte.com</a> <a href="http://www.haulotte.ae">www.haulotte.ae</a></p>
	<p>HAULOTTE SCANDINAVIA AB Taljegårdsgatan 12 431 53 Mölndal SWEDEN <b>TEL : +46 31 744 32 90</b> <b>FAX : +46 31 744 32 99</b> E-mail : <a href="mailto:info@se.haulotte.com">info@se.haulotte.com</a> <a href="mailto:spares@se.haulotte.com">spares@se.haulotte.com</a> <a href="http://www.haulotte.se">www.haulotte.se</a></p>		<p>HAULOTTE TRADING (SHANGHAI) Co. Ltd. Room 606A, Tower 3, Ronshine Sunkwan Center Lane 77, Sunkun Road MINHANG DISTRICT SHANGHAI 201105 CHINA <b>TEL : +86 21 6442 6607</b> FAX : +86 21 6442 6619 E-mail : <a href="mailto:haulotteshanghai@haulotte.com">haulotteshanghai@haulotte.com</a> <a href="http://www.haulotte.cn">www.haulotte.cn</a></p>		<p>HAULOTTE ARGENTINA Ruta Panamericana Km. 34,300 (Ramal A Escobar) 1615 Gran Bourg (Provincia de Buenos Aires) Argentina <b>TEL : +54 33 27 445991</b> FAX : +54 33 27 452191 E-mail : <a href="mailto:haulotteargentina@haulotte.com">haulotteargentina@haulotte.com</a> <a href="http://www.haulotte.com.ar">www.haulotte.com.ar</a></p>
	<p>HAULOTTE UK Ltd 1 Gravely Way Four Ashes Wolverhampton WV10 7GW ENGLAND <b>TEL : +44 (0)1216 199753</b> FAX : +44 (0)1952 292758 E-mail : <a href="mailto:salesuk@haulotte.com">salesuk@haulotte.com</a> <a href="http://www.haulotte.co.uk">www.haulotte.co.uk</a></p>		<p>HAULOTTE GROUP / BILJAX 125 TAYLOR PARKWAY ARCHBOLD, OH 43502 - USA <b>TEL : +1 419 445 8915</b> FAX : +1 419 445 0367 Toll free : +1 800 537 0540 E-mail : <a href="mailto:sales@us.haulotte.com">sales@us.haulotte.com</a> <a href="http://www.haulotte-usa.com">www.haulotte-usa.com</a></p>		<p>HAULOTTE NORTH AMERICA 3409 Chandler Creek Rd. VIRGINIA BEACH, VA 23453 - USA <b>TEL : +1 757 689 2146</b> FAX : +1 757 689 2175 Toll free : +1 800 537 0540 E-mail : <a href="mailto:sales@us.haulotte.com">sales@us.haulotte.com</a> <a href="http://www.haulotte-usa.com">www.haulotte-usa.com</a></p>
	<p>HAULOTTE NETHERLANDS BV Koopvaardijweg 26 4906 CV OOSTERHOUT - Nederland <b>TEL : +31 (0) 162 670 707</b> FAX : +31 (0) 162 670 710 E-mail <a href="mailto:info@haulotte.nl">info@haulotte.nl</a> <a href="http://www.haulotte.nl">www.haulotte.nl</a></p>				<p>HAULOTTE CHILE Panamerica Norte Altura Km 21,5 Colina (Cruce c/Lo Pinto) Santiago (RM) <b>TEL : + 562 2 3727630</b> E-mail : <a href="mailto:haulotte-chile@haulotte.com">haulotte-chile@haulotte.com</a> <a href="http://www.haulotte-chile.com">www.haulotte-chile.com</a></p>

## H - Other information

## 2.1 California warning

## For the US destined machines (ANSI and CSA standards)

<p><b>CALIFORNIA</b></p>  <p><b>Proposition 65 Warning</b></p> <p>Operating, servicing and maintaining a passenger vehicle or off-road vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle.</p> <p>For more information go to  <a href="http://www.P65Warnings.ca.gov/passenger-vehicle">www.P65Warnings.ca.gov/passenger-vehicle</a></p>
<p><b>CALIFORNIE</b></p>  <p><b>Avertissement de la Proposition 65</b></p> <p>L'exploitation, l'entretien et la maintenance d'un véhicule de tourisme ou d'un véhicule tout-terrain peuvent vous exposer à des produits chimiques, y compris les gaz d'échappement, le monoxyde de carbone, les phthalates et le plomb, identifiés par l'État de Californie comme pouvant causer le cancer et des malformations congénitales ou autres effets nocifs sur la reproduction. Pour limiter toute exposition: évitez de respirer les gaz d'échappement, ne laissez pas tourner le moteur au ralenti sauf si nécessaire, faites l'entretien du véhicule dans une zone bien aérée et portez des gants ou lavez vous fréquemment les mains lors de cette opération.</p> <p>Pour de plus amples informations, consulter  <a href="http://www.P65Warnings.ca.gov/passenger-vehicle">www.P65Warnings.ca.gov/passenger-vehicle</a></p>
<p><b>CALIFORNIA</b></p>  <p><b>Advertencia de la Proposición 65</b></p> <p>Operar, dar servicio y mantenimiento a un vehículo de pasajeros o vehículo todo terreno puede exponerle a químicos incluyendo gases del escape, monóxido de carbono, ftalatos y plomo, los cuales son conocidos por el Estado de California como causantes de cáncer y defectos de nacimiento u otros daños reproductivos. Para minimizar la exposición, evite respirar los gases del escape, no encienda el motor excepto si es necesario, dé servicio a su vehículo en un área bien ventilada y utilice guantes o lave sus manos frecuentemente cuando dé servicio a su vehículo.</p> <p>Para mayor información visite  <a href="http://www.P65Warnings.ca.gov/passenger-vehicle">www.P65Warnings.ca.gov/passenger-vehicle</a></p>

## H - Other information

## For the engine powered machines destined to the US market (Standards ANSI and CSA)

## CALIFORNIA



## Proposition 65 Warning

Breathing diesel engine exhaust exposes you to chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

- ✓ Always start and operate the engine in a well-ventilated area.
- ✓ If in an enclosed area, vent the exhaust to the outside.
- ✓ Do not modify or tamper with the exhaust system.
- ✓ Do not idle the engine except as necessary.

For more information go to  [www.P65Warnings.ca.gov/diesel](http://www.P65Warnings.ca.gov/diesel)

## CALIFORNIE



## Avertissement de la Proposition 65

Respirer les gaz d'échappement de moteurs diesel peut vous exposer à des agents chimiques identifiés par l'État de Californie comme pouvant causer le cancer et des malformations congénitales ou autres effets nocifs sur la reproduction.

- ✓ Toujours démarrer et faire tourner le moteur dans une zone bien aérée.
- ✓ Si la zone est mal ventilée, évacuer les gaz d'échappement à l'extérieur.
- ✓ Ne pas modifier ou altérer le système d'échappement.
- ✓ Ne laisser le moteur tourner au ralenti que si cela est nécessaire.

Pour de plus amples informations, consulter  [www.P65Warnings.ca.gov/diesel](http://www.P65Warnings.ca.gov/diesel)

## CALIFORNIA



## Advertencia de la Proposición 65

Respirar los gases del escape de motores a diésel le expone a químicos conocidos por el Estado de California como causantes de cáncer y defectos de nacimiento u otros daños reproductivos.

- ✓ Siempre encienda y opere el motor en un área bien ventilada.
- ✓ Si es en un área cerrada, ventile el orificio del escape hacia el exterior.
- ✓ Ne pas modifier ou altérer le système d'échappement.
- ✓ No modifique ni altere el sistema de escape.

Para mayor información visite  [www.P65Warnings.ca.gov/diesel](http://www.P65Warnings.ca.gov/diesel)

**1 Intervention register..... 3**



## 1 Intervention register

The intervention register keeps a record of maintenance and repair work carried out inside or outside the maintenance programme.

***N.B.:-IN THE CASE OF A HAULOTTE SERVICES® INTERVENTION, THE QUALIFIED TECHNICIAN MUST INDICATE THE HAULOTTE SERVICES® INTERVENTION NUMBER.***

Date	Type of intervention	Number of hours	Intervenor	Intervention number

## I - Records

---

Date	Type of intervention	Number of hours	Intervenor	Intervention number